



# User Guide

## Uplogix Control Center

**Version 4.7**

May 2014

[www.uplogix.com](http://www.uplogix.com)

Information in this document is subject to change without notice.

© 2014 Uplogix, Inc. All Rights Reserved. **Uplogix**, the **Uplogix logo**, and **SurgicalRollback** are trademarks of Uplogix, Inc. in the United States and other jurisdictions. All other marks referenced are those of their respective owners.

Uplogix, Inc.

7600-B North Capital of Texas Highway

Suite 220

Austin, Texas 78731

USA

# Contents

<b>About this guide</b> .....	<b>1</b>
Target audience .....	1
Typographical conventions .....	1
Safety summary .....	2
Uplogix Glossary .....	3
<b>Installation and configuration</b> .....	<b>4</b>
Site requirements .....	4
Unpacking and installation .....	5
Unpacking the shipping box .....	5
Installing the server in a rack .....	5
Connecting power .....	5
Connecting the Ethernet port .....	5
Connecting the management console port .....	5
Provisioning .....	6
Completing access and security setup .....	7
Port communication .....	8
<b>Working with the web interface</b> .....	<b>9</b>
Logging in .....	9
Navigating the web interface .....	10
Information bar .....	10
Navigation bar .....	11
Contextual left navigation .....	11
Work area .....	11
Entering information .....	11
Printing .....	12
<b>Managing the Uplogix Control Center</b> .....	<b>13</b>
Install Information .....	14
Basic Settings .....	14
Setting the login banner .....	14
Setting the Web session timeout .....	15
Setting the time zone .....	15
Configuring Mail Settings .....	16
Configuring SNMP Settings .....	16
Send Logs .....	17
<b>Managing the deployment</b> .....	<b>18</b>
About inventory groups and inheritance .....	19
Viewing the inventory .....	20
Organizing inventory groups .....	21
About the Unassigned group .....	22
Editing an inventory group .....	23
Adding an inventory group .....	24
Reassigning an inventory group .....	25
Deleting an inventory group .....	26
Adding a Local Manager .....	27
Reassigning a Local Manager .....	31
Removing a Local Manager .....	33
Working with the dashboard .....	34

Managing licenses .....	35
<b>Managing the equipment.....</b>	<b>37</b>
Managing from the Local Manager Detail page.....	38
The summary view .....	38
Configuring a Local Manager.....	39
Configuration Options .....	40
Creating default Local Manager settings .....	43
Creating default port settings.....	45
Managing from the port detail pages.....	47
Creating categories for managing devices .....	48
Creating port labels .....	48
Assigning privileges by label .....	49
Setting up task filters using labels.....	50
Viewing reports by label .....	51
Managing scheduled tasks.....	51
Setting up filters and scheduling tasks.....	52
Tasks that can be scheduled .....	57
Scheduling tasks on a single Local Manager.....	61
Scheduling software upgrades on Local Managers .....	62
Managing rules and monitors .....	65
Working with rules.....	65
Working with rule sets .....	68
Scheduling monitors .....	69
Applet Manual Out-of-Band modem connectivity via the "Dial" button.....	72
<b>Managing accounts and security .....</b>	<b>74</b>
Managing authentication .....	74
Setting authentication globally or within the inventory .....	75
Authentication, authorization, and accounting (AAA) settings .....	77
Setting requirements for strong passwords .....	80
Working with user and group accounts .....	82
Creating and editing user accounts .....	83
Creating and editing group accounts .....	85
Disabling user accounts.....	87
Deleting accounts.....	88
Managing privileges.....	88
Adding server privileges to accounts .....	89
Adding inventory privileges to accounts .....	90
Viewing and deleting user account privileges .....	92
Creating and customizing roles.....	92
Using RADIUS/TACACS to manage privileges.....	95
Example: Creating a superuser.....	98
Example: Limiting a user's access to one port on one system.....	100
Importing user, group, and privilege files .....	104
<b>Logs, reports, and diagnostics.....</b>	<b>106</b>
Setting up email, auditing, and subscriptions .....	107
Configuring an account to receive email from the Uplogix Control Center .....	107
Configuring the account to audit others and to be audited .....	108
Subscribing to alerts .....	108
Subscribing to reports.....	109
Specifying when and how often the subscriber receives alerts .....	110
Viewing alarms and events.....	112
Viewing reports .....	113
Inventory group reports .....	113
Local Manager reports.....	115
Reports by label .....	115
Report files.....	116
Report assignments .....	116

Viewing archive status information for a Local Manager .....	118
Viewing Local Manager Syslog Setting.....	119
Viewing session logs and auditing users .....	121
Local Manager session logs .....	121
Auditing user activities on the Uplogix Control Center .....	121
Sending logs to Technical Support .....	124
Replacing a Local Manager .....	125
Shutting down the Control Center.....	126
<b>Advanced Control Center Functionality .....</b>	<b>127</b>
SOCKS Proxy Support.....	127
Arguments .....	127
Usage .....	128
Serial Port Forwarding .....	129
About Connections.....	129
Usage .....	129
SSH Port Forwarding .....	132
Usage .....	132
Notes .....	135
Serial Port Mirroring .....	135
About Connections.....	135
Usage .....	135
SMS Outband (PPP on) .....	137
CLI Applet Failover to Managed Device.....	139
Device Properties .....	139
Usage .....	142
CLI Applet SSH Key Authentication .....	142
Arguments .....	142
Usage .....	146
<b>Support .....</b>	<b>147</b>
Getting technical support .....	147
Requesting an account .....	147
Requesting support.....	147
Providing comments about this guide .....	147
<b>Index .....</b>	<b>149</b>

## About this guide

This guide describes how to install and work with the Uplogix Control Center.



For best results, the Local Manager and the Uplogix Control Center that manages it must use the same version of software.

### Examples:

An Uplogix Control Center running version 4.6 or earlier, cannot manage Local Managers that have been upgraded to version 4.7. An Uplogix Control Center running version 4.7 can provide limited management to Local Managers that are using version 4.6 or earlier.

An Uplogix Control Center running any version 4.7.x software can manage Local Managers running any 4.7.x software

Information in this document is subject to change without notice. Please visit [support.uplogix.com](http://support.uplogix.com) for the latest updates to Uplogix product documents.

## Target audience

This guide is intended for trained, qualified network support technicians responsible for installing and using the Uplogix Control Center.

## Typographical conventions

The following conventions are used in this guide.

Sample text from the Uplogix LMS command line interface is presented in **this font**. Text that you enter is presented in **this font**. For example:

```
[admin@A505100303]# show who  
admin ssh Mar 22 13:38 (192.0.2.101)
```

Keyboard characters are enclosed in angle brackets. For example, press <Enter>.

Navigation paths to command equivalents on the Uplogix Control Center are shown in **this font**. For example:

### **Administration > Server Settings**

Menu items and buttons in the Uplogix Control Center interface are indicated in **this font**. For example:

Click **Save**.

References to other Uplogix documentation are presented in *this font*. For example:

For a detailed discussion of rules and monitors, refer to the *Guide to Rules and Monitors*.

## Safety summary

Following all cautions and warnings will ensure your own safety and protect the Local Manager from potential damage or loss of data.



**Caution:** Follow all federal, state, and local regulations when disposing of this product.

Read and understand the following instructions before using the Uplogix Control Center:

- Use only electrical extension cords with a current rating equal to or greater than the Uplogix Control Center's current rating.
- Always disconnect the Uplogix Control Center from power before cleaning and servicing.
- Do not spray liquids directly onto the Uplogix Control Center when cleaning. Always apply the liquid first to a static free cloth.
- Do not immerse the Uplogix Control Center in any liquid or place any liquids on it.
- Connect the Uplogix Control Center to a grounded outlet.
- Only connect the Uplogix Control Center to surge-protected power outlets.
- Keep ventilation openings free of any obstructions.

SAVE THESE INSTRUCTIONS.

## Uplogix Glossary

Term	Definition
Archive	Local Managers send bulk data, such as: session logs, device files, change logs, and all other non-urgent statistical data to the UCC every 60 minutes (default) using this encrypted HTTPS data communication protocol on port 8443.
Heartbeat	Local Managers communicate with the UCC every 30 seconds (default) using this secure HTTPS communication method on TCP port 8443. Device state, alarms and configuration parameters are sent during a heartbeat.
Local Manager (LM)	A physical device or virtual machine directly connected to managed network devices and servers and that runs the Uplogix Local Management Software (LMS).
Pulse	Used by the Local Manager to determine network connectivity by sending 15 bytes of data to an echo server on TCP port 7 (echo) every 30 seconds. Up to three may be defined – all must fail for the Local Manager to declare the in-band network is down.
Uplogix 500	The Uplogix 500 Local Manager device is a fixed 5-port model that delivers advanced remote management capabilities for branch offices and remote locations on a robust platform. An additional (6th) port is available for power management connecting to a switched PDU (ServerTech, APC, etc.).
Uplogix 5000	The Uplogix 5000 Local Manager device is a modular chassis model with higher port density options that delivers advanced remote management capabilities for larger office and data center locations. The 5000 device has a power management port used to connect and manage switched PDUs (ServerTech, APC, etc.).
Uplogix Control Center (UCC)	Centralized point of control for all Local Managers and managed devices deployed throughout the distributed IT environment. The web-based graphical user interface (GUI) enables IT administrators to easily manage, configure, and control all network devices and servers connected to Local Managers. And access to real time data from these devices is supplied. The UCC is also the integration point for all remotely collected data and diagnostics for upstream delivery to NSM tools such as Solarwinds, HP OpenView, CA Spectrum, Tivoli, etc.

# Installation and configuration

This chapter covers:

- [Site requirements](#)—power, temperature, air flow, and related safety information
- [Unpacking and installation](#)—physical connections
- [Provisioning the server](#)—configuration using the setup script
- [Completing access and security setup](#)—logging in to the server via SSH connection; changing the default password
- [Port communication](#)—inbound ports

## Site requirements

Ensure that the power source:

- Provides the appropriate line voltage and frequency - 100 to 240 VAC, 50/60 Hz
- Provides overload protection
- Is connected to earth ground



**Warning:** The power source must meet all these requirements to ensure safe and reliable operation.

Ensure that the installation site meets these requirements:

- Ambient temperature does not exceed 95° F (35° C)
- The site provides at least 3 inches (8 cm) clearance beyond the Control Center's ventilation openings



**Caution:** The unit will overheat if the site does not meet these requirements.

## Unpacking and installation

Before you begin the tasks in this section, verify your installation site meets all site requirements.

### Unpacking the shipping box

Verify that you have received the following items:

- Uplogix Control Center
- Power cords
- Rack mount kit

### Installing the server in a rack

The Uplogix Control Center is designed for installation in a 19-inch rack. Follow the instructions supplied with the mounting brackets.



**Caution:** Do not stack the chassis on other equipment. If the chassis falls, it can cause injury and equipment damage.

### Connecting power

To power up the server, complete the following steps:

1. Connect the server to a suitable power source. The Uplogix Control Center uses dual power supplies for redundancy.
2. Connect both of the included power cords to the power receptacles located at the right rear of the server and to A/C power sources.



**Caution:** The plug-socket combination serves as the main disconnecting device and must be accessible at all times.

3. Press the power button on the front left to switch the system on.

### Connecting the Ethernet port

Connect the lowest number Ethernet interface on the Uplogix Control Center to your LAN.

### Connecting the management console port

To manage the server using the TTY console, connect a serial cable to an Uplogix Local Manager.

The default speed setting is 9600, 8, N, 1.

## Provisioning

Configure the Uplogix Control Center using one of these methods:

- Connect a standard VGA monitor, a keyboard and a mouse
- Configure using the console port by connecting your computer directly to the server using the DB-9 connector on the server's rear panel. Supported terminal clients include:
  - Windows HyperTerminal
  - ZTerm (Macintosh OS X)
  - Minicom (Unix/Linux)



Console default communication settings are 9600 baud, 8 data bits, 1 stop bit, no parity, and no flow control. Set your terminal emulator to use ANSI encoding for best results.

Log into the Uplogix Control Center using the `emsadmin` user account. The default password is password. To run the initial setup, use the `netSetup.sh` script located in `/uplogix/embassy/`.

```
ajones ~ $ ssh emsadmin@192.0.2.11
emsadmin@192.0.2.11's password:
[emsadmin@ems13 ~]$ /uplogix/embassy/netSetup.sh
Run Setup? (y/n) [y]
Install multi application servers? (y/n) [n]
Interface eth0 IP Address: 192.0.2.11
Interface eth0 Gateway: 198.0.2.1
Interface eth0 Netmask: 255.255.255.0
Configure eth1? (y/n) [n]
Disable eth1? (y/n) [n]
Configure hostname? (y/n) [n] y
Hostname: XYZCo_TX
Configure DNS? (y/n) [n] y
Primary DNS Server IP: 198.51.100.1
Secondary DNS Server IP: 198.51.100.2
Tertiary DNS Server IP:
Configure NTP? (y/n) [n] y
NTP Server: 198.51.100.112
Change emsadmin password? (y/n) [n]
Commit? (y/n) y
**** Editing /etc/sysconfig/network-scripts/ifcfg-eth0 ****
Gateway '198.51.100.1'
Netmask '255.255.255.0'
IP Address '192.0.2.11'
(output removed)
```

After committing your changes, the server displays messages as it updates the affected files.

Log out when you are returned to the command line prompt.

```
[emsadmin@ems13 ~]$ logout
```

If the server's hostname was set or changed, the change does not appear in the command prompt until your next session.

## Completing access and security setup

The Uplogix Control Center uses Secure Shell (SSH) v2 software to provide secure remote access. Your remote client application must also support SSH v2. Use the SSH client to initiate a secure remote connection to the server.



The root account is not allowed to log in via SSH. Use the `emsadmin` account and supplied passwords.

Supported Secure Shell clients include:

- PuTTY
- SSH® Tectia™
- VanDyke® SecureCRT®
- SSHTerm for Windows
- iTerm for Macintosh OS X
- UNIX's built-in `ssh` command

For example, from a UNIX command line, type:

```
ssh emsadmin@192.0.2.0
```



The first time your SSH client connects to an SSH host following installation or upgrade, you may see an SSH key fingerprint message. This is normal. The client usually caches the key for subsequent use and warns if the host has changed, often indicating network eavesdropping.

To ensure security, change the `emsadmin` password after logging in for the first time. Use the UNIX `passwd` command:

```
[emsadmin@station]# passwd
Enter Old Password: *****
New Password [*****]: *****
Confirm Password: *****
```

The `emsadmin` user has super-user privileges with the `sudo` command. Review your security policy to determine if another user account should be created, though the account is limited to basic IP addressing of the server.

## Port communication

The Control Center is designed to receive and respond to requests from Local Managers. The following inbound ports are used during normal operation.

Port	Usage Description
TCP 443	HTTP, provides access to the Control Center GUI
TCP 8443	Heartbeat and Archive, used for communication between Control Center and Local Managers
TCP 7	Echo, used by the Pulse feature
TCP 22	SSH, used to connect to the Control Center CLI
TCP 80	HTTP, provides access to the Control Center GUI, redirects to 443
UDP 123	NTP, provides NTP servers to managed devices



TCP 443 and TCP 8443 are required for normal Uplogix Control Center and Local Manager interactions.

## Working with the web interface

A web interface is provided with the Uplogix Control Center. Minimum requirements for the interface are Internet Explorer 7.0 and Firefox 3.6, with 128-bit encryption and the Java applet 1.5 plug-in. Recommended browsers include the latest stable release of Internet Explorer, Firefox, or Google Chrome.

This chapter covers basic information about the web interface:

- [Logging in](#)—start a session via a web browser
- [Navigating the web interface](#)—screen layout and navigational cues
- [Entering information](#)—things to know about typing in text fields
- [Printing](#)—capture the current view

### Logging in

Direct a browser to **http://ipaddress**, where **ipaddress** is the address of the server. Requests made to port 80 (http) of the Uplogix Control Center are redirected to port 443 (https).



Your browser is likely to present a strong warning stating that the site's security certificate was issued for a different IP address. This is normal. The message will disappear if the presented certificate is accepted by the device or once a valid certificate is installed.

The browser displays the login screen.

A screenshot of the Uplogix Control Center login screen. The background is dark gray. At the top center is the Uplogix logo, a white square with a stylized 'U' inside. Below the logo is the text 'Uplogix Control Center' in white. Underneath are two white input fields: 'User Name:' and 'Password:'. To the right of the password field is a blue 'Login' button. At the bottom left, there is small white text: 'Copyright 2013 Uplogix Inc. All Rights Reserved. Uplogix and its respective logos are trademarks of Uplogix, Inc. in the United States and other jurisdictions. This product is protected by U.S. Patent 7,512,677 and other patents pending. The programs included herein are subject to a restricted use license and can only be used in conjunction with this application.'

Log in using your username and password. Both are case-sensitive. If setting up the Uplogix Control Center for the first time, log in using the default username and password as follows:

Username: **administrator**  
Password: **password**



For security purposes, it is recommended that you immediately change the administrator's password, create a user with administrative authority and disable the account. For information on setting passwords and disabling accounts, see [Creating and editing user accounts](#).

Once successfully logged in, the Alarms page appears if there are active alarms. Otherwise, the Dashboard page is displayed.




Last Occurrence	Duration	Appliance	Device	Context	Message
07/12/2013 11:53	67d 22h 31m	Pasadena	port4/1 (native)		TCP driver connection
07/12/2013 11:53	43d 14h 32m	Pasadena			NTP server invalid. (2
07/12/2013 11:53	43d 14h 32m	Pasadena			System and manager

3 items found, displaying all items.

## Navigating the web interface

The Uplogix web interface presents four areas:

- The [information bar](#) shown at the top of the screen
- The [navigation bar](#) which displays the six main tabs
- The [contextual left navigation](#) which displays additional menu items
- The [work area](#) showing information or fields for input entry

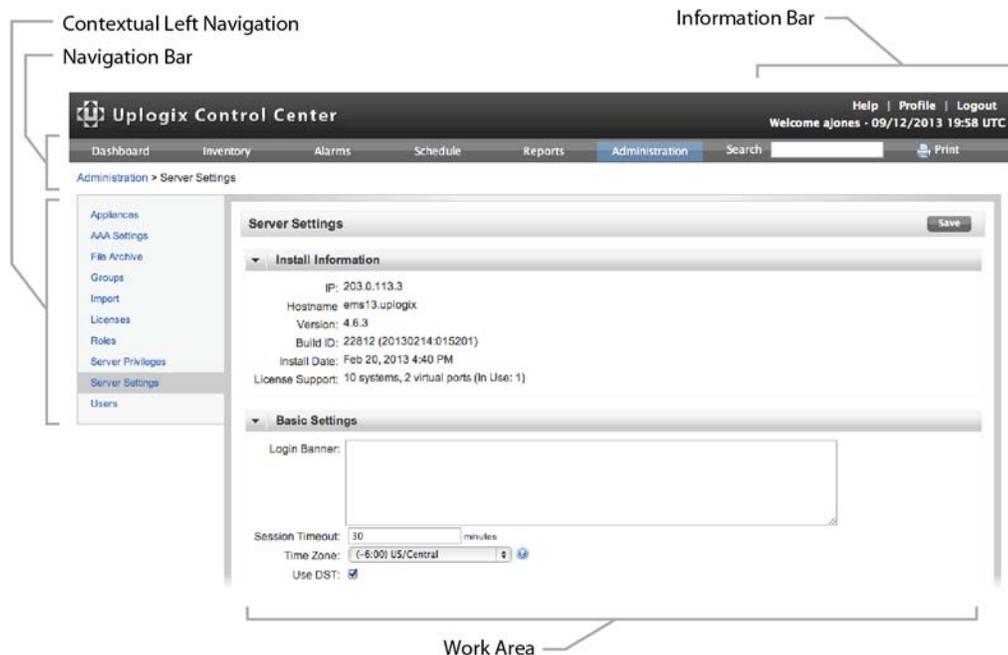

### Information bar

The information bar shown at the top of the screen displays the time and date as well as links to help, editing your user profile, and logging out of the UCC.

## Navigation bar

The navigation bar displays six tabs providing access to a set of related tasks and information. The active area is indicated by the highlighted tab.

- [Dashboard](#)—Displays brief summary information, alarms, and events for user selected Local Managers.
- [Inventory](#)—Displays the organization of your Uplogix deployment, including inventory groups and individual Local Managers.
- [Alarms](#)—Displays a summary of active alarms.
- [Schedule](#)—Use to define actions not triggered by rules.
- [Reports](#)—Provides access to create report assignments, view report files, and sort reports by label.
- [Administration](#)—Provides access to auditing, user administration, and configuration functions.

## Contextual left navigation

The contextual left navigation displays additional menu items specific to the section of the user interface.



The controls available to you are based on the privileges assigned to your account. Unavailable items appear in gray. Mouse over a gray item to show a tooltip of the missing privilege.

## Breadcrumb navigation

Breadcrumb navigation is provided at the top of the work area throughout the Uplogix Control Center. For example, when viewing the Detail page for a Local Manager, the following navigation displays:

**Inventory > XYZco\_TX > Region 1 > A505100303**

Each element is a link to another page, allowing you to move quickly between pages.

Some parts of the user interface are displayed in different ways depending on the browser you use.

## Work area

The work area displays information and provides input fields to update or reconfigure the Uplogix Control Center or Local Manager.

## Entering information


Some features require you to enter text - for example, when creating a user account you must enter a user name and may choose to enter a description.

Use only printing characters to complete text fields. Spaces may be used in descriptions, but not in naming accounts, roles, or other information that users may work with from an individual Local Manager's command line.

User names and passwords are case-sensitive. If you create a user account named ajones, the person will not be able to log in as Ajones. Some other information is case-sensitive as well.

## Printing

The Uplogix web interface provides a Print icon in the information bar.

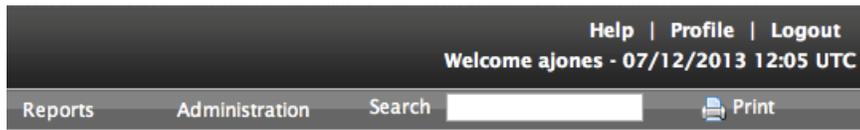

Use Print to print the current contents of the work area. If a suitable PDF creator printer driver is installed, use the Print icon to save the current view as a PDF file.

# Managing the Uplogix Control Center

This chapter describes the **Administration > Server Settings** selections.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration (which is selected). Below the navigation bar, the breadcrumb path is Administration > Server Settings. On the left side, there is a sidebar menu with the following items: Appliances, AAA Settings, File Archive, Groups, Import, Licenses, Roles, Server Privileges, Server Settings (which is highlighted), and Users. The main content area is titled 'Server Settings' and contains several expandable sections: 'Install Information' (expanded), 'Basic Settings', 'Mail Settings', 'SNMP Settings', and 'Send Logs'. The 'Install Information' section displays the following details: IP: 203.0.113.6, Hostname: ems13.uplogix, Version: 4.7, Build ID: 24370 (20131113:040416), Install Date: Nov 25, 2013 11:05 PM, and License Support: 10 systems, 0 virtual ports (In Use: 0).

This chapter covers:

- [Install information](#)—obtain the IP address, hostname, version, and build
- [Setting the login banner](#)—add a custom message on the login screen
- [Setting the Web session timeout](#)—change the default Web session timeout
- [Setting the time zone](#)—make adjustment for daylight saving time
- [Configuring mail settings](#)—specify a mail server and originating address for outgoing messages
- [Configuring SNMP settings](#)—specify an SNMP server

## Install Information

### Administration > Server settings > Install Information

The install information lists the IP address, hostname, version of software currently installed, software build, date of software installation, and the number of Local Manager licenses on the server.

## Basic Settings

### Administration > Server settings > Basic Settings

Use Basic Settings to set the:

- [Login Banner](#)—specify text to be displayed in the Uplogix Control Center login screen
- [Session Timeout](#)—set the Uplogix Control Center inactivity timeout
- [Time Zone](#)—set the system time zone

## Setting the login banner

Specify the text to display in the Uplogix Control Center login screen. Line breaks entered in this text box are ignored.



Use only printing characters in the banner and other text fields. Spaces are considered printing characters.

Uplogix Control Center Help | Profile | Logout  
Welcome administrator - 12/31/2013 16:15 UTC

Dashboard Inventory Alarms Schedule Reports Administration Search Print

Administration > Server Settings

Appliances  
AAA Settings  
File Archive  
Groups  
Import  
Licenses  
Roles  
Server Privileges  
Server Settings  
Users

**Server Settings** Save

**Install Information**


IP: 203.0.113.6  
Hostname ems13.uplogix  
Version: 4.7  
Build ID: 24370 (20131113:040416)  
Install Date: Nov 25, 2013 11:05 PM  
License Support: 10 systems, 0 virtual ports (In Use: 0)

**Basic Settings**

Login Banner: Unit 115A  
Southwest Region  
Unauthorized Access Prohibited

Session Timeout: 30 minutes  
Time Zone: (-6:00) US/Central  
Use DST:

Click **Save** and the new banner displays on the login screen.

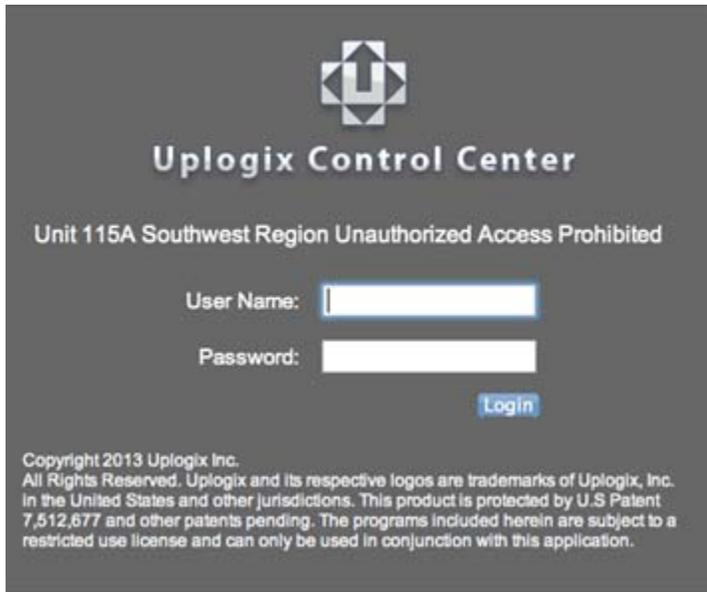

### Setting the Web session timeout

By default, Uplogix Control Center sessions time out after 30 minutes of inactivity. If this does not meet your organization's needs, change the value for Session timeout. You can set the timeout to any integer value from 5 to 1440 minutes (24 hours).

Once finished making changes, click **Save**.

The session timeout for Local Managers is set separately. To set the Local Manager timeout across the inventory or within an inventory group, see [Creating default Local Manager settings](#). To set the timeout on individual Local Managers, see [Configuring a Local Manager](#).



If your session times out, you will be logged out but any operation in progress will not be affected. When you log in again, you are returned to the same page.

### Setting the time zone

Correct UCC time is critical and should be provided by an NTP server. Set or change the IP address of the NTP server when running the setup script. See [Provisioning](#).

### Daylight Saving Time adjustment

Although the Uplogix Control Center uses UTC in timestamps for alerts and events, it can be set to show local time in generated reports. Select **Use DST** if you desire to adjust Daylight Saving time in reporting.

Once finished making changes, click **Save**.

## Configuring Mail Settings

### Administration > Server settings > Mail Settings

The Uplogix Control Center can be configured to send alerts and reports by email. A mail server should be configured with a valid IP address and authentication settings. For more information, see [Setting up email, auditing, and subscriptions](#).

The screenshot shows the 'Mail Settings' configuration page. It includes the following fields and values:

Mail Server:	mail.xyzco.com
Mail Server Port:	587
Mail User:	alerts@uplogix.com
Mail Password:	*****
Confirm Mail Password:	*****
From Address:	alerts@uplogix.com

Below the fields, there is a checkbox for 'Prefer SSL for sending Email:' which is unchecked. At the bottom, there is a blue button labeled 'Send a Test Email' with a right-pointing arrow.

To verify the email settings are configured correctly, click **Send a Test Email** to open the test email form. At a minimum, provide a valid email address where the test message should be received. Click **Send Test Email** to send the message.

The screenshot shows the 'Send a Test Email' form. It includes the following fields and values:

Recipient:	root@xyzco.com
Subject:	Test
Message:	Test email

At the bottom, there is a dark grey button labeled 'Send Test Email' and a green message that says 'Email successfully sent'.

Once finished making changes, click **Save**.

## Configuring SNMP Settings

### Administration > Server settings > SNMP Settings

During normal operation, the Uplogix Control Center receives Alarm and Event information from managed Local Managers. If a third-party SNMP management tool has been set up to listen for SNMP traps, the Uplogix Control Center can be configured to forward alarms and events it receives as SNMP traps. These SNMP traps will have the source IP address of the Local Manager the alarm or event came from. If a Management IP address is specified for a managed device, the source address for the trap will reflect it when an alarm is generated for the managed device.

The screenshot shows the 'SNMP Settings' configuration page. It includes the following fields and values:

Use SNMP:	<input checked="" type="checkbox"/>
Primary Host Name:	203.0.113.250
Primary Port:	162
Primary Read Community:	public
Secondary Host Name:	203.0.113.252
Secondary Port:	162
Secondary Read Community:	public

Once finished making changes, click **Save**.

Traps will be sent for alarms and events for all Local Manager resources (system, modem, power controller and all serial ports) by default. You can indicate which resources should generate traps in the Trap section of the SNMP configuration page for an inventory group or for a Local Manager.

## Send Logs

### **Administration > Server settings > Send Logs**

Users can send logs from the Uplogix Control Center by entering a valid email address and clicking the Send Logs button. These logs may be helpful to the Uplogix support team if they need to troubleshoot an issue with the Uplogix Control Center. To send logs to the Uplogix support team, enter the email address [support@uplogix.com](mailto:support@uplogix.com).

# Managing the deployment

The Uplogix Control Center provides a central location for the configuration and monitoring of deployed Local Managers. This chapter describes the organization scheme, CLI to GUI relationships, and Local Manager specific data display.

The groups mentioned in this chapter are inventory groups, not user groups.



For best results, Local Managers and the Uplogix Control Center that manages them must use the same version of software.

## Examples:

An Uplogix Control Center running version 4.6 or earlier, cannot manage Local Managers that have been upgraded to version 4.7. An Uplogix Control Center running version 4.7 can provide limited management to Local Managers that are using version 4.6 or earlier.

An Uplogix Control Center running any version 4.7.x software can manage Local Managers running any 4.7.x software.

This chapter covers:

- [Inventory groups and inheritance](#)—how changes propagate through the inventory
- [Viewing the inventory](#)—displaying only the information you need
- [Organizing inventory groups](#)—working with groups and moving Local Managers among them
- [Working with the dashboard](#)—keeping track of key information by groups of Local Managers
- [Managing licenses](#)—applying licenses you purchase



For most of the tasks described in this chapter, a role on the Uplogix Control Center that includes the config inventory privilege is required, such as the `admin` role. For more information, see [Adding server privileges to accounts](#) and [Adding inventory privileges to accounts](#).

## About inventory groups and inheritance

Use the Uplogix Control Center to manage Local Managers by group. Defining and applying user roles, rules, and tasks across large numbers of Local Managers in physically separate locations, reduces the need to repeat the same operations on each unit and the risk of introducing the variations that can occur during manual operations.

By grouping Local Managers, all members of any inventory group can be treated the same while each inventory group can be treated differently. Many of the tasks that the Uplogix Control Center manages, such as assigning user roles and defining rules, can be performed at the root level or within any child group. All members of the inventory group and its child groups automatically inherit the newly created information.


By default, the server provides the **Your Company** root group, which can be renamed, and the **Unassigned Group**, which is not editable. Neither of these can be deleted.

New inventory groups can be created within the root group. These child groups may also be nested. Groups may be based on any criteria that help organize your deployment. Local Managers can be reassigned from one group to another at any time.

In this example, the root group has been renamed **XYZCo\_TX** and contains three inventory groups: Austin, Dallas, and Houston. The Austin inventory group contains two child groups of its own: bldg1 and bldg2.

Local Managers have been added to each of the inventory groups (Austin, Dallas, and Houston). In the case of the Austin inventory group, each Local Manager has been added to one of the two child groups within Austin. One Local Manager, xyzsa01, has been assigned directly to the root group.

The Unassigned group contains a Local Manager that has been configured to use this Uplogix Control Center, but has not yet been assigned to an inventory group.

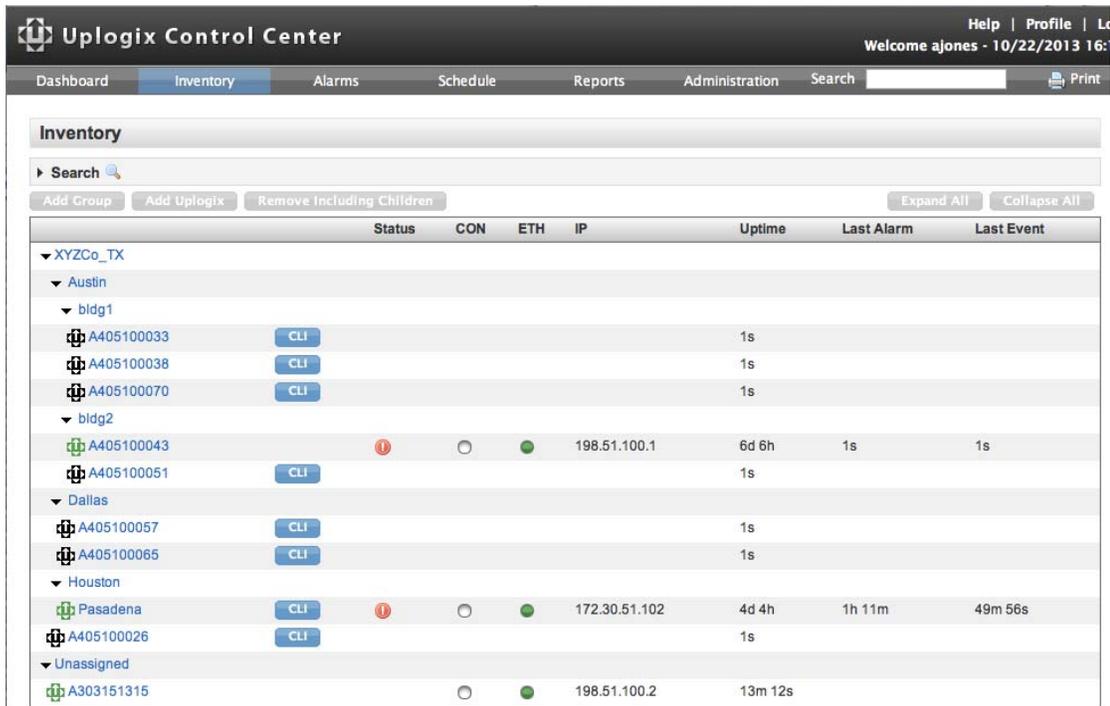

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The 'Inventory' section is active, displaying a search bar and buttons for 'Add Group', 'Add Uplogix', 'Remove Including Children', 'Expand All', and 'Collapse All'. Below this is a table with columns: Status, CON, ETH, IP, Uptime, Last Alarm, and Last Event. The table is organized into a tree structure under the root group 'XYZCo\_TX'. The tree includes 'Austin', 'Dallas', and 'Houston' as main groups. 'Austin' has two sub-groups: 'bldg1' and 'bldg2'. 'bldg1' contains three Local Managers (A405100033, A405100038, A405100070). 'bldg2' contains two Local Managers (A405100043, A405100051). 'Dallas' contains two Local Managers (A405100057, A405100065). 'Houston' contains two Local Managers (Pasadena, A405100026). The 'Unassigned' group contains one Local Manager (A303151315).

Status	CON	ETH	IP	Uptime	Last Alarm	Last Event
▼ XYZCo_TX						
▼ Austin						
▼ bldg1						
				1s		
				1s		
				1s		
▼ bldg2						
			198.51.100.1	6d 6h	1s	1s
				1s		
▼ Dallas						
				1s		
				1s		
▼ Houston						
			172.30.51.102	4d 4h	1h 11m	49m 56s
				1s		
▼ Unassigned						
			198.51.100.2	13m 12s		

A collection of default port settings for Cisco model 3925 within the Austin inventory group of XYZCo\_TX can be created. All Local Managers within the Austin inventory group and all child groups inherit these default port settings.

If a Local Manager is added to the bldg2 group, it inherits the Cisco 3925 default port settings from the Austin group. Similarly, if a child group is added to the bldg2 group, it also inherits the Cisco 3925 default port settings from its parent group.

If a child group, such as bldg1, already has Cisco 3925 default port settings before the Cisco 3925 settings are created in the Austin group, the child group retains its original Cisco 3925 default port settings by default. You can choose to overwrite existing settings in child groups.

Local Managers within the Unassigned group do not inherit any settings; they are outside the inventory's root group.



If default settings are deleted from a group, child groups retain the settings.

## Viewing the inventory

### Inventory

To view an expandable tree view of inventory, select the Inventory tab.

	Status	CON	ETH	IP	Uptime
▶ Your Company					
▶ Unassigned					

- The current organization of your deployment is shown, including inventory groups and individual Local Managers. Initially, the Inventory list shows only the two default groups, Your Company and Unassigned.
- The inventory is sorted alphabetically.
- To search for a specific Local Manager, enter its hostname in the search box at the top of the inventory pane.
- To view the contents of an inventory group, click the expand icon ▶ to the left of the inventory group name.
- To view the group details, click the group name and the group detail page displays.
  - All functions concerning inventory groups can be accessed from the group detail page
  - A gray icon indicates the group is empty.

The icons beside each entry denote status or other information.

Icon	Description
	Inventory group is collapsed. <ul style="list-style-type: none"> <li>Black arrow indicates the group contains at least one Local Manager or child group.</li> <li>Gray indicates the group is empty.</li> </ul>
	Inventory group is expanded, listing the Local Managers and child groups.
	The Local Manager has communicated within the past four heartbeat intervals. The default interval is 30 seconds.
	No communication has been received from this Local Manager within the past four heartbeat intervals.
	This unit is communicating in minimal heartbeat mode. Commonly indicating local managers using an older version of LM software.
	This unit is communicating over the Outband (out-of-band) connection.
	The unit has been manually added (pre-provisioned) to the inventory, but has not yet contacted the server.

## Organizing inventory groups

Use the Inventory tab to organize and manage Local Managers by inventory group.




- Most management operations occur at the group level.
- To view the group details, click the group name and the group detail page displays.
  - All functions concerning inventory groups can be accessed from the group detail page
  - A gray icon indicates the group is empty.
- Inventory groups are always visible regardless of your privilege settings.

This section covers:

- [About the Unassigned group](#)
- [Editing an inventory group](#)
- [Adding an inventory group](#)
- [Reassigning an inventory group](#)
- [Deleting an inventory group](#)
- [Adding a Local Manager](#)
- [Reassigning a Local Manager](#)
- [Deleting a Local Manager](#)

## About the Unassigned group

Executing the `config system management` command on a Local Manager places it under management by an Uplogix Control Center. The Local Manager is then placed in the Unassigned group on the Control Center, unless you have already created a placeholder for it in another group. See [Adding a Local Manager](#).

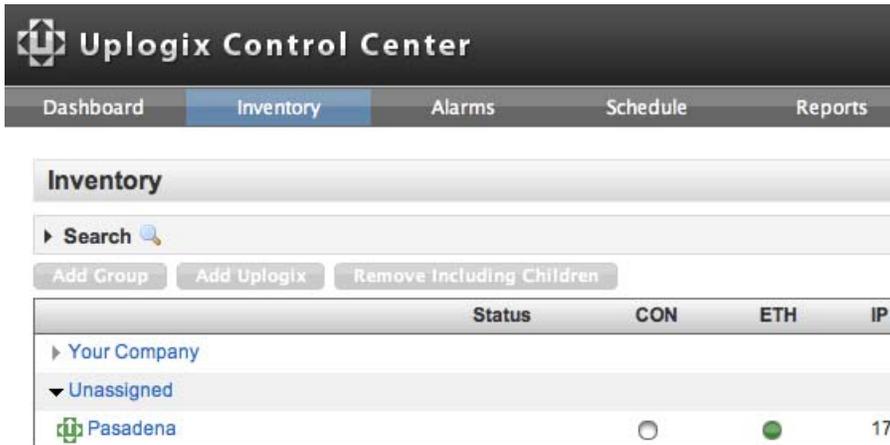

Unlike other inventory groups, the Unassigned group does not provide management capabilities. To manage a Local Manager, it must be reassigned from Unassigned to another inventory group. See [Reassigning a Local Manager](#).

The Unassigned group cannot be deleted or edited and Local Managers cannot be reassigned to it.

To place a Local Manager in the Unassigned group, delete it from another inventory group. At the next heartbeat, the Local Manager appears in the Unassigned group.

## Editing an inventory group

### Inventory > Group

The name and description of the root group and any inventory group you add can be edited. Changes to the name or description affect only the selected inventory group. Child groups or Local Managers within the inventory group are not affected.

To edit an inventory group name:

1. Click **Edit** on the Group Detail page.



2. Edit the Name or Description as needed.
  - Name is required.
  - Description is optional.



3. Click **Save**.



Use only printing characters when completing text fields. Spaces are considered printing characters.

## Adding an inventory group

Inventory > Group



Groups cannot be added to the Unassigned group.

To add an inventory group:

1. Navigate to the group in which a new child group is to be added.
2. Click **Add** in the Child Group area, the Create Group page displays.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory (selected), Alarms, Schedule, and Reports. The breadcrumb trail is 'Inventory > XYZCo\_TX > Detail'. The main content area is titled 'Inventory Group: XYZCo\_TX' with the subtitle 'Example Customer' and an 'Edit' button. A left sidebar contains a 'Summary' section and a 'Configuration' section with sub-items: Applet, Archive, Authentication, Banners, Default Port Settings, DNS, and Email. The main content area has a section titled 'Inventory Group: XYZCo\_TX' with a dropdown for 'Inventory Group Children'. Below this, there is a 'Child Group' dropdown menu and the text 'There are no child groups.' An 'Add' button is highlighted with an orange box.

3. Enter a Name and optionally, a Description of the new inventory group.
  - Name is required and must be unique within the entire inventory hierarchy.
  - Description is optional.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory (selected), Alarms, Schedule, Reports, and Administration. The breadcrumb trail is 'Inventory > XYZCo\_TX > Create Group'. The main content area is titled 'Inventory Group: XYZCo\_TX' with the subtitle 'This is the root group. the name may be edited to reflect your company name. Note: This group can not be deleted' and an 'Edit' button. A left sidebar contains a 'Summary' section and a 'Configuration' section with sub-items: Reports. The main content area has a section titled 'Create Inventory Group' with a 'Save' button. Below this, there are two input fields: 'Name: Austin' and 'Description: Engineering Group'.



An inventory group name cannot be duplicated at a different level or within a different parent group.



Use only printing characters when completing text fields. Spaces are considered printing characters.

4. Click **Save**. The inventory list and detail is automatically refreshed. If the parent group was previously empty, its expand/collapse arrow changes from gray to black in the inventory tree view.

## Reassigning an inventory group


### Inventory > Group

All groups, with the exception of the root and Unassigned groups, can be moved to another parent. Reassignment includes all of the child groups and Local Managers assigned to the inventory group.

To reassign an inventory group:

1. Click **Reassign** on the Group Detail page, the Reassign page displays.

- The **New Parent** list displays any available inventory groups. Only the current parent and Unassigned group are not shown. Select the new parent from the menu.

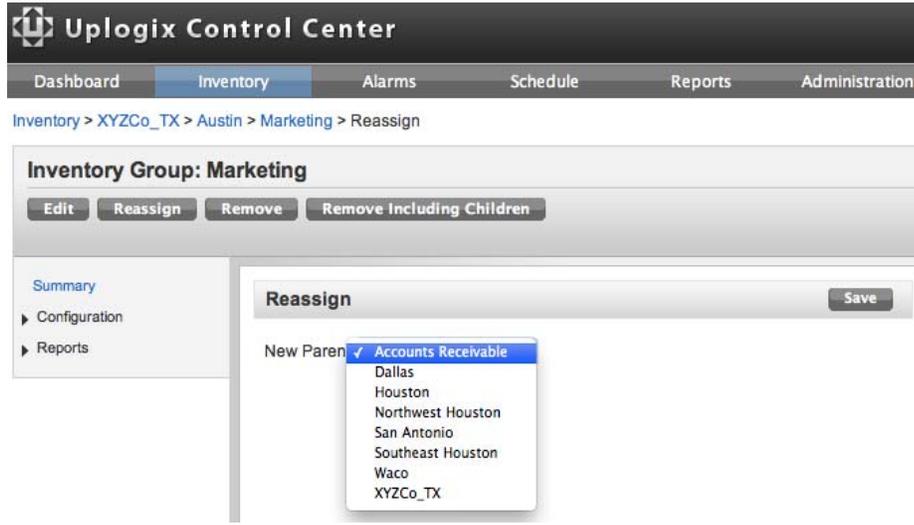

- Click **Save**. The inventory list is automatically refreshed and displays the new location of the inventory group.

## Deleting an inventory group

### Inventory > Group

An inventory group can be deleted from the Uplogix Control Center using one of the following methods:

- Click **Remove** to move all the child groups and Local Managers into the parent group prior to deletion. For example, clicking Remove on the screen below would move all the members of the Marketing inventory group into the Austin group before Marketing would be deleted.



- Click **Remove Including Children** to delete the group and its child groups. For example, clicking Remove Including Children on the screen above would delete the Marketing inventory group, any child groups, and any Local Managers assigned to the Marketing inventory group. Deleted Local Managers return to the Unassigned group when they re-establish contact with the server at the next heartbeat.



**Caution:** There is no delete confirmation.

## Adding a Local Manager

A management relationship must be established before the Uplogix Control Center can manage a Local Manager.

A placeholder can be set up for the Local Manager beforehand, so the Local Manager is automatically added to the appropriate group when it contacts the server.



If user accounts have been created on the Local Manager, they are deleted when the Uplogix Control Center adds the Local Manager to its inventory.

## Creating a placeholder on the Uplogix Control Center (optional)

### Inventory > Group

Create a placeholder in advance to add the Local Manager directly to the inventory group of your choice. Users with the appropriate privileges within that group can manage the Local Manager as soon as it contacts the Uplogix Control Center. The Local Manager also inherits the configuration settings, privileges, roles, rules, preferences, and other defaults from that inventory group.

This step can be performed before the Local Manager is physically installed.

To create a placeholder in advance:

1. Obtain the serial number of the Local Manager to be added. Find this number by issuing the `show version` command from the Local Manager's command line or by referencing the plate on the bottom of the 430 or 3200 Local Manager or the back of the 500 or 5000 Local Manager.
2. Select a group from the inventory list and the Group Detail page displays.

The screenshot shows the Uplogix Control Center web interface. At the top, there's a navigation bar with tabs for Dashboard, Inventory (selected), Alarms, Schedule, Reports, and Administration. Below the navigation bar, the breadcrumb trail reads 'Inventory &gt; XYZCo\_TX &gt; Austin &gt; Building 1 &gt; Detail'. The main content area is titled 'Inventory Group: Building 1' and includes buttons for 'Edit', 'Reassign', 'Remove', and 'Remove Including Children'. On the left, there's a 'Summary' sidebar with a 'Configuration' section containing various settings like Applet, Archive, Authentication, Banners, etc. The main area is divided into two sections: 'Inventory Group Children' and 'Appliance Children'. Both sections currently show 'There are no child groups' and 'There are no appliances in this group' respectively, with an 'Add' button in each.

3. Click **Add** in the 'Appliance Children' section.

4. Enter the serial number of the Local Manager and optionally, a description.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, and Reports. Below this, a breadcrumb trail reads: Inventory > XYZCo\_TX > Austin > Building 1 > Create Uplogix. The main content area is titled 'Inventory Group: Building 1' and includes buttons for Edit, Reassign, Remove, and Remove Including Children. On the left, a sidebar menu shows 'Summary' and 'Configuration' (with sub-items: Applet, Archive, Authentication, Banners). The central form, titled 'Create Uplogix', has a 'Save' button highlighted with a red box. The form contains two input fields: 'Appliance Serial Number' with the value 'A500100061' and 'Description' with the value 'Pasadena'.



Use only printing characters when completing text fields. Spaces are considered printing characters.

5. Click **Save** to add a placeholder for the Local Manager. The Group detail page is automatically refreshed and displays the Local Manager

The screenshot shows the Uplogix Control Center interface after saving. The breadcrumb trail is: Inventory > XYZCo\_TX > Austin > Building 1 > Detail. The main content area is titled 'Inventory Group: Building 1' and includes buttons for Edit, Reassign, Remove, and Remove Including Children. On the left, the sidebar menu is expanded to show 'Configuration' with sub-items: Applet, Archive, Authentication, Banners, Default Port Settings, DNS, Email, Export, LCD, Modem, NTP, Passwords, PPP, Privileges, and Protocols. The central content area is divided into two sections: 'Inventory Group Children' and 'Appliance Children'. The 'Inventory Group Children' section has a 'Child Group' dropdown and a message 'There are no child groups.' with an 'Add' button. The 'Appliance Children' section has a table with columns 'Appliance IP' and 'Hostname'. The table contains one entry with the Uplogix logo icon and the serial number 'A500100061', with an 'Add' button below it.

6. If the Local Manager is selected to view the detail page, its symbol appears in black. This is because there is no communication between the server and the Local Manager at this point.

**Uplogix Control Center** Welcome

Dashboard **Inventory** Alarms Schedule Reports Administration Search

Inventory > XYZCo\_TX > Austin > Building 1 > A500100061 > Summary

**A500100061** ! This appliance has never contacted the server.

CLI Schedule Task **Edit** Reassign Replace Remove

**Appliance** Status: CON:  ETH:  CPU:

<b>CLI</b>	<b>Description:</b> xyzcoAus01	<b>IPv4 Address:</b>	<b>IPv6 Address:</b>
	<b>Serial #:</b> A500100061	<b>Model:</b>	<b>Last Login:</b> *****
	<b>Version:</b> 0.0	<b>Temp C:</b> *****	<b>Uptime:</b>
	<b>Build #:</b>	<b>Temp F:</b> *****	<b>Last Heartbeat:</b> *****
	<b>OS Version:</b>	<b>Humidity:</b> *****	<b>Last Archive:</b> *****

**Properties** Edit

\*\*\*\*\*

**Configuration**

- Applet
- Archive
- Authentication
- Banners
- Default Port Settings

## Configure the Local Manager to use the Uplogix Control Center (required)


From the Local Manager's command line interface, issue the `config system management` command. Use the IP address of your Uplogix Control Center in place of the IP address shown in the following example:

```
[admin@pasadena]# config system management
--- Existing Values ---
Use Management Server: false
Server Hostname or IP: 127.0.0.1
Server Port: 8443
Heartbeat interval (seconds): 30
Heartbeat Band: all
Always use minimal heartbeat: false (may only be configured on UCC)
Last successful heartbeat: (not yet contacted)
Change these? (y/n) [n]: y
--- Enter New Values ---
Use Management Server: (y/n) [n]: y
Server Hostname or IP: [127.0.0.1]: 192.0.2.11
Server Port: [8443]:
Set ntp location to 192.0.2.11: (y/n) [y]:
Heartbeat interval (seconds): [30]:
Heartbeat Band: all
Do you want to commit these changes? (y/n): y
Enabling NTP to point to 192.0.2.11
```

If a placeholder has already been set up in the inventory, once the Local Manager executes a full Heartbeat the black icon for the placeholder turns green and the serial number is replaced by the hostname of the Local Manager (if one has been configured on the Local Manager). The default heartbeat interval is 30 seconds.

Status	CON	ETH	IP	Uptime	Last Alarm	Last Event
▼ XYZCo_TX						
▼ Austin						
▼ Building 1						
🟢 Pasadena	⬤	🟢	198.51.100.4	43d 16h		

If a placeholder has not already been set up in the inventory, the Local Manager is placed in the Unassigned group.

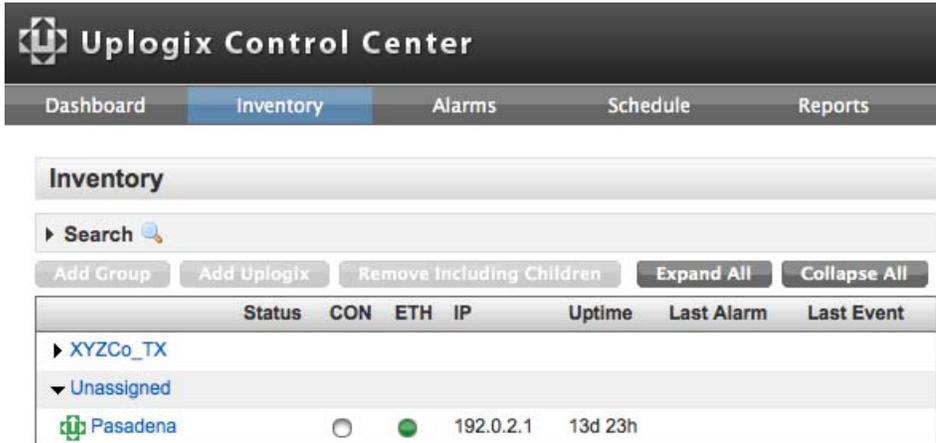

The Local Manager cannot be managed while in the Unassigned group. It must first be reassigned to another inventory group. See [Reassigning a Local Manager](#).


## Reassigning a Local Manager

### Inventory > Local Manager Page

A Local Manager can be reassigned from the Unassigned group to another inventory group. Remember that a Local Manager in the Unassigned group cannot be managed.

To reassign a local manager:

1. Select the Local Manager from the inventory list.
2. Click **Reassign** from its detail page.

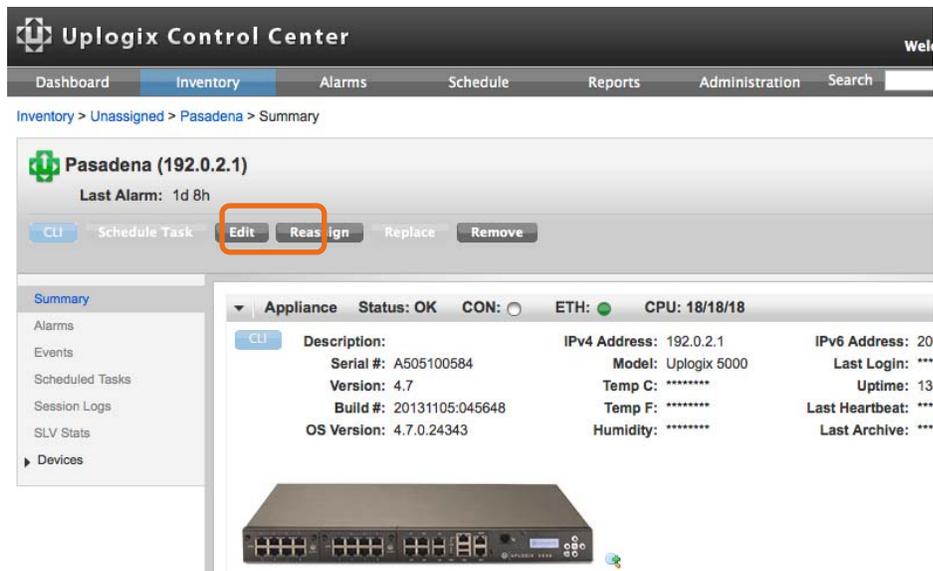

3. Available inventory groups are shown in the New Parent list. The only groups not shown are the current parent and the Unassigned group.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this, a breadcrumb trail reads 'Inventory > Unassigned > Pasadena > Reassign'. The main content area displays the device 'Pasadena (192.0.2.1)' with a 'Last Alarm: 1d 8h' status. A toolbar contains buttons for 'CLI', 'Schedule Task', 'Edit', 'Reassign', 'Replace', and 'Remove'. On the left, a sidebar menu lists 'Summary', 'Alarms', 'Events', 'Scheduled Tasks', 'Session Logs', 'SLV Stats', and 'Devices'. The 'Reassign' dialog is open, showing a 'New Parent' dropdown menu with a checkmark next to 'Austin' and a list of other options: 'Building 1', 'Building 2', 'Dallas', 'Houston', 'San Antonio', and 'XYZCo\_TX'. A 'Save' button is located at the top right of the dialog.

4. Select the new parent group and click **Save**. The Local Manager appears in the appropriate group of the inventory list.



While there is no function for moving a Local Manager into the Unassigned group, this can be done by deleting the Local Manager. If it is still configured to use the Uplogix Control Center, it will reconnect on the next heartbeat and will then be placed in the Unassigned group.

All inherited settings and user settings will be removed from the Local Manager

## Removing a Local Manager

### Inventory > Local Manager Page

A Local Manager can be removed from the inventory. To remove a Local Manager from inventory:

1. Click **Remove** from the Local Manager page.



2. Most of the information about the Local Manager remains in the database. If the Local Manager subsequently contacts the server, it is placed in the Unassigned group. This happens if the Local Manager remains connected and configured to use the Uplogix Control Center.
3. To set the Local Manager to operate without management by the Uplogix Control Center, log into the Local Manager and issue the `config system management` command:

```
[admin@xyzcoAus01]# config system management
--- Existing Values ---
Use Management Server: true
Server Hostname or IP: 192.0.2.11
Server Port: 8443
Heartbeat interval (seconds): 30
Heartbeat Band: all
Last successful heartbeat: 07/03/2013 19:54:09 UTC (Full)
Change these? (y/n) [n]: y
--- Enter New Values ---
Use Management Server: (y/n) [y]: n
Disable NTP also? (y/n) [y]: y
Do you want to commit these changes? (y/n): y
```


4. You can also do this by selecting **Server** from the Configuration tab.

## Working with the dashboard

### Dashboard

The Dashboard helps keep track of key information for a selected group of Local Managers. The summary information of the selected Local Managers, as well as their ten most recent alarms and events, is displayed. The dashboard can also provide information to users with limited access to the Uplogix deployment.

To add a Local Manager to the dashboard, select the hostname from the dropdown menu and click **Add**.

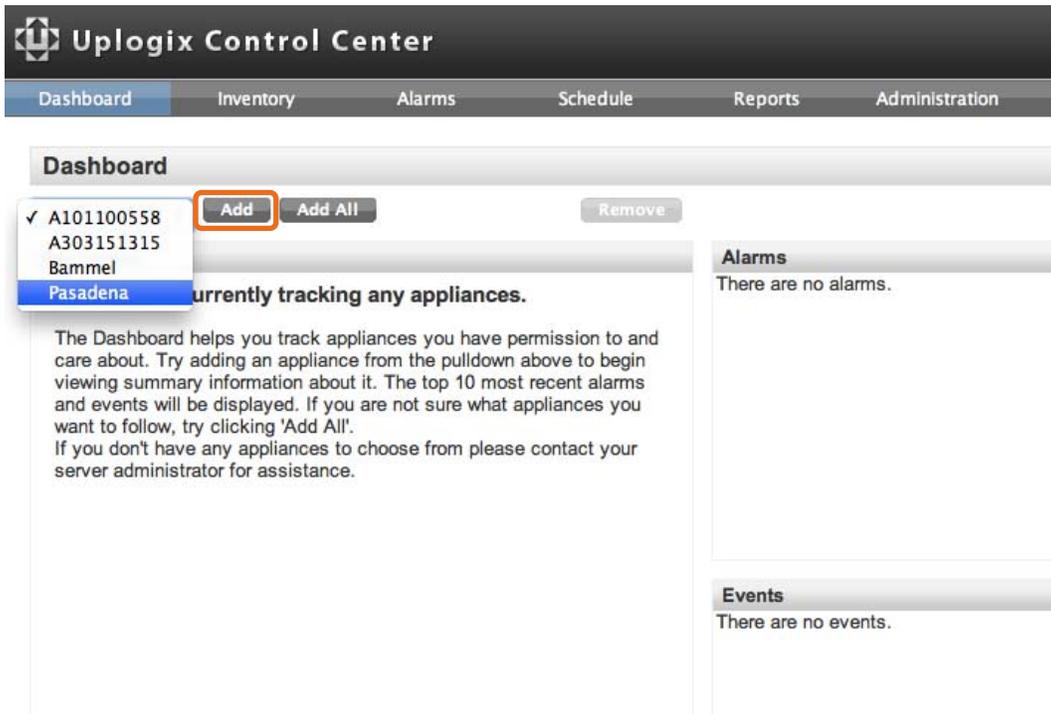

The screenshot shows the Uplogix Control Center interface. At the top is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this is a 'Dashboard' section with a dropdown menu containing three items: 'A101100558', 'A303151315 Bammel', and 'Pasadena'. The 'Add' button next to the dropdown is highlighted with a red box. To the right of the dropdown are 'Add All' and 'Remove' buttons. Below the dropdown, the text reads 'Currently tracking any appliances.' followed by a paragraph of instructions: 'The Dashboard helps you track appliances you have permission to and care about. Try adding an appliance from the pulldown above to begin viewing summary information about it. The top 10 most recent alarms and events will be displayed. If you are not sure what appliances you want to follow, try clicking 'Add All'. If you don't have any appliances to choose from please contact your server administrator for assistance.' To the right of the main content area are two panels: 'Alarms' with the text 'There are no alarms.' and 'Events' with the text 'There are no events.'




Available local managers are limited to ones you have permission to view. If no Local Managers appear in the selection menu, contact your server administrator for assistance.

## Managing licenses

### Administration > Licenses


Each Uplogix Control Center is initially configured to support a maximum of ten Local Managers. By purchasing additional licenses, more management capability and advanced functionality can be added to the Uplogix Control Center.

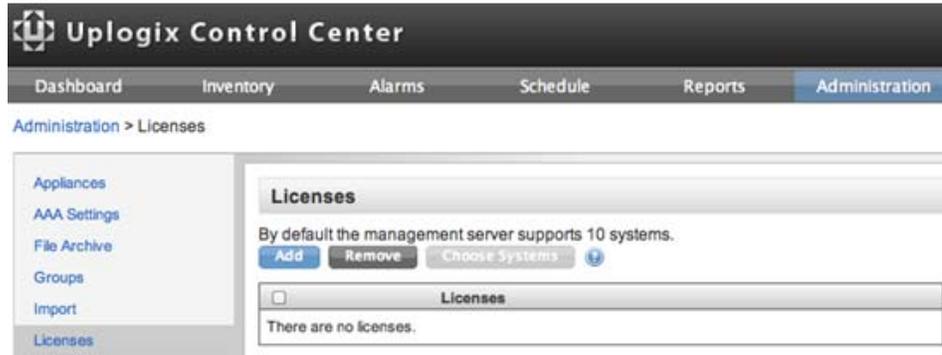

Uplogix Control Center licenses:

- specify the maximum number of managed Local Managers which limits the number of units that can be moved from the Unassigned group.
- may include Service Level Verification (SLV) features which specify the number of Local Managers on which SLV can be enabled.
- may include virtual port features which specify the number of virtual ports that can be created on Local Managers throughout the deployment.
- are not cumulative. The most recent license takes precedence if multiple licenses are present.

To apply a license, copy and paste the license text and click **Save**.

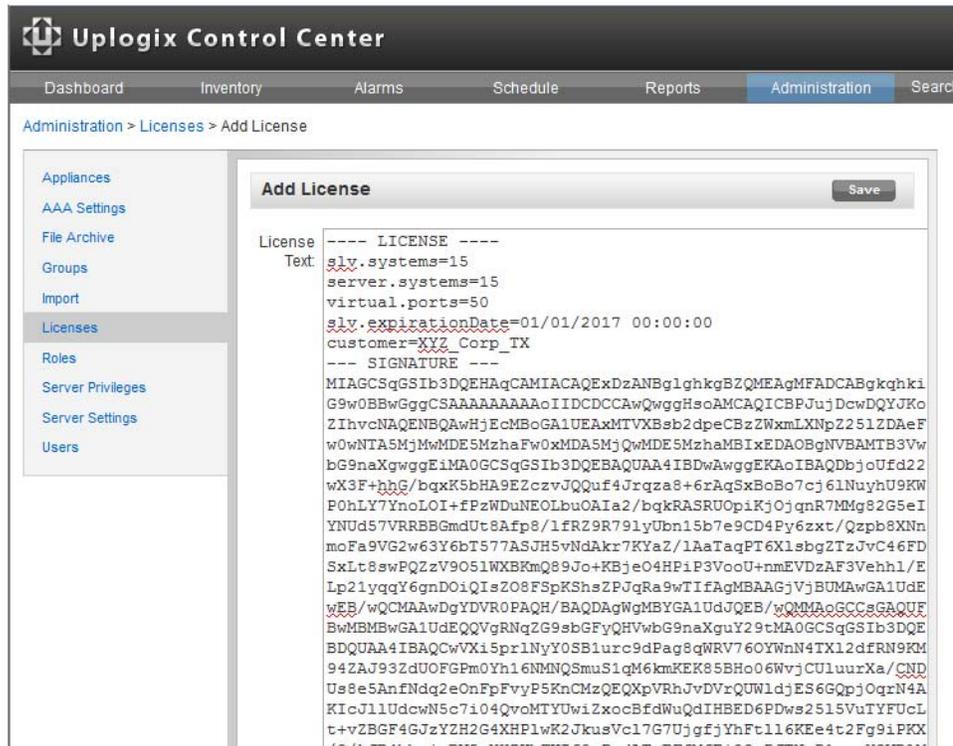

If the license includes SLV information, the **Choose Systems** link becomes active. Click the link to apply the SLV license to specific Local Managers. SLV configuration options are available only for the specific Local Managers to which the license is applied.



# Managing the equipment

The Uplogix Control Center provides the ability to manage equipment at the group level. Individual Local Managers and ports can also be managed.

This chapter covers:

- [Managing from the Local Manager detail page](#)—work with the dashboard view of a Local Manager and the devices it manages
- [Configuring a Local Manager](#)—access the functionality offered by the `config system` commands
- [Creating default Local Manager settings](#)—automate configuration of newly added Local Managers
- [Creating default port settings](#)—automate configuration of devices on Local Managers
- [Managing from the port detail pages](#)—detailed information about devices; access to the device CLI
- [Creating categories for managing devices](#)—creating and applying port labels
- [Managing scheduled tasks](#) – create filters to schedule tasks for specific Local Managers or managed devices
- [Managing rules and monitors](#)—automate performance assessment, diagnosis, and recovery
- [Establishing contact with a Local Manager via dial button](#)—contact remote Local Managers via dial button



To complete the tasks described in this chapter, a role with the appropriate permissions assigned at a suitable level within the inventory or a role on the Uplogix Control Center that includes the `config inventory` privilege (such as the `admin` role) is required. For more information, see [Adding server privileges to accounts](#) and [Adding inventory privileges to accounts](#).

## Managing from the Local Manager Detail page

### Inventory > Local Manager Page

From the Inventory list, or any screen where a given Local Manager is listed, click the hostname to view its detail screen. A quick view of the Local Manager and the devices connected to it appears. The equivalent Uplogix LMS CLI command is `show dashboard`. The Local Manager detail page displays the information being collected from the Local Manager.



The Local Manager detail page shows or hides information based on your privileges. To see the name and details of a Local Manager listed in the Inventory hierarchy, your privileges must include login on that Local Manager or you must have the `config` hierarchy permission.

### The summary view

The summary view is the default view for the Local Manager. The contextual left navigation provides options for viewing alarms, events, scheduled tasks, session logs, SLV statistics as well as configuration, reports and devices attached to the Local Manager. To display further configuration, reports and device options, click on the right arrow on the menu. The Local Manager's configuration information is listed in the work area, followed by information on the devices attached to the Local Manager. Initially, Local Manager and device information is expanded. Collapse these sections by clicking the down arrow icons to hide this information.

The screenshot displays the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory (selected), Alarms, Schedule, Reports, Administration, and Search. Below the navigation bar, a breadcrumb trail shows the path: Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Summary.

The main content area is titled "Pasadena (192.0.2.1)" and shows the "Last Alarm: 1d 9h". Below this, there are several action buttons: CLI, Schedule Task, Edit, Reassign, Replace, and Remove.

The left sidebar contains a navigation menu with the following items: Summary, Alarms, Events, Scheduled Tasks, Session Logs, SLV Stats, Configuration (expanded), and a list of configuration options: Applet, Archive, Authentication, Banners, Default Port Settings, DNS, Email, Export, IP, IPv6, IPT, and LCP.

The main content area is divided into sections. The "Appliance" section shows the status: Status: OK, CON: , ETH: , CPU: 16/17/17. Below this, there is a table of properties:

Property	Value
Description	
Serial #	A505100584
Version	4.7
Build #	20131105:045648
OS Version	4.7.0.24343
IPv4 Address	192.0.2.1
Model	Uplogix 5000
Temp C	N/A
Temp F	N/A
Humidity	N/A
IPv6 Address	2
Last Login	(
Uptime	1
Last Heartbeat	(
Last Archive	(

Below the table, there is a "Properties" section with an "Edit" button and the text "No properties configured". To the right of this section is a small image of the Uplogix 5000 device.

The "Devices" section is expanded, showing a list of devices. The "Show" dropdown is set to "port number and hostname", and the "Sort by" dropdown is set to "port number". There is a checkbox for "Hide unconfigured devices". The first device listed is "port1/1" with a "CLI" button and a radio button.



The Local Manager detail page displays information based on your privileges. Scheduling functions are limited based on the `config schedule` command. Only users with access to this command on the `system` resource or `port` resource are able to schedule jobs on those resources from the Uplogix Control Center. Some elements in the left menu structure may be unavailable based on your privileges. SLV options are unavailable until the appropriate license is applied

The Uplogix web interface provides a CLI applet used to access the Local Manager's LMS command line using Secure Shell. The CLI applet requires Java to be installed on the workstation. Download the latest version of the Java Runtime Environment from <http://oracle.com>.

The minimum and recommended system requirements for the CLI applet are:

Minimum	Recommended
Microsoft® Windows® XP, service pack 2	Microsoft® Windows® XP, service pack 3
Microsoft® Internet Explorer® 7	Latest stable releases of Microsoft® Internet Explorer®, Mozilla Firefox® or Google Chrome
Mozilla Firefox® 3.6	
Java™ 1.5.0	Java™ 1.6 or 1.7



Once launched, the CLI applet is independent of your session on the Uplogix Control Center. If you log out of the Uplogix Control Center while an active session is running in the CLI applet window, your CLI session remains open and active.

Use the CLI button  to access the built-in CLI applet to access the Local Manager or devices.

## Configuring a Local Manager

### Inventory > Local Manager Page

The Uplogix Control Center provides a graphical interface for the configuration of managed Local Managers. Use the Configuration menu to edit the Local Manager's configuration. The Configuration menu offers most of the same capabilities as the Uplogix LMS command line.

Click on the right arrow  on the menu to expand the Configuration menu.



Use only printing characters when completing text fields. Spaces are considered printing characters.

The configuration options mirror those of the Local Manager. To change the Local Manager's configuration, select an option from the menu on the left. Enter the updated values and click **Save** to force the changes onto the Local Manager.

Some options may be unavailable, depending on your privileges. The IPT option is available only if the Local Manager has a Service Level Verification (SLV) license.

## Configuration Options

Configuration option	Permission required	Purpose
Applet	show system applet	Configure authentication settings for Socks Proxy
Archive	config system archive	Configure archiving frequency from the Local Manager to the Uplogix Control Center
Authentication	config system authentication	Configure authentication settings for the Local Manager
Banners	config system banner	Set banners on the Local Manager
Default Port Settings	config settings	Edit or delete default port settings on the Local Manager
DNS	config system ip	Specify the address of a DNS server (required only for SLV options)
Email	config system email	Configure outbound email from the Uplogix Control Center – for sending reports to subscribed users
Export	config system export	Configure settings for export of Local Manager configuration
IP	config system ip	Configure the Local Manager management Ethernet settings
IPv6	config system ip6	Configure the Local Manager IPv6 address
IPT	config system ipt	Set up Local Manager to respond to SLV voice testing, VLANs and addresses
LCD	config system keypad	Configure the Local Manager LCD settings
Modem	config answer (Modem resource)	Configure modem behavior

<b>Configuration option</b>	<b>Permission required</b>	<b>Purpose</b>
NTP	<code>config system ntp</code>	Specify an NTP server  By default, Local Managers use the Uplogix Control Center
Passwords	<code>config password</code>	Configure password settings
PPP	<code>config ppp (Modem resource)</code>	Configure dial-up information for establishing out-of-band connections
Privileges	<code>config privileges</code>	Configure access on the port associated with the Local Manager
Properties	<code>config system properties</code>	Configure properties on the Local Manager
Protocols	<code>config system protocols filter</code>	Configure IP filtering
	<code>config system protocols ssh</code>	Configure terminal pass-through using SSH
	<code>config system protocols telnet</code>	Configure terminal pass-through using Telnet
Pulse	<code>config system pulse</code>	Specify a pulse server for the Local Manager
Roles	<code>config role</code>	Create or update roles on the Local Manager
Rules	<code>config rules</code>	Create or update rules on the Local Manager
Rule Sets	<code>config ruleset</code>	Create or update rule sets on the Local Manager
Secondary Ethernet	<code>config system secondary</code>	Configure the Local Manager secondary Ethernet settings for bonded, capture or Outband
Serial	<code>config system serial</code>	Specify whether the Local Manager is DCE for its serial management connection (400/3200 Only)

<b>Configuration option</b>	<b>Permission required</b>	<b>Purpose</b>
Server	config system management	Configure the Local Manager to delegate to an Uplogix Control Center, the TCP port used, the heartbeat interval, and other related information
SLV Tests	config slv	Configure and view SLV tests being run on the Local Manager
SNMP	config system snmp	Enable and configure the Local Manager to respond to SNMP requests – Version 3 only
Syslog	config system syslog-options	Enable syslog and specify target syslog server
Subinterfaces	config system subinterface	Configure and view subinterfaces defined on the Local Manager's Management Ethernet port
Timeout	config system timeout	Set the idle CLI session timeout for the Local Manager
Virtual Slots	config system slot	Configure or remove virtual slots on the Local Manager
VPN	config vpn (Modem resource)	Configure VPN type and settings

For configuration information, consult the *User Guide for Local Managers*.

Configuration settings are also available on the Inventory Group level. However, some Local Manager-specific settings such as IP address cannot be applied to an inventory group.

## Creating default Local Manager settings

### Inventory > Group

Use the Uplogix Control Center to apply a standard configuration to all Local Managers within a group.



To set up standard configurations, your role must have either Local Manager configuration permissions on the affected Local Managers or the `config` hierarchy permission. If your role includes the `config` hierarchy permission, only configurations for empty inventory groups can be set up. For more about roles and permissions, see [Managing privileges](#).

To create default Local Manager settings:

1. Expand the Configuration menu on the left to view the list of Configuration settings (i.e., Applet, Archive, Authentication, etc.).

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory (selected), Alarms, Schedule, and Reports. Below the navigation bar, the breadcrumb path is 'Inventory > XYZCo\_TX > Detail'. The main content area is titled 'Inventory Group: XYZCo\_TX' and includes an 'Edit' button. A left sidebar contains a 'Configuration' menu with various settings like Applet, Archive, Authentication, etc. The main content area is divided into two sections: 'Inventory Group Children' and 'Appliance Children'. The 'Inventory Group Children' section contains a table with columns 'Child Group' and 'Description', listing Dallas (Finance Group B), Houston (Operations Group), San Antonio (Marketing Group), and Waco (Accounting Group), with an 'Add' button below. The 'Appliance Children' section contains a table with columns 'Appliance IP' and 'Hostname', and a message 'There are no appliances in this group.' with an 'Add' button below.

Child Group	Description
Dallas	Finance Group B
Houston	Operations Group
San Antonio	Marketing Group
Waco	Accounting Group

Appliance IP	Hostname
There are no appliances in this group.	

2. Click the setting name for each configuration setting to be defined.
3. Make any necessary changes.

- To override settings locally defined to Local Managers in the group, select **Force update on children**.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this, a breadcrumb trail reads 'Inventory > XYZCo\_TX > Uplogix Configuration'. The main content area is titled 'Inventory Group: XYZCo\_TX' and 'Example Customer'. There is an 'Edit' button. A left sidebar contains a 'Summary' section and a 'Configuration' section with various sub-items. The 'Timeout Settings' section is active, showing a 'Session timeout' field with the value '5' and '(minutes)'. At the bottom of this section, there is a 'Scope: unspecified' label and a checkbox labeled 'Force update on children' which is checked and highlighted with a red box. A 'Save' button is also present.

- Click **Save**.

## Creating default port settings

### Inventory > Group

Use the `config settings` command on the Local Manager to define how the Local Manager communicates with the device connected to a given port. On the Uplogix Control Center, these settings can be defined and applied to more than one port; they could apply to all devices of a specific make, model, or operating system. For example, define a default port settings profile for all Cisco devices to set the terminal speed to 19200 for any Cisco device.

Default port settings are inherited from inventory groups, so a setting profile defined at the root group is inherited by the entire deployment. Settings profiles defined in a child inventory group are only inherited by its child groups and the Local Managers in those inventory groups. Therefore, it is possible to have default port settings for a Cisco 3925 that set the terminal speed to 9600 in Group 1, and identically named default port settings in Group 2 that set the speed to 19200. This type of situation can also occur when a child group already has default port settings stored under the same name as the settings you create in the parent group.

To access the Create Port Settings page, click **Default Port Settings** from within the Configuration menu for the group to which the settings apply.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The breadcrumb trail is 'Inventory > XYZCo\_TX > Austin > Create Settings'. The main content area is titled 'Inventory Group: Austin' and 'Engineering Group'. It features buttons for 'Edit', 'Reassign', 'Remove', and 'Remove Including Children'. A left sidebar menu lists various configuration options, with 'Default Port Settings' highlighted in orange. The main form area is titled 'Create Port Settings' and includes a 'Save' button. The form contains fields for 'Device Make' (set to 'None'), 'Device Model', 'OS Name' (set to 'None'), and 'OS Version'. Below these are four checkboxes with associated dropdown menus: 'Assimilated Terminal Speed' (set to 9600), 'Modify Terminal Serial Speed on Assimilation' (set to No), 'Set the Console to Use Synchronous Logging' (set to No), and 'Pull Config Transfer Mode' (set to console).

Any default settings that have been created are listed. Use the View Settings page to edit, remove, or add default port setting profiles.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', and 'Schedule'. The breadcrumb trail is 'Inventory > XYZCo\_TX > Austin > View Settings'. The main content area is titled 'Inventory Group: Austin' and 'Engineering Group'. It features buttons for 'Edit', 'Reassign', 'Remove', and 'Remove Including Children'. A left sidebar menu lists various configuration options, with 'Default Port Settings' highlighted. The main form area is titled 'Default Port Settings' and includes 'Add' and 'Remove' buttons. Below these is a table with a 'Name' column and two radio button options: 'cisco' and 'Default'.



Removing a port setting profile does not affect the devices where the settings have already been applied. For example, referring to the screen above, if the Cisco settings are removed, the configuration of Cisco devices is not changed. If you then connect a Cisco device to a Local Manager, the Cisco profile is no longer present and the port settings will manually need to be configured using the `config settings` command.



The Create Settings option is not available if the inventory group is empty. However, the Default profile can be edited. This default port settings profile can be changed but not deleted.

The Create Settings and Edit Settings page present the same choices as the `config settings` command in the Uplogix LMS CLI.

Specify as much or as little information as necessary when creating settings. The Local Managers that inherit these settings will apply them to any port that matches all the information given. For example, specifying **cisco** will match all Cisco devices. Specifying **cisco** and **3925** will match only Cisco 3925 devices. If the desired device make is not listed, choose **native**.

Select the settings to change using the checkboxes on the left, and modify the values as needed.

When editing existing default port settings, specify whether to force the update on any child groups within the affected inventory group. Otherwise, the settings are only updated in the current inventory group.

manual boot No  
 Device pass through timeout 300  
 Enable local echo No

Force update on children Save

## Managing from the port detail pages

### Inventory > Local Manager Page > Port Page

From the Local Manager page, view the port details by clicking the individual port. The contextual left navigation provides access to features that correspond to CLI commands executed from the port resource.

**Uplogix Control Center**

Dashboard **Inventory** Alarms Schedule Reports

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > AustinR1-SRE > Detail

**AustinR1-SRE (port1/1 on Pasadena)**  
Last Event: 25m 45s

CLI Schedule Task

Summary  
Alarms  
Changes  
Events  
Files  
Labels  
Port Settings  
Properties  
Reports  
Devices

port1/1 Status: OK CON: ● ETH: ○ CPU

CLI

Make: cisco Hostname:  
Model: CISCO2921/K9 Description:  
OS: IOS Management IP:  
OS Version: 15.1(4)M Mem Utilization:

Properties Edit

No properties configured

Active Alarms View All Alarms

## Creating categories for managing devices

There are several methods to manage your Uplogix deployment and managed devices. Use inventory groups to manage Local Managers by logical groups such as location or business unit. Device information entered during port configuration of the Local Managers allows users to manage devices by make and model. Finally, users can assign labels to a Local Manager's managed devices to group them in more flexible ways.


Labels can be used to group devices by other criterion such as maintenance windows, scheduling reports, or assigning privileges on all routers regardless of make. Another would be grouping managed devices by business unit in cases where several business units share a Local Manager.

Labels are managed from the Uplogix Control Center and cannot be assigned from the Local Manager's LMS command line.

## Creating port labels

### Local Manager Page > Port Page

To assign a label to a port, open the detail page for the Local Manager that manages it. Then expand the detail for the port to be labeled.

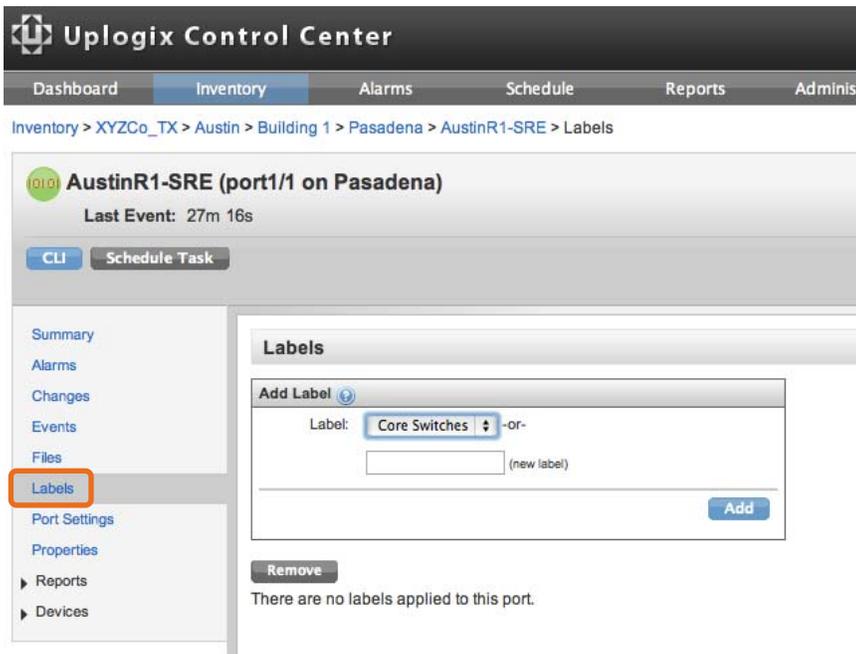


The screenshot displays the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this, a breadcrumb trail reads: Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > AustinR1-SRE > Labels. The main content area is titled 'AustinR1-SRE (port1/1 on Pasadena)' and shows 'Last Event: 27m 16s'. There are two buttons: 'CLI' and 'Schedule Task'. On the left, a sidebar menu lists various options: Summary, Alarms, Changes, Events, Files, Labels (highlighted with an orange box), Port Settings, Properties, Reports, and Devices. The 'Labels' section is expanded, showing an 'Add Label' form with a dropdown menu set to 'Core Switches', a '-or-' separator, and a text input field for '(new label)'. An 'Add' button is at the bottom right of the form. Below the form is a 'Remove' button and the text 'There are no labels applied to this port.'

Click the **Labels** menu item to open the Labels page.

Create a new label for the port and then click **Add** to apply the label to this port. More than one label can be applied to a port.

For example, port 1/1 may be given a new label, **Core Switches**.

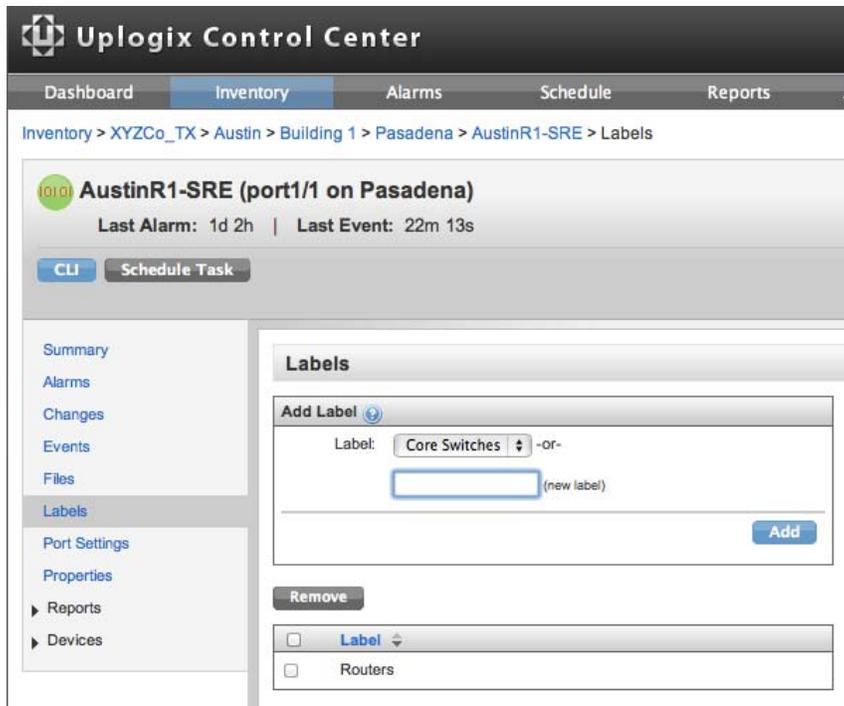


## Assigning privileges by label

### Inventory > Group > Configuration > Privileges

Privileges are created by assigning the user or user group a role (such as admin or guest) to a resource (such as port 1/2). The default resources within the inventory are the same resources found in the Uplogix LMS command line interface - system, modem, powercontrol, and the individual ports. If labels have been created, they are also considered resources.

The example below shows how to assign admin rights to a user on all routers. For more information about assigning privileges, see [Managing privileges](#).

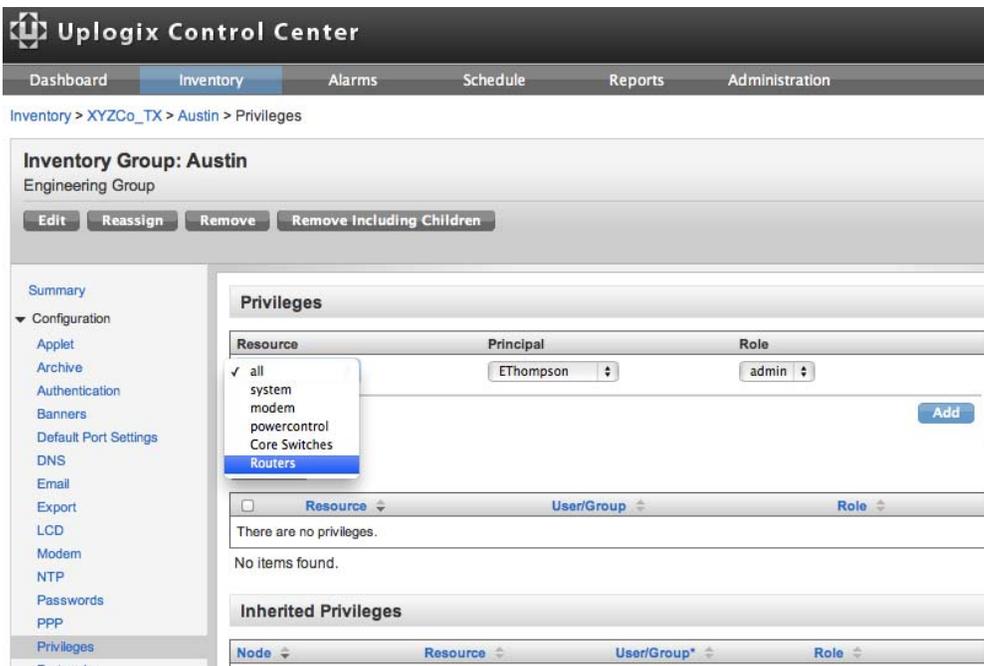

## Setting up task filters using labels

### Schedule > Filters

Use Labels as a filtering criterion when setting up filters for scheduling tasks. View and edit these filters on the **Schedule > Filters** page. For more information about task filters, see [Setting up filters and scheduling tasks](#).

[Schedule > Filters > Edit Filter](#)

**Scheduled Tasks**  
**Filters**

### Edit Filter: RoutersAustin

#### Filter Information

Name: RoutersAustin  
Description: All Routers in the Austin Group

#### Inventory Groups

Remove

Group Name ⇅  
 Austin

Building 1 ▾

#### Appliances

Remove

Appliance Name ⇅  
This filter contains no appliances.

[select](#)

#### Devices

Remove

Device ⇅  
This filter contains no devices.

[select](#)

#### Device Criteria

Device Criteria ⇅  
This filter contains no device criteria.

Device Make:  ▾ Device Model:    
OS Name:  ▾ OS Version:

#### Labels

Remove


Label ⇅  
This filter contains no labels.

▾

## Viewing reports by label

### Reports > Reports by Label

Once labels are assigned to port devices, the Uplogix Control Center automatically creates reports based on the labels. View these reports on the **Reports > Reports by Label** page. For more information about reports, see [Viewing reports](#).

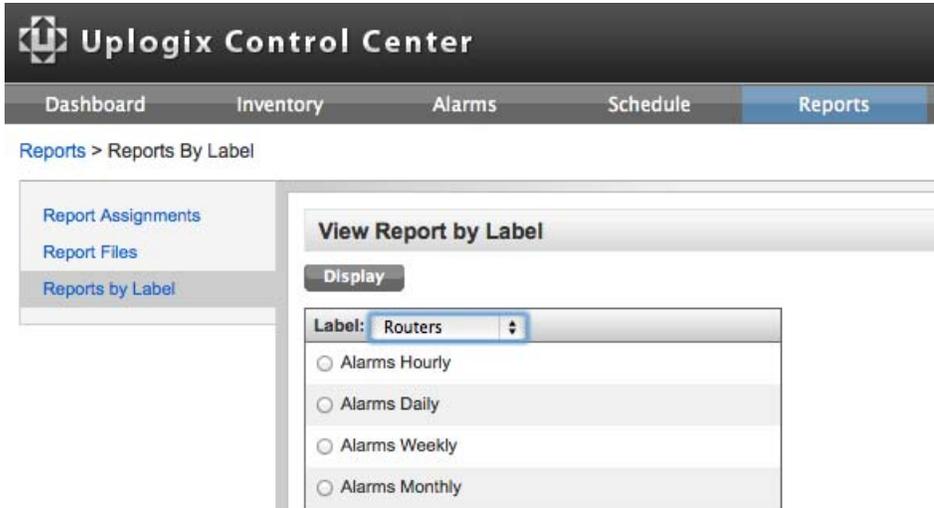

## Managing scheduled tasks

Schedule routine tasks to take place automatically. To schedule a task:

- Create a task filter or select an existing task filter
- Choose and schedule the task

A filter specifies the portion of the inventory that is affected by a scheduled task.

For example, to define a task that clears the counters on all Cisco devices within a specific inventory group periodically, a filter is needed which specifies all Cisco devices within that group. Use this filter to schedule the Clear counters task.

Filters and filter options are limited to Local Managers and ports to which you have `config schedule` access.

Some scheduled tasks are available from the expanded Local Manager detail pages. These tasks are scheduled only on the individual Local Manager; therefore a filter does not need to be selected.

This section covers:

- [Setting up filters and scheduling tasks](#)
- [Tasks that can be scheduled](#)
- [Scheduling tasks on a single Local Manager](#)
- [Scheduling software upgrades on Local Managers](#)

## Setting up filters and scheduling tasks

### Schedule

Use the Schedule tab to schedule tasks that will be performed across several devices or Local Managers. Steps in this process are:

- Specify what equipment is affected by choosing or creating a filter
- Specify the type of task
- Provide the information required to complete the task
- Specify when the task is to be performed and, if applicable, how often it repeats

When the Schedule tab is clicked, the list of scheduled tasks opens. If no filters have been set up, then no tasks are listed and the schedule task button is not available.




A filter must be created before a task can be scheduled.

### Creating a filter

#### Schedule > Filters

To create a new filter, select **Filters** from the contextual left navigation on the Schedule tab.

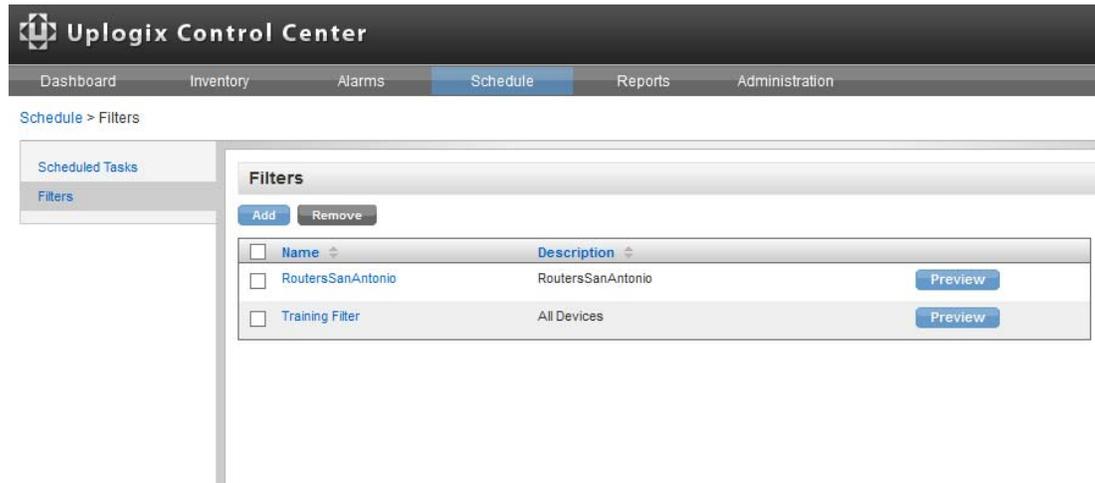

To create a filter and filter criteria:

1. Enter a name and a description for the filter. The name of the filter cannot be changed once it is created, though the filter can be deleted and recreated under a new name.



Use only printing characters when completing text fields. Spaces are considered printing characters.

A screenshot of the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule' (highlighted), 'Reports', 'Administration', and 'Search'. Below the navigation bar, the breadcrumb trail reads 'Schedule > Filters > Create Filter'. On the left, a sidebar shows 'Scheduled Tasks' and 'Filters'. The main content area is titled 'Create Filter' and contains a 'Filter Information' section with two text input fields: 'Name' containing 'allSwitchesAustin' and 'Description' containing ':Austin inventory group'. 'Save' and 'Cancel' buttons are located at the top right of the form.

2. Click **Save**. If options have been defined, they display under each inventory group along with a hyperlink to remove them.


A screenshot of the Uplogix Control Center interface showing the 'Edit Filter' page. The top navigation bar is the same as in the previous screenshot. The breadcrumb trail is 'Schedule > Filters > Edit Filter'. The sidebar shows 'Scheduled Tasks' and 'Filters'. The main content area is titled 'Edit Filter: allSwitchesAustin' and includes a 'Preview' button. Below the title is the 'Filter Information' section, which displays the filter's name and description. The page is divided into three sections: 'Inventory Groups', 'Appliances', and 'Devices'. Each section has a 'Remove' button and a list area. The 'Inventory Groups' section shows a list with one entry 'Austin' and an 'Add' button. The 'Appliances' and 'Devices' sections are currently empty. At the bottom, there is a 'Device Criteria' section with an 'Add' button.

3. Add filter criteria as needed by choosing a criterion and then clicking **Add** to register your choice. Multiple criteria can be applied in each section.

Initially, each section of the filter editor displays a message indicating that nothing has been added to this section of the filter. Use the Label section to use the port labels that have been created, if any. For more information about creating port labels, see [Creating your own categories to manage devices](#).

Device makes, operating systems, group names, and labels are presented in drop-down lists. Local Managers and devices are presented in the Hostname Picker dialog boxes.

4. Click **Preview** to see which Local Managers and devices are affected by the filter. When satisfied with the filter, click **Done** to save your changes. The Filter Manager page now lists the filter which can be previewed, edited, or deleted.

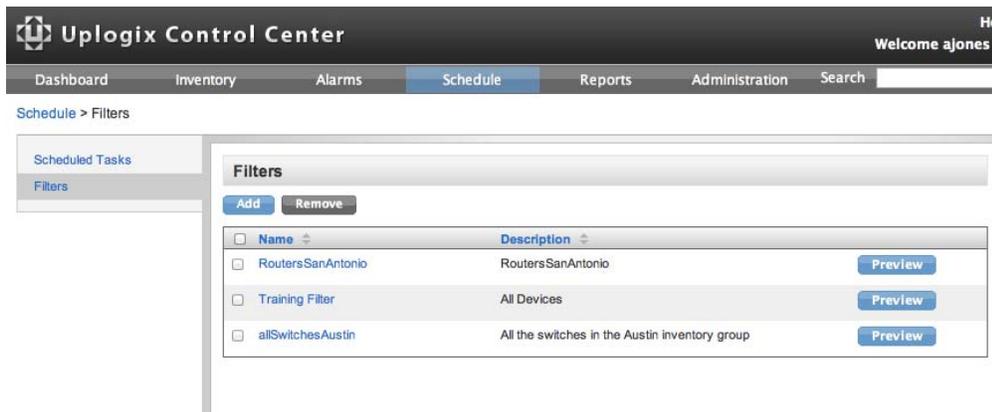

## Scheduling a task

### Schedule > Scheduled Tasks

Once task filters have been defined, tasks can be scheduled from the Scheduled Tasks page.




By default, the only tasks shown on the Scheduled Tasks List are tasks that have not yet been completed. To see all tasks, select **Show completed tasks**.




1. Select **Scheduled Tasks** from the contextual left navigation on the Schedule tab.

2. Available task filters are shown in the Filter list. Choose the appropriate filter from the list. If the filter is not listed, click **Cancel** and create a new filter (see the previous section).

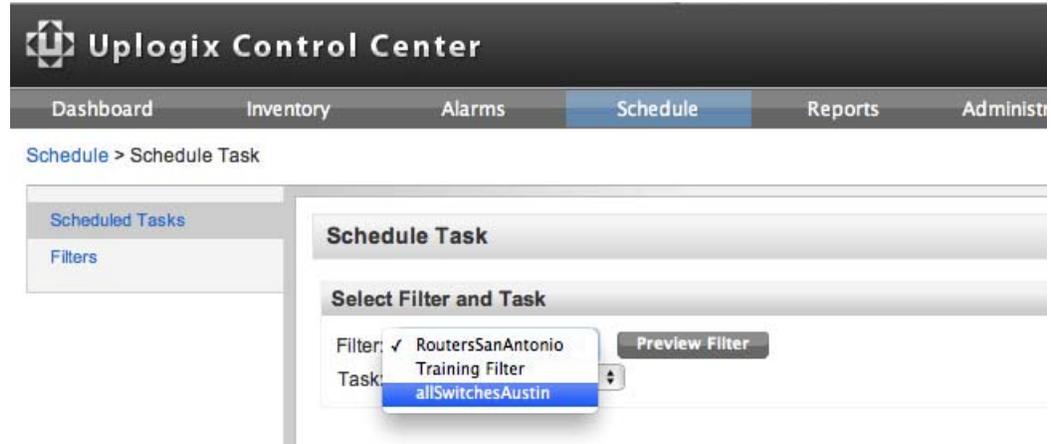

3. There are several types of tasks that can be scheduled. The tasks available depend on the device platform. For example, the Clear Counters action is not available for servers.

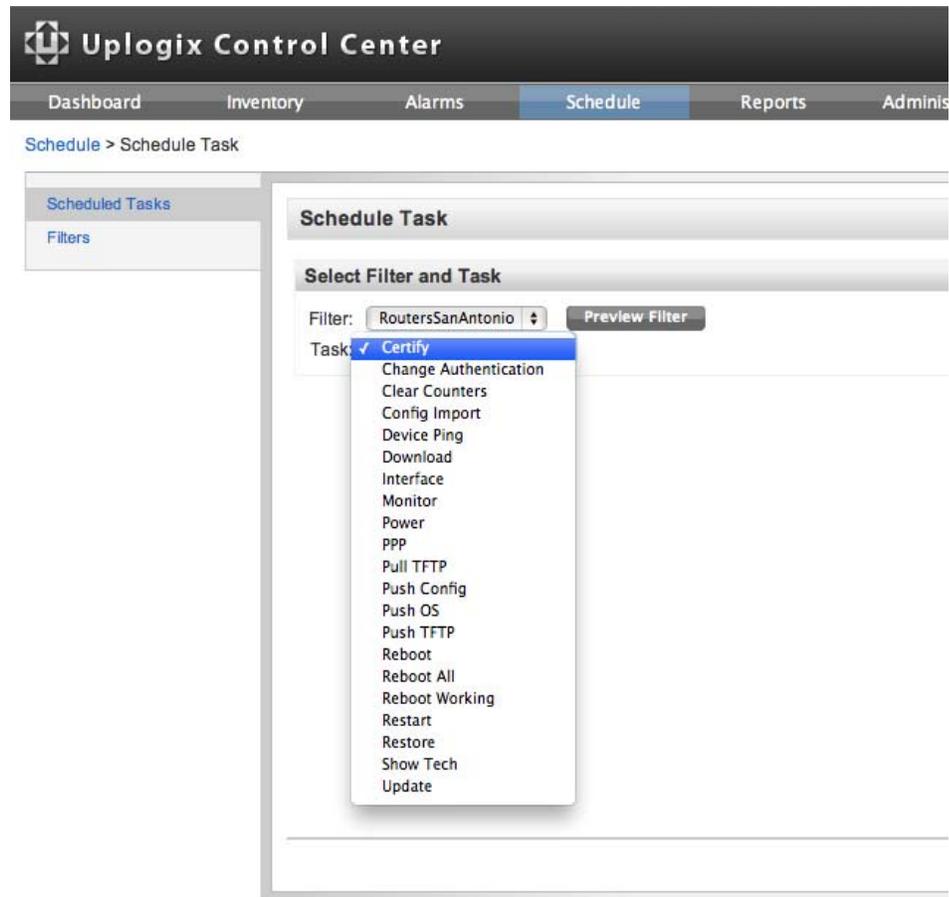

Some tasks, such as Change Authentication, take more than one step to schedule. Others, such as Clear Counters, present only a scheduling page.

The screenshot shows the 'Uplogix Control Center' interface. The navigation bar includes Dashboard, Inventory, Alarms, Schedule (selected), Reports, Administration, and Search. The breadcrumb trail is 'Schedule > Schedule Task > Change Authentication - Parameters'. On the left, there are links for 'Scheduled Tasks' and 'Filters'. The main content area is titled 'Schedule Task - Parameters' and contains the following fields:

- Console Login: uplogixFunctionalAccount
- Console Password: [masked]
- Enable Login: [empty]
- Enable Password: [masked]
- Secondary Console Login: noTacacsLocal
- Secondary Console Password: [masked]
- Secondary Enable Login: noTacacsEnable
- Secondary Enable Password: [masked]
- Apply Changes to Appliance:
- Apply Changes to Device:  Do not use when managing device with RADIUS/TACACS authorization.
- Commit on Failure:
- Test Login:


A 'Help' button is located at the bottom left of the form area.

- The default starting date and time is the current date and time. Change the date and time if the task is not to be executed immediately.
- Complete the required information on each page, and click **Schedule**.

The screenshot shows the 'Uplogix Control Center' interface. The navigation bar includes Dashboard, Inventory, Alarms, Schedule (selected), Reports, and Administration. The breadcrumb trail is 'Schedule > Schedule Task > Change Authentication - Frequency'. On the left, there are links for 'Scheduled Tasks' and 'Filters'. The main content area is titled 'Schedule Task - Frequency' and contains the following fields:

- Start: 07/30/2013 17:02:07
- Stop:  Never
- 08/06/2013 17:02:07
- Repeat:  Run Once
- [ ] seconds
- Description: [empty]

- The Scheduled Tasks list shows the new task.

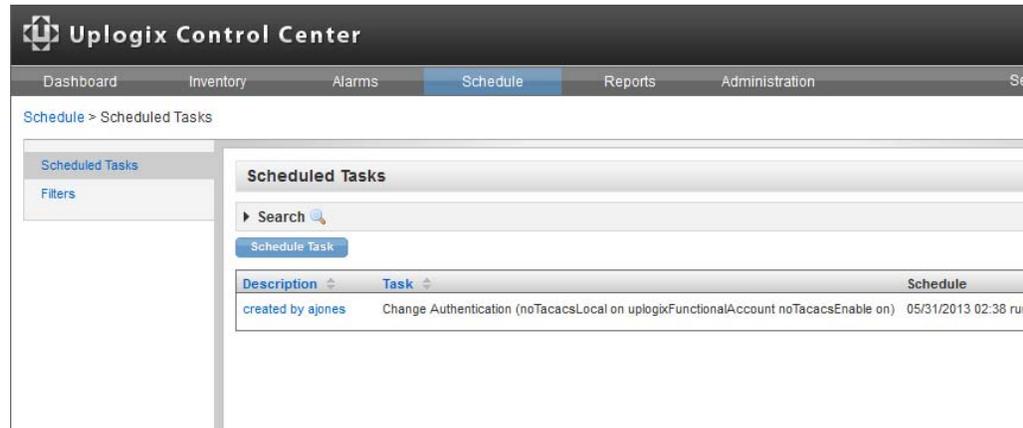

- Click **details** to view the equipment affected by the task.
- Click **hold** to postpone the task.
- Click **resume** when ready to allow the task to proceed.
- Click **cancel** if the task should not be executed.




By default, tasks are hidden after they are completed or canceled. To see tasks that are no longer pending, select **Show completed tasks** at the top of the page.

## Tasks that can be scheduled

### Schedule > Schedule Tasks

The list of tasks available depends on the filter. If the filter specifies managed devices by make, some tasks are unavailable.

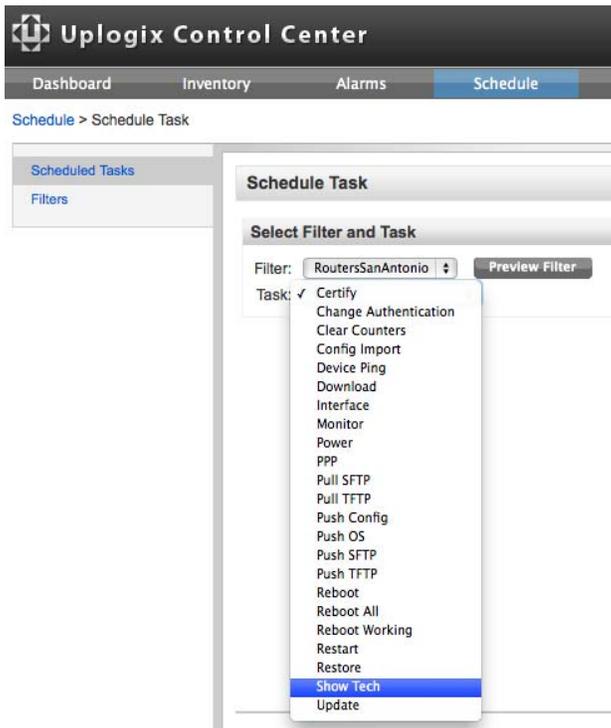

Task	Purpose
Certify	This is an Alcatel specific task that validates a configuration before deploying it.
Change Authentication	Schedule an authentication change for a device, with the option to change the console login and password, the enable login and password, and on some devices failover credentials used when centralized authentication systems are unavailable.
Clear Counters	Clear interface counters on a device. All interfaces counters are cleared.
Config Import	Import Local Manager configuration settings. The file to be imported must exist in the File Archive prior to scheduling. For more information, see <a href="#">Uploading files from your computer to the file archive</a> .
Device Ping	Schedule a ping task from a device attached to the Local Manager to a target destination.
Download	This task is a step in the process of applying a file to a Local Manager or a managed device. To make the file available to the Local Manager, it must be downloaded from the Uplogix Control Center to the Local Manager. Before downloading files to Local Managers, they may need to be uploaded to the Uplogix Control Center. See <a href="#">Uploading files from your computer to the File Archive</a> . To download a file from the Uplogix Control Center to Local Managers, choose the type of file and file status based on where the file should be saved. Then select a file to download from the File Archive.
Interface	Interfaces can be set on, off, or cycled at a specified time. Choose the desired action and enter the name of the interface.
Monitor	Schedule interface, ping, chassis, console, or log monitors to run, defaults to 30 seconds.


<b>Task</b>	<b>Purpose</b>
Power	Devices can be powered on, off, or power cycled at a specified time. Choose the desired action and if applicable, enter the delay between powering off and on.
PPP	Schedule the Local Manager to initiate Outband (out-of-band) communication.
Pull SFTP	Pull various files from device to Local Manager port file system utilizing secure FTP.
Pull TFTP	Pull various files from device to Local Manager port file system utilizing FTP.
Push Config	Push a new configuration onto a device by specifying the type of file and version. These options refer to files located on the Local Manager, in the port's file archive. Also, specify whether the device should be rebooted after the new configuration is loaded.
Push OS	As with configurations, operating system images can be pushed onto a device.
Push SFTP	Push various files to device from Local Manager port file system utilizing secure FTP.
Push TFTP	Push various files to device from Local Manager port file system utilizing FTP.
Reboot	Schedule a device to reboot at a specified time.
Reboot All	This is an Alcatel specific task.
Reboot Working	This is an Alcatel specific task.
Restart	Restart the Local Manager.
Restore	This is an Alcatel specific task.

<b>Task</b>	<b>Purpose</b>
Show Tech	Execute low-level debug collection command on the device and automatically save the output to the Local Manager.
Update	Update the Local Manager software. The new software image must exist in the File Archive prior to scheduling.

## Scheduling tasks on a single Local Manager

### Inventory > Local Manager Page

Schedule the following tasks for a specific Local Manager from the Local Manager's detail page.

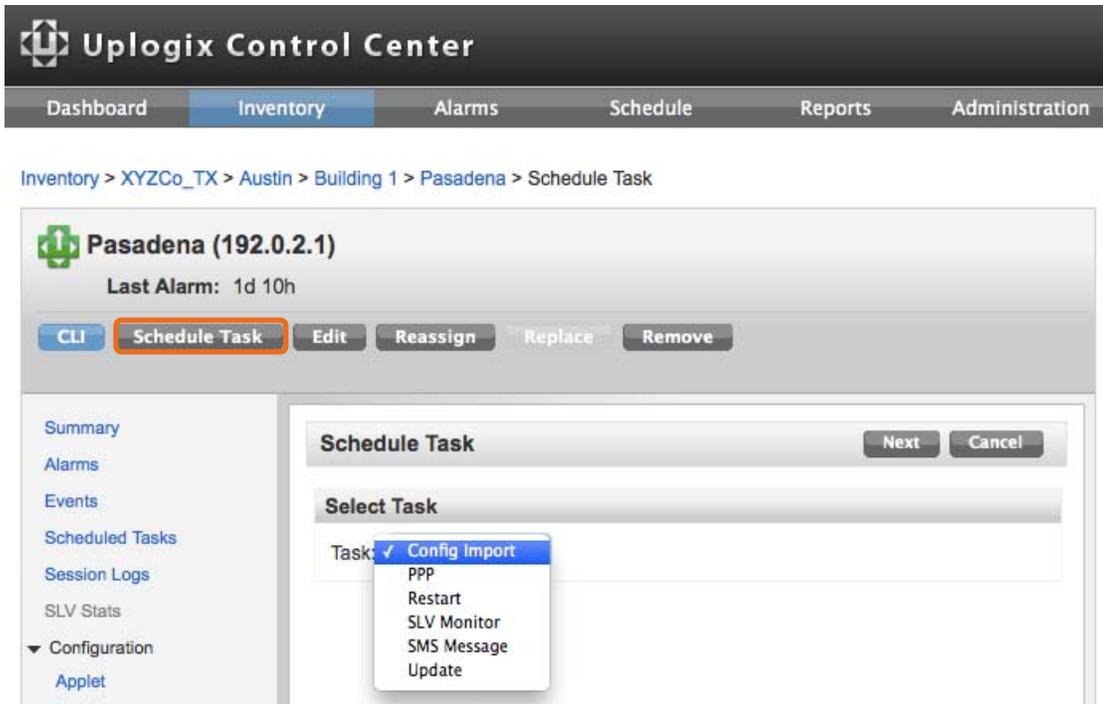

Task	Purpose
Config Import	Import a configuration file. The appropriate file must be present in the File Archive. See <a href="#">Uploading files from your computer to the File Archive</a> .
PPP	Schedule an Outband on cycle or off action.
Restart	Restart the Local Manager.
SLV Monitor	Setup SLV monitors. This task is available only if your license includes Service Level Verification. In addition, the appropriate SLV tests and rules must be available.  For detailed information about creating rules, refer to the <i>Guide to Rules and Monitors</i> .

Task	Purpose
SMS Message	Send an SMS message to a Local Manager containing a command to execute. Only PPP on (Outband) is supported.
Update	Schedule a software upgrade for the Local Manager. The appropriate file must be present in the File Archive; otherwise the update cannot be scheduled.

## Scheduling software upgrades on Local Managers

Automate the process of upgrading Local Managers.

The steps in the upgrade process are:

- Download the software upgrade to your computer
- Upload the software to the Uplogix Control Center
- Schedule the Update task

### Downloading the software upgrade to your computer

To upgrade the Local Managers that the Uplogix Control Center manages, download the software upgrade to your computer and then upload it to the Uplogix Control Center following these steps:

1. Point your browser to [support.uplogix.com](http://support.uplogix.com)
2. Navigate to the software download page, locate the appropriate file and download it to your computer.

If you are not certain which file to use, contact Support at [support@uplogix.com](mailto:support@uplogix.com).

### Uploading files from your computer to the File Archive

After downloading the desired file to your computer, follow these steps to upload the files to the File Archive:

1. Go to the Uplogix Control Center's **Administration > File Archive** page.  
Any files present are displayed with category, filename, upload date, and description information.
2. Choose a category for the file being uploaded. If the selected category does not exist, it is automatically created.



Do not use spaces in the category name.

3. Browse to and select the file that is to be uploaded. If a file with the same name as a file currently in the selected category is uploaded, this new upload overwrites the existing file.

- Optionally, enter a file description, which can be helpful in identifying the file.

Category	Name	Date Uploaded	Description
<input type="checkbox"/>	UplogixOS	lms4.7.bin	01/30/2014 14:20 UTC LMS 4.7 GA

- Click **upload** to copy the file to the Uplogix Control Center. When the upload is complete, the File Archives list displays the file.



**Caution:** When upgrading to a new release (for example, from 4.6 to 4.7), always upgrade the Uplogix Control Center first. Local Managers cannot heartbeat properly to an Uplogix Control Center using an earlier release of software. This is not necessary for patch releases (for example, 4.7 to 4.7.x).

### Scheduling the update task for more than one Local Manager


To schedule the update, there must be a task filter that specifies the Local Managers to be upgraded. For information about creating filters, see [Setting up filters and scheduling tasks](#).

- On the Schedule tab, click **Schedule Task** to open the Schedule Task page.
- Choose the filter that specifies the Local Managers to be upgraded and then select the **Update** task.



To avoid degrading the Uplogix Control Center's performance, upgrade no more than 100 Local Managers at the same time.

Schedule > Schedule Task

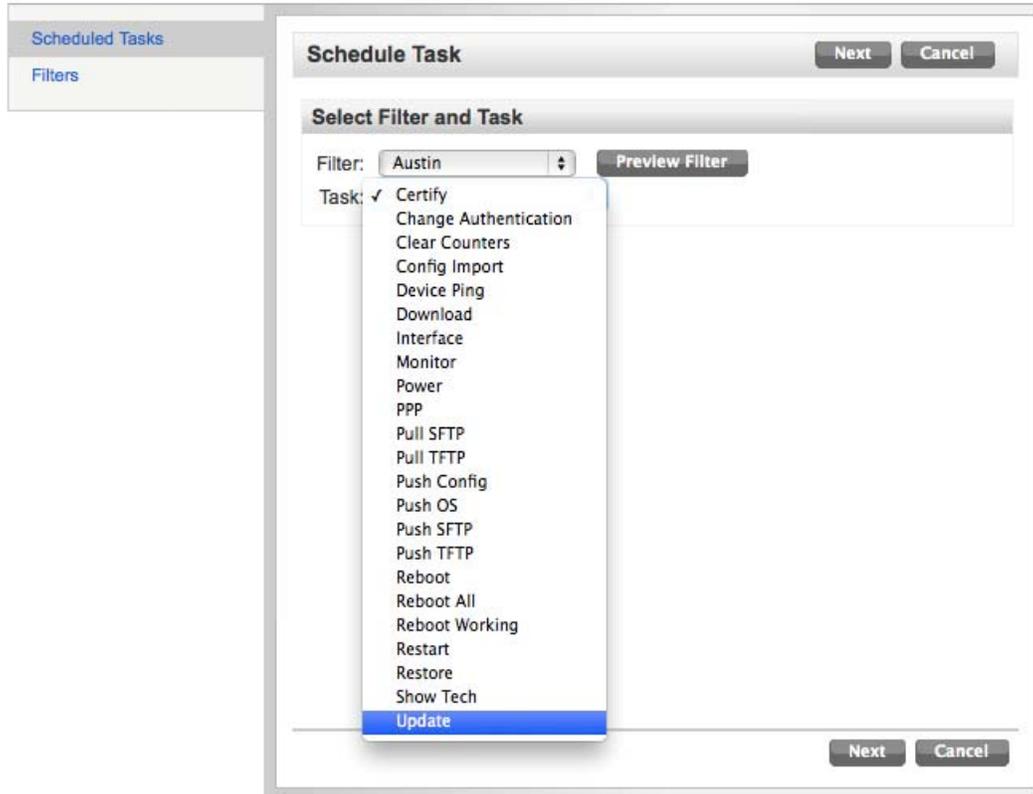

3. Continue as for scheduling any task.

### Scheduling the update task on a single Local Manager

In some cases, you may wish to upgrade only one Local Manager.

1. Open the **Inventory** tab and navigate to the Local Manager.
2. Ensure that the Local Manager has been moved out of the Unassigned group.
3. Click **Schedule Task** and then select **Update** as the task type.
4. Click **Next** to open the Schedule Task Parameters page.
5. Select the file just uploaded and click **Next**.
6. Continue as for scheduling any task.

## Managing rules and monitors

Monitors gather data, in some cases by running user-defined tests; and they may include rules to evaluate and respond to the data.

A rule specifies at least one condition to evaluate, and at least one action to take if the set of conditions evaluates true. Rules may also include a time element.

Rules can be grouped together into rule sets. This simplifies the process of creating monitors.

This section covers:

- [Working with rules](#)
- [Working with rule sets](#)
- [Scheduling monitors](#)

For a detailed discussion of rules and monitors, refer to the *Guide to Rules and Monitors*.

## Working with rules

### Inventory > Configuration > Rules

Rules can be centrally managed from the Uplogix Control Center. Like privileges and preferences, rules edited at the inventory group level are inherited by child groups and Local Managers. Rules edited at the Local Manager level only apply to that Local Manager.

To access Rules, click **Rules** from the Configuration menu at a group detail or Local Manager detail page. New rules can be created and existing rules can be edited.

Uplogix Control Center

Help | Profile | Logoff  
Welcome ajones - 01/30/2014 14:28

Dashboard | Inventory | Alarms | Schedule | Reports | Administration | Search | Print

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > View Rules

Pasadena (192.0.2.1)  
Last Alarm: 1d 10h

CLI | Schedule Task | Edit | Reassign | Replace | Remove

Summary  
Alarms  
Events  
Scheduled Tasks  
Session Logs  
SLV Stats  
Configuration  
Applet  
Archive  
Authentication  
Banners  
Default Port Settings  
DNS  
Email  
Export  
IP  
IPv6  
IPT  
LCD  
Modem  
NTP  
Passwords  
PPP  
Privileges  
Properties  
Protocols  
Pulse  
Roles  
Rules

Rules

Add | Remove

Rule	Description	Scope
adminStatusDown	the interface has been turned off	local
adminStatusisDown	the interface has been turned off for a while	local
adminStatusUP	the interface has been turned on	local
aisAlarmIncrements		local
carrier	Serial Carrier Problems	local
clearToSendIsDown		local
consoleHung	System cannot talk to the device	local
cpuFiveMinuteAverageGreaterThan90	CPU Five Minute Average Load Greater Than 90%	local
cpuOneMinuteAverageGreaterThan90	CPU One Minute Average Load Greater Than 90%	local
currentErroredSecondsIncrements		local

45 items found, displaying 1 to 10.  
[First/Prev] 1, 2, 3, 4, 5 [Next/Last]

Click **Add** to create a new rule. This is equivalent to issuing the `config rule` command from the LMS command line.



Do not use spaces in the rule name.

The Edit Rule page contains drop-down menus and lists of the same options available from the rules editor within the LMS command line.

The screenshot shows the Uplogix Control Center interface. At the top, there's a navigation bar with 'Uplogix Control Center' and user information 'Welcome ajones - 01/30/2014 15:29 UTC'. Below that is a menu with 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The breadcrumb trail is 'Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Edit Rule'. The main content area is titled 'Pasadena (192.0.2.1)' and shows 'Last Alarm: 1d 11h'. There are buttons for 'CLI', 'Schedule Task', 'Edit', 'Reassign', 'Replace', and 'Remove'. On the left is a sidebar menu with categories like 'Summary', 'Alarms', 'Events', 'Configuration', and 'Rules'. The main form is titled 'Create Rule' and has a 'Save' button. It is divided into 'Rule Information' and 'Rule Conditions'. The 'Rule Information' section has fields for 'Name', 'Description', 'Start', and 'End'. The 'Rule Conditions' section has a 'NOT' checkbox and several rows of conditional statements. Each row has a checkbox, a dropdown menu for the variable, an operator, and a value field. There are buttons to 'add condition', 'Add Compare-value Condition', 'Add Has-value Condition', 'Add Has-run Condition', and 'Add Static Condition'. At the bottom of the 'Rule Conditions' section is a 'Conditions' text box.

Edit conditions manually in the Conditions text box or add a new condition using the drop-down menus shown below. Four different menu sets cover the condition types for rules. As each condition is added, the text changes to reflect the new conditions.

Alarms and events are defined using drop-down items and free text fields.

Tasks can be manually edited or specified with the selections on this page.

The screenshot shows a web-based configuration interface for creating a rule. It is divided into three main sections:

- Alarm Section:** Contains a checkbox for "oid" (unchecked), a checkbox for "no email" (checked), and an "Add Alarm" button.
- Event Section:** Features a dropdown menu for "event type" set to "AIS\_ALARM", a checkbox for "append message" (unchecked), and an "Add Event" button.
- Tasks Section:** Labeled "Tasks", it contains a large empty text area and an "Add Action" button.

At the bottom of the page, there is a "Scope: local" label, a checkbox for "Force update on children" (unchecked), and a "Save" button.

Click **Save** at the bottom of the page to create the rule. Select **Force update on children** to force Local Managers to update a previously inherited rule.

Consult the *Guide to Rules and Monitors* for more information on creating rules.

Reference information is available at [support.uplogix.com](http://support.uplogix.com) and includes rule examples, default rules, and condition variables.

## Working with rule sets

Some rules are often used together. Therefore, it may be convenient to group them into rule sets. When creating monitors, available rules and rule sets are presented together.

1. Click **Rule Sets** from the Configuration menu on a group detail or Local Manager detail page.
2. Existing rule sets are listed on the View Rule Sets page. To create a rule set, click **Add**.
3. In the Create Rule Set screen, provide a name and (optionally) a brief description for the rule set.

The screenshot shows the 'Create Rule Set' interface. At the top, there is a 'Save' button. Below it, the 'Name' field is filled with 'modemBasic' and the 'Description' field with 'Rule for testing the internal modem'. The 'Rules' field is currently empty. A scrollable list of rules is shown below, with 'modemLineInUse' highlighted. To the right of the list is an 'add rule' button. At the bottom left, the 'Scope' is set to 'local', and there is another 'Save' button at the bottom right.

4. Select the first rule from the list of available rules, and click **add rule**.
5. Select the relationship (AND; OR) of the first rule to the second rule from the list to the left, then select the second rule.

This screenshot shows the 'Create Rule Set' dialog after two rules have been added. The 'Name' and 'Description' fields remain the same. The 'Rules' field now contains 'modemLineInUse'. Below it, a second rule 'adminStatusDown (the interface has been turned off)' has been added. A dropdown menu to the left of the second rule shows the relationship 'OR' selected. An 'add rule' button is visible to the right of the second rule.

- Continue until all the desired rules have been added to the rule set. Click **Save** to save the rule set. The new rule set is listed on the View Rule Sets page.

Rule Sets			
<input type="button" value="Add"/> <input type="button" value="Remove"/>			
<input type="checkbox"/> Rule Set	Description	Rules	Scope
<input type="checkbox"/> adminStatus	determines the state of the interface	adminStatusDown   adminStatusUP, adminStatusDown	local
<input type="checkbox"/> default	Rules designed to troubleshoot Serial Interfaces	carrier   physical	local
<input type="checkbox"/> interfaceBasic	Individual alarms for interfaces	lossOfSignalIncrements   lossOfFrameIncrements   aisAlarmIncrements   remoteAlarmIncrements   currentLineCodeViolationsIncrements   currentPathCodeViolationsIncrements   currentFrameLossSecondsIncrements   currentLineErrorSecondsIncrements   currentErroredSecondsIncrements   operationalStatusDown   lineProtocolStatusDown   loadGreaterThan90   reliabilityLessThan90   dataCarrierDetectsDown   dataSetReadyIsDown   dataTerminalReadyIsDown   requestToSendIsDown   clearToSendIsDown   outputQueueDropsRate   inputQueueDropsRate   inputRunsRate   inputGiantsRate   inputThrottlesRate   inputCrcErrorsRate   inputFrameErrorsIncrements   inputOverrunErrorsIncrements   outputLateCollisionsIncrements   inputIgnoredPacketsIncrements   inputAbortedPacketsIncrements   outputCollisionsRate   outputInterfaceResetsIncrements   outputDeferredIncrements   outputNoCarrierIncrements   outputCarrierTransitionsIncrements	local
<input type="checkbox"/> modemBasic	Rule for testing the internal modem	modemLineInUse   modemLineInUse	local
<input type="checkbox"/> recoverConsole	recovering the device when it has become unusable	consoleHung, cpuFiveMinuteAverageGreaterThan90, cpuOneMinuteAverageGreaterThan90	local

5 items found, displaying all items.

## Scheduling monitors

### Inventory > Local Manager > Port > Schedule Task

A monitor is a type of scheduled task. Monitors gather data and may apply rules to interpret and respond to the data. Monitors are created from the port pages on individual Local Managers.

To create a monitor:

- Go to **Inventory > Local Manager > Port >** and click **Schedule Task** to open the Schedule Task page.
- Select or create a filter to specify what equipment is monitored.
- Select **Monitor** from the list of tasks and click **Next**.

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > usaur1-att > Schedule Task

10101 usaur1-att (port1/1 on Pasadena)  
Last Event: 1h 3m

CLI Schedule Task

Summary  
Alarms  
Changes  
Events  
Files  
Labels  
Port Settings  
Properties  
▶ Reports  
▶ Devices

**Schedule Task** Next Cancel

Select Task

Task: ✓ Change Authentication  
Clear Counters  
Device Ping  
Download  
Interface  
Monitor  
Power  
Pull SFTP  
Pull TFTP  
Push Config  
Push OS  
Push SFTP  
Push TFTP  
Reboot  
Show Tech

4. On the Monitor - Parameters page, choose the type of monitor. If it is an interface monitor, specify the interface to be monitored - for example, GigabitEthernet0/1.
5. The monitor can be set up without adding rules. The Local Manager gathers and stores the data without acting on it. To do this, click **Next** to go to the scheduling page.
6. To create a monitor that uses rules to interpret and respond to the data as it is gathered, select a rule from the list of available rules and click **Add Rule**.
7. To add another rule, select the rule and its relation to the rule already added. Then click **Add Rule**.

**usausr1-att (port1/1 on Pasadena)**

Last Event: 2h 7m

CLI Schedule Task

- Summary
- Alarms
- Changes
- Events
- Files
- Labels
- Port Settings
- Properties
- ▶ Reports
- ▶ Devices

**Schedule Task - Parameters**

Next Cancel

**Monitor - Parameters**

- chassis
- consoleLog
- interface
- ping
- terminal

rules

- adminStatus
- adminStatusDown
- adminStatusIsDown
- adminStatusUP
- aisAlarmIncrements
- carrier
- clearToSendsDown
- consoleHung
- cpuFiveMinuteAverageGreaterThan90**
- cpuOneMinuteAverageGreaterThan90
- currentErroredSecondsIncrements

Add Rule

8. On the Monitor - Frequency page, specify the schedule for this monitor and optionally provide a brief description.
9. Click **Save**. The monitor runs as scheduled and appears on the Scheduled Tasks page.



The default interval for monitors is 30 seconds. However, this interval can be changed.

### Canceling monitors

To cancel a monitor:

1. Go to the Scheduled tasks page.
2. Locate the monitor to be canceled and click the **cancel** link. The canceled monitor continued to be shown but is struck out on the Scheduled tasks list.

## Applet Manual Out-of-Band modem connectivity via the “Dial” button

### Inventory > Local Manager Page > Configuration > Modem

This functionality executes a Java applet on the user’s workstation to connect asynchronously to a local managers modem.

If a circuit-switched service is available on the modem (POTS line or Iridium modem with voice service), an access server with modems can be configured to dial from the UCC Java applet into the Local Manager to establish a TTY (teletype) session.

Requirements for using this capability are:

- The Local Manager uses a circuit switched modem such as V.92 or Iridium.
- The Local Manager has been configured to answer the call when dialed and from a specific source phone number, the calling number has been specifically granted. These settings are configured with the `config answer` command.

In the example below, Cisco router is configured as a modem access server for the CLI Applet to connect to the Local Manager. From the Local Manager configuration menu, select **Modem** and enter the RAS information.

- Host: IP address or DNS Name of the host gateway. In the example below, the Iridium AS5350 gateway has been entered.
- Port Range: Port range assigned by host for remote access, or the ports on the access server that map to the modems.
- Phone Number: Enter the command for dialing (ATDI/ATDT/ATD) and the phone number with no spaces.
- Init String: Enter an optional initialization string with no spaces.
- Local Port: Local port on the workstation to be used with Forward on Connect.
- Forward on Connect: Check this box to forward the terminal session upon connection.

Once the access server information has been configured (in the Remote Access Server section), a blue Dial button appears in the Control Center. Click the Dial button to connect to the Local Manager via out-of-band, circuit switched phone number.



The Control Center CLI applet connects to the modem server with the information pre-programmed RAS section of the Local Manager Modem configuration.

## Managing accounts and security

The Upligix Control Center manages accounts, privileges, and authentication in much the same way that the Local Manager does. User and group accounts created on the server are inherited by managed Local Managers. Managing users and account security from the Upligix Control Center ensures consistency over your entire deployment.



Accounts created on the Local Manager are deleted when it contacts the Upligix Control Center.

In this chapter:

- [Working with user and group accounts](#)—create, edit, disable, and delete accounts
- [Managing privileges](#)—control what each user can do on the Upligix Control Center and the Local Managers it manages
- [Importing user, group, and privilege files](#)—automate account and privilege setup
- [Managing authentication](#)—specify how users authenticate; set password requirements

### Managing authentication

**Administration > AAA Settings**

**Inventory > Local Manager Detail > Configuration > Authentication**

The Upligix Control Center and Local Managers can perform user authentication, authorization, and accounting (AAA) functions locally or these functions can be deferred to one or more third-party AAA servers.

This section covers the following topics:

- [Setting authentication requirements globally or within the inventory](#)
- [Authentication, authorization, and accounting \(AAA\) settings](#)
- [Setting requirements for strong passwords](#)

## Setting authentication globally or within the inventory

Authentication/authorization/accounting settings for the Uplogix Control Center can be managed globally from the AAA Settings page under the Administration tab. They can also be customized for specific portions of the deployment (i.e., Local Managers) from the appropriate group within the inventory.

### Setting authentication globally or on the Uplogix Control Center only

To configure AAA settings for the Uplogix Control Center, and optionally for the entire inventory, go to **AAA Settings** under the Administration tab.

This page also includes strong password settings and other password-related settings such as lockout after login failure.

The screenshot displays the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The 'Administration' tab is selected. Below the navigation bar, the breadcrumb 'Administration > AAA Settings' is visible. On the left, a sidebar menu lists various settings categories, with 'AAA Settings' highlighted. The main content area is titled 'AAA Settings' and contains the following configuration options:

- Accounting type:  Only applies to appliances
- Manage 'admin' User:  Allows all appliances to have the same properties for 'admin'.
- Authentication Type:  Local  RADIUS  TACACS
- Authentication Method:  PAP  CHAP  MS-CHAP
- Use RADIUS/TACACS Authorization:  Use RADIUS/TACACS to assign users to groups.
- Create Users:  Create users that have a valid login but do not exist locally. (requires RADIUS/TACACS Authorization)
- Cache Passwords:  Save server passwords locally.
- Fail Over to Local:  If servers are down, authenticate locally.
- Limit Maximum Concurrent Sessions:  Only applies to appliances
- Maximum Number of Concurrent Sessions:  Only applies to appliances

Below these settings are three expandable sections: 'Authentication Servers', 'Accounting Servers', and 'Password Settings'. At the bottom of the page, there are two buttons: 'Save and Copy' and 'Save'. A checkbox labeled 'Force settings to all appliances in hierarchy' is located between these buttons.

For information on configuring accounting and authentication, see [Authentication, authorization, and accounting \(AAA\) settings](#).

- To apply changes on this page to the Uplogix Control Center only, click **Save**.
- To copy the changes on this page to the root-level inventory group, click **Save and Copy**. Like other inventory settings, the authentication settings do not overwrite existing locally created settings unless you force them to do so. It will overwrite changes made in the top level of the hierarchy, but not those made in child groups.
- To force the changes on this page on all Local Managers managed by this Uplogix Control Center, select **Force settings to all appliances in hierarchy** before clicking **Save and Copy**.

## Setting authentication within an inventory group

To configure AAA settings for an inventory group, open the detail page for that group and click **Authentication** from the Configuration menu to open the Authentication Settings page.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, Administration, and Search. The breadcrumb trail is Inventory > XYZCo\_TX > Austin > Uplogix Configuration. The main content area is titled "Inventory Group: Austin" and "Engineering Group". Below this are buttons for Edit, Reassign, Remove, and Remove Including Children. A left sidebar menu lists various configuration options, with "Authentication" highlighted in a red box. The main content area displays the "Authentication Settings" page, which includes a "Save" button and a "AAA Settings" section. The AAA Settings section contains the following options:

- Accounting type: none
- Authentication Type:  Local  RADIUS  TACACS
- Authentication Method:  PAP  CHAP  MS-CHAP
- Use RADIUS/TACACS Authorization:  Use RADIUS/TACACS to assign users to groups.
- Create Users:  Create users that have a valid login but do not exist locally. (requires RADIUS/TACACS Authorization)
- Cache Passwords:  Save server passwords locally.
- Fail Over to Local:  If servers are down, authenticate locally.
- Limit Maximum Concurrent Sessions:
- Maximum Number of Concurrent Sessions: 0

Below the AAA Settings section are expandable sections for "Authentication Servers" and "Accounting Servers". At the bottom of the page, there is a "Scope: inherited" label, a checkbox for "Force update on children", and a "Save" button.

Settings available on the Uplogix Configuration page are inherited by all the members of this inventory group, except where they would overwrite existing, locally configured settings. Select **Force update on children** to overwrite all existing settings.

For information on configuring accounting and authentication, see [Authentication, authorization, and accounting \(AAA\) settings](#).

## Setting authentication for a single Local Manager

To configure AAA settings for a single Local Manager, navigate to the Local Manager and select **Authentication** from the **Configuration** menu.

## Authentication, authorization, and accounting (AAA) settings

**Administration > AAA Settings**

**Inventory > Group Detail > Configuration > Authentication**

**Inventory > Local Manager > Configuration > Authentication**

Authentication/authorization/accounting settings can be managed globally from the AAA Settings page under the **Administration** tab. They can also be customized for specific portions of the deployment from the appropriate group or Local Manager within the inventory. Navigate to the appropriate page to configure AAA settings.

### Accounting settings

Accounting events can be sent to a configured TACACS or RADIUS server using the start-stop (before and after each command) or the stop-only (after each command) model. This setting is not available if local authentication is used. Accounting applies to Local Managers only; however, you can set it for all Local Managers by navigating to **Administration > AAA Settings**.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory (selected), Alarms, Schedule, Reports, and Administration. Below the navigation bar, the breadcrumb path is "Inventory > XYZCo\_TX > Austin > Uplogix Configuration". The main content area is titled "Inventory Group: Austin" and includes buttons for Edit, Reassign, Remove, and Remove Including Children. A left-hand navigation menu lists various configuration options, with "Authentication" selected. The main content area displays "Authentication Settings" with a dropdown for "AAA Settings". The Accounting type dropdown is open, showing options: none (selected), start-stop, and stop-only. Other settings include Authentication Type (RADIUS/TACACS), Authentication Method (PAP selected), and checkboxes for Use RADIUS/TACACS Authorization, Create Users, and Cache Passwords.

### Managing the Local Managers' admin account

**Administration > AAA Settings**

For security, the default admin account that is part of every Local Manager's factory configuration can be limited or disabled.

To make the admin account editable, select **Manage 'admin' user** from the **Administration > AAA** page. This adds admin to the list of users on the **Administration > Users** page, providing a simple way to change the admin password on all Local Managers or otherwise modify this account. If this choice is not selected, the admin account is not listed on the **Administration > Users** page.

## Authentication settings

Most authentication settings available through the Uplogix Control Center mirror those available through the `config system authentication` command in the Uplogix LMS command line. They include the ability to select the type of authentication, to specify the necessary configuration information for each type, and to limit the number of concurrent sessions per account.

All authentication settings available at the individual Local Manager level are also available at the inventory group level and globally. Some additional settings are available at the inventory group or global levels.

AAA Settings Save

AAA Settings

Accounting type: none Only applies to appliances

Manage 'admin' User:  Allows all appliances to have the same properties for 'admin'.

Authentication Type:  Local  RADIUS  TACACS

Authentication Method:  PAP  CHAP  MS-CHAP

Use RADIUS/TACACS Authorization:  Use RADIUS/TACACS to assign users to groups.

Create Users:  Create users that have a valid login but do not exist locally. (requires RADIUS/TACACS Authorization)

Cache Passwords:  Save server passwords locally.

Fail Over to Local:  If servers are down, authenticate locally.

Limit Maximum Concurrent Sessions:  Only applies to appliances

Maximum Number of Concurrent Sessions: 0 Only applies to appliances

Authentication Servers

Accounting Servers

Password Settings

Save and Copy  Force settings to all appliances in hierarchy Save

Authentication Type and Method: Select the type of authentication to use. Local, RADIUS, and TACACS are available. If using TACACS or RADIUS, select the authentication method as well. PAP, CHAP, and MS-CHAP are available.



If the Uplogix Control Center is configured to use one or more authentication servers, or accounting servers, the managed Local Managers can use the same servers, if desired. Optionally the Uplogix Control Center will maintain password synchronization with AAA servers and distribute changes to each local manager as they are updated.

Use RADIUS/TACACS Authorization: Some AAA servers support returning authorization keys that can be used by the Uplogix Control Center to assign privileges to users. For information on configuring this, see [Using RADIUS/TACACS to manage privileges](#).

Create Users: If users are managed on the authentication server, they are able to authenticate but not have accounts on the Uplogix Control Center or Local Manager. If this setting is enabled, the user is created. If RADIUS/TACACS authorization is not used, users initially have no privileges - so they are not able to log in, as this requires the `login` privilege.

Cache Passwords: Enable this setting if the Uplogix Control Center is configured to use authentication server(s) and Fail Over to Local is selected. This allows users to use a previously saved password if no authentication server is available and the Uplogix Control Center fails over to local authentication.

Fail Over to Local: Enable this setting to allow the Uplogix Control Center to authenticate users locally when no configured authentication server is available. When using this setting, enable Cache Passwords to make the passwords available for local authentication.

Limit Maximum Concurrent Sessions and Maximum Number of Concurrent Sessions: These settings allow you to limit the number of open sessions that any user may have on any particular Local Manager at a given time. Set the maximum number to 0 to allow unlimited concurrent sessions.

## Authentication and accounting servers

If the Uplogix Control Center or Local Managers are configured within the inventory to use RADIUS or TACACS, at least one of the appropriate type of server must be configured. Up to four authentication servers and up to four accounting servers can be specified for redundancy. All must be of the same type, either RADIUS or TACACS. If an authentication server fails to respond, the next server is queried; the first response determines whether the authentication is successful.

For each server, enter the IP address and port; then enter and confirm the secret. For RADIUS servers, the default port is 1645 or 1812; for TACACS, the default port is 49.

To remove server information already configured, click the **Clear** button associated with that server.

The screenshot shows two sections: 'Authentication Servers' and 'Accounting Servers'. Each section contains a table of configuration fields for up to four servers. The 'Authentication Servers' section has four rows, each with fields for IP, Secret, Port, and Confirm Secret, and a 'Clear' button. The 'Accounting Servers' section has two rows, each with fields for IP, Secret, Port, and Confirm Secret, and a 'Clear' button.

## Choosing how to apply AAA changes

When making changes on the **Administration > AAA** page, apply them in three ways:

- Update AAA settings only on the Uplogix Control Center—click **Save**.
- Update AAA settings on the Uplogix Control Center and at the root level of the inventory without changing settings on Local Managers currently in the inventory—click **Save and Copy**.
- Update AAA settings globally, overwriting existing settings on the Uplogix Control Center and all Local Managers—select **Force settings to all appliances in hierarchy**, then click **Save and Copy**.

The screenshot shows a horizontal bar with a 'Save and Copy' button on the left, a checkbox labeled 'Force settings to all appliances in hierarchy' in the middle, and a 'Save' button on the right.

When making changes at the inventory group level from the Authentication page, apply them without changing settings on Local Managers currently in the group or overwrite the Local Managers' authentication settings.

- Update AAA settings for the group without changing settings on Local Managers currently in the inventory—click **Save**.
- Update AAA settings for the group, overwriting existing settings on all Local Managers in the group and its child groups—select **Force updates on children**, then click **Save**.

Scope: inherited  Force update on children **Save**

## Setting requirements for strong passwords

Configure strong passwords at any level within the inventory, on the Ulogix Control Center only, or globally. The password requirements can be tailored separately for different groups or Local Managers within the deployment. For a detailed description of how to apply settings globally or within a subset of the deployment, see [Setting authentication globally or within the inventory](#).

Global or Ulogix Control Center only: **Administration > AAA Settings**

Inventory group: **Inventory > Group Detail > Configuration > Passwords**

Single Local Manager: **Inventory > Local Manager > Configuration > Passwords**

For password restrictions to take effect, **Use Strong Passwords** must be selected. To remove strong password restrictions temporarily, clear **Use Strong Passwords** while leaving the restrictions configured.

Authentication Servers  
 Accounting Servers  
 Password Settings

Use strong passwords:   
 Require mixed case:   
 Require numbers and punctuation:   
 Reject variation of login id:   
 Reject word in dictionary:   
 Reject standard substitutions:  (@ for a, 3 for e, etc)  
 Reject sequences in numbers or letters:  (qwerty)  
 Reject previous password:   
 Number of previous passwords to check: 6   
 Reject single character difference from previous password:   
 Enforce minimum password length:   
 Minimum password length: 6   
 Expire password:   
 Number of valid days: 30   
 Number of invalid attempts before lockout: 0  Only applies to appliances  
 Lockout duration in minutes: 0  Only applies to appliances

Force settings to all appliances in hierarchy

Restrictions include:

Setting	Description
Require mixed case	Password must have both capital and lowercase characters  Valid password example: PassWord
Require numbers and punctuation	Password must include at least one numeral and at least one symbol.  Valid password example: P@ssw0rd
Reject variation of Login ID	Password cannot be derived from the login ID  Invalid Example: admin1
Reject variation of previous passwords	Obvious variations on the previous password will be rejected. The following examples assume that the previous password was P@ssw0rd  <ul style="list-style-type: none"> <li>- change of case only; p@SSw0rD will be rejected</li> <li>- reversed character sequence; dr0Wss@P will be rejected</li> <li>- doubled sequence; P@ssw0rdP@ssw0rd will be rejected</li> <li>- string containing the earlier password; myP@ssw0rd! will be rejected</li> </ul>
Reject word in dictionary  Reject standard substitutions (@ for a, 3 for e, etc.)	If both options are selected, users may not set passwords such as p@\$\$w0rd.  Valid password example: P&ssw*r#
Reject sequences in numbers or letters	Users may not set passwords that consist of all the letters or numbers on one row of the keyboard, in sequence either from left to right or right to left, or a character string that contains such a sequence. Partial or broken sequences such as abc!defg or qwerty12 may be used.
Reject previous password  Number of previous passwords to check	Recently used passwords may not be reused
Reject single character difference from previous password	When changing a password, at least two characters must be changed
Enforce minimum password length  Minimum password length	Keeps users from setting passwords short enough to be easily guessed.
Expire password  Number of valid days	Forces users to change their passwords periodically.

Setting	Description
Number of invalid attempts before lockout	Specify the maximum number of times a user can attempt to log into a Local Manager before the Local Manager refuses further attempts, and the length of the lockout period. Set the number of attempts to 0 to disable lockout protection. The default lockout time is 30 minutes. These settings apply only to Local Managers, not to the Uplogix Control Center.
Lockout duration in minutes	



Do not create a password that ends with a space character. When an attempt is made to log into a Local Manager using a password that ends with a space, the Local Manager strips the space character and the login fails.

## Working with user and group accounts

### Administration > Users

Use the Users and Groups pages under the Administration tab to manage accounts. The options on the Create/Edit User and Create/Edit Group pages are the same as those found in the LMS commands `config user` and `config group`.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, and Administration (selected). Below the navigation bar, the breadcrumb path is Administration > Users. On the left, a sidebar menu lists various settings: Appliances, AAA Settings, File Archive, Groups, Import, Licenses, Roles, Server Privileges, Server Settings, and Users (selected). The main content area is titled 'Users' and features a search bar, 'Add' and 'Remove' buttons, and a table of users. The table has columns for checkboxes, User ID, Email Address, Server Login, Disabled, and Description. Below the table, it states '8 items found, displaying all items.'

	User ID	Email Address	Server Login	Disabled	Description
<input type="checkbox"/>	ETHompson	ethompson@xyzco.com	no	yes	
<input type="checkbox"/>	Jason		no	no	
<input type="checkbox"/>	Jose		yes	no	
<input type="checkbox"/>	Paul		no	no	
<input type="checkbox"/>	administrator		yes	no	Server .
<input type="checkbox"/>	ajones		yes	no	
<input type="checkbox"/>	athompson		yes	no	
<input type="checkbox"/>	scott		yes	no	

Accounts that exist locally on a Local Manager are deleted when the Local Manager makes contact and synchronizes with the Uplogix Control Center. Accounts cannot be managed locally through the LMS command line if the Local Manager is managed by an Uplogix Control Center.

There is an exception for users whose passwords expire. If you log into a Local Manager with an expired password, the command line prompts for a new password. When you set the password, it is pushed up to the Uplogix Control Center.

User account management tasks include:

- [Creating and editing user accounts](#)
- [Creating and editing group accounts](#)
- [Disabling user accounts](#)
- [Deleting accounts](#)


## Creating and editing user accounts

### Administration > Users

To add a new account, click **Add**.

To edit an existing user account, click the **User ID**. When an existing user is edited, the **Edit User** page displays a timestamp showing when the account was created. The account name cannot be edited.

Search the list of users by entering a text string in the search box, select the type of search, and click **Search**.

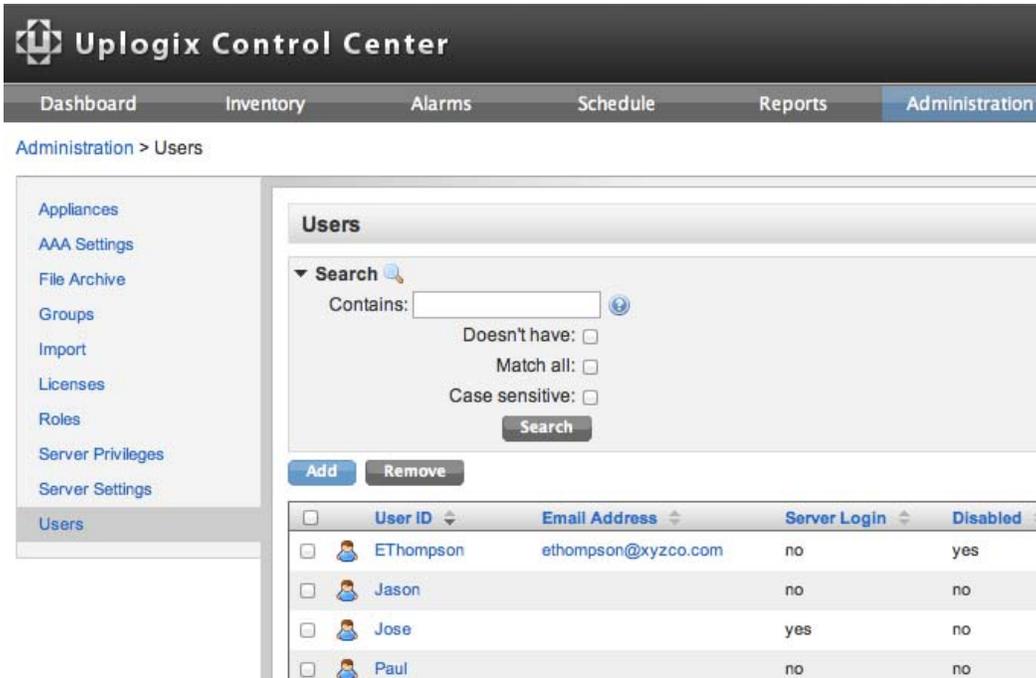

<input type="checkbox"/>	User ID	Email Address	Server Login	Disabled
<input type="checkbox"/>	EThompson	ethompson@xyzco.com	no	yes
<input type="checkbox"/>	Jason		no	no
<input type="checkbox"/>	Jose		yes	no
<input type="checkbox"/>	Paul		no	no

Complete the fields needed to create the account and set it up appropriately for your environment.



Account names must be unique. For example, if there is a group account called `sysadmin`, a user account called `sysadmin` cannot be created.



Use only printing characters when completing text fields. Spaces are considered printing characters, but may only be used in the description field.



Do not create a password that ends with a space character. When an attempt to log into a Local Manager is made using a password that ends with a space, the Local Manager strips the space character and the login fails.



If the Time Zone setting for a user account is changed while that user is logged in to a Local Manager, the change does not take effect on that Local Manager until the user ends the session.

Click **Save** when finished setting up the account information.

Initially, user accounts have no privileges so the new user cannot log into the Upligix Control Center or to the Local Managers within the deployment. Privileges must be assigned to the new user account to allow the user to work with elements of your deployment. See [Managing privileges](#).

Some users may need to receive alerts, reports, or audit other accounts. For information about setting up these functions, see [Setting up email, auditing and report subscriptions](#).


Several users can be created at once by importing a user file. See [Importing user, group, and privilege files](#).

## Creating and editing group accounts

### Administration > Groups

Use the Uplogix Control Center to create and manage group accounts across multiple Local Managers to ensure a consistent user group organization and privilege policy.

To create or edit a group account, select **Groups** from the left menu under the Administration tab. Existing groups are displayed in the Group box.

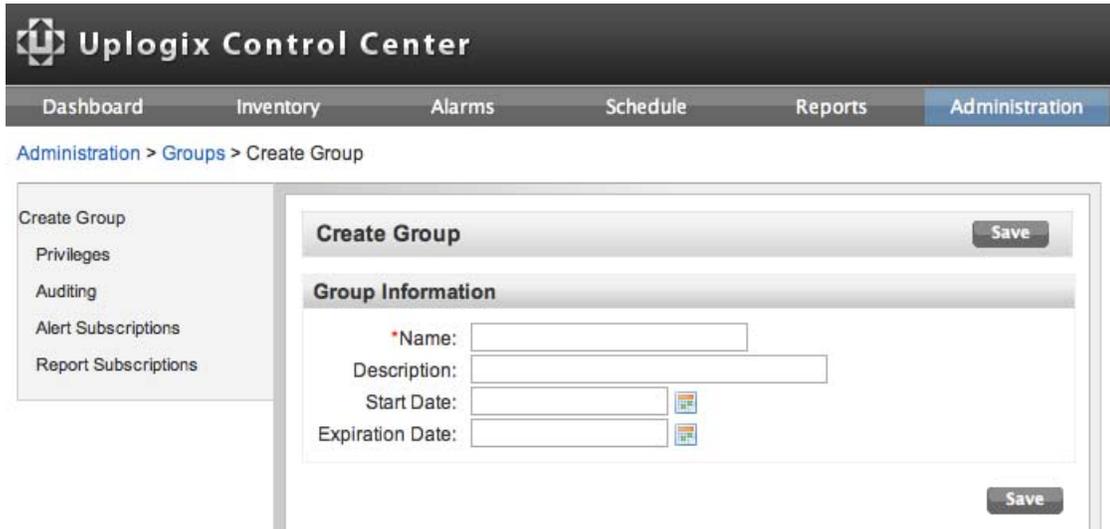

To create a new group, click **Add**. Specify a name for the group and optionally provide a description as well as a start and expiration date.

To edit an existing group, click the **Group ID**. This is equivalent to issuing the `config group` command from the Uplogix LMS command line. When an existing group is edited, the **Edit Group** page displays a timestamp showing when the account was created.



Account names must be unique. For example, if there is a user account called `sysadmin`, a group account called `sysadmin` cannot be created.



Use only printing characters when completing text fields. Spaces are considered printing characters, but may only be used in the **description** field.

Once the group is created, add users or other groups as members of this group. Members of the group inherit group-related settings such as privileges.

The screenshot shows the 'Edit Group: InstallTeam' interface. At the top, there's a navigation bar with 'Administration' selected. Below it, a breadcrumb trail reads 'Administration > Groups > InstallTeam'. On the left, a sidebar lists options: 'InstallTeam', 'Privileges', 'Auditing', 'Alert Subscriptions', and 'Report Subscriptions'. The main content area is titled 'Edit Group: InstallTeam' with a 'Save' button. It contains several sections:
 

- Group Information:** Fields for Name (pre-filled with 'InstallTeam'), Description, Start Date, and Expiration Date. An 'Add To Group' button is at the bottom.
- Email Addresses:** A section with a 'Count: 0' indicator.
- Children: Users:** A section with a 'Count: 4' indicator. It includes 'Add' and 'Remove' buttons and a list of users: 'User', 'EThompson', 'Jason', 'Paul', and 'ajones', each with a checkbox.
- Children: Groups:** A section with a 'Count: 0' indicator. It includes 'Add' and 'Remove' buttons and a message: 'There are no child groups in group InstallTeam.'

 A 'Save' button is located at the bottom right of the main content area.

The Available Users and Available Groups list are populated with information from the Uplogix Control Center database. To add a new member to a group, the new user or group must first exist in the database. Click **Add** and select the user or group from the pop-up window as appropriate.

Click **Save** to save the group. Initially, User groups are automatically inherited by Local Managers. Initially, group accounts have no privileges so members of the group have only the permissions assigned to their individual accounts. Group privileges must be assigned to the new user account to allow the user to work with elements of your deployment. See [Managing privileges](#).

The group may need to receive alerts, reports, or audit other accounts. For information about setting up these functions, see [Setting up email, auditing and report subscriptions](#).

Several groups can be created at once by importing a group file. See [Importing user, group, and privilege files](#).

## Disabling user accounts

### Administration > Users

To suspend access to a user account without deleting the account, go to **Administration > Users** and select the User ID for the account to be edited.

On the Edit User screen, select **Disabled** and click **Save**.

The screenshot shows the 'Edit User: EThompson' interface. The user's status is 'Disabled', indicated by a checked checkbox. The 'Save' button is visible at the top right of the form.

**Edit User: EThompson**  
Created: 04/24/2013 19:21:17

**User Information**

\*Name: EThompson  
Password: .....  
Confirm: .....  
Description: .....  
Disabled:   
Time Zone: (-6:00) US/Central Use DST   
Start Date: .....  
Expiration Date: .....  
Add To Group

**Email Addresses** Count: 1

**Authorized Keys**

Save

The user is not able to log in while the account is disabled. The status of Disabled displays in the user list.

The screenshot shows the 'Users' list in the Uplogix Control Center. The 'Disabled' column shows 'yes' for the user EThompson, which is highlighted with a red box.

**Users**

Search  
Contains: .....  
Doesn't have:   
Match all:   
Case sensitive:   
Search

Add Remove

User ID	Email Address	Server Login	Disabled	Desc
EThompson	ethompson@xyzco.com	no	yes	
Jason		no	no	

If the user is logged in when their account is disabled, the user is logged out immediately.

## Deleting accounts

**Administration > Users**

**Administration > Groups**

To delete an account, click the check box associated with the User ID or Group ID and select Remove. This is equivalent to using the LMS commands `config user no [username]` and `config group no [groupname]` on a Local Manager not managed by an Uplogix Control Center.



**Caution:** There is no delete confirmation.

## Managing privileges

Permissions, roles, and privileges are defined as follows:

- **Permission:** Ability to use a specific command or capability; can be allowed or denied in a role definition
- **Role:** A named set of permissions that a user is permitted to execute, such as `admin`
- **Privilege:** A role assigned to a specific account for a specific resource, such as "admin on system" or "guest on port 1/4"



Some permissions, such as `config hierarchy`, are not associated with specific commands but provide override ability and should be used sparingly.

The Uplogix Control Center restricts access to features based on a user's privileges. For example, if a user does not have a role that includes permission to use the `config system ip` command, the IP configuration link is unavailable for that user on the Local Manager detail Page.

All aspects of working with the Uplogix Control Center and the equipment it manages are affected by account privileges. By default, user and group accounts have no privileges.

The administrator account on the Uplogix Control Center has admin access to all features of the server, but no privileges on individual Local Managers. So administrator cannot log into a Local Manager. Conversely, the admin account on Local Managers has no privileges on the Uplogix Control Center. However, the administrator account has the `config hierarchy` permission, which allows the administrator to manage individual Local Managers through the Uplogix Control Center.

In this section:

- [Adding server privileges to accounts](#)
- [Adding inventory privileges to accounts](#)
- [Viewing and deleting user account privileges](#)
- [Creating and customizing roles](#)
- [Using TACAS to manage privileges](#)
- [Creating a superuser](#)
- [Limiting a user's access to one port on one system](#)

## Adding server privileges to accounts

### Administration > Server Privileges

When a new user or group account is created, the account has no privileges. To log into the Uplogix Control Center and work with its web interface, users must have appropriate levels of server privileges.

Privileges on the Uplogix Control Center are assigned separately from privileges on the equipment in the inventory. Both are needed if a user is to use the Uplogix web interface to work with Local Managers and to access Local Managers individually via SSH.

Privileges can be assigned to several users at once by importing a permissions file. See [Importing user, group, and privilege files](#).

To assign server privileges, go to the Server Privileges page on the Administration tab.

Administration > Server Privileges

Server Privileges

Principal: EThompson | Role: admin

Add

Remove

User/Group	Role
<input type="checkbox"/> Jose	admin
<input type="checkbox"/> administrator	admin
<input type="checkbox"/> ajones	admin
<input type="checkbox"/> athompson	admin
<input type="checkbox"/> scott	admin

5 items found, displaying all items.

Unlike inventory privileges, server privileges only apply to one resource - the Uplogix Control Center.

Select a user or group from the User/Group list, select a role, and click **Add**. Groups are listed first, followed by users. An \* after the group name indicates a group.

As with Local Manager privileges, more than one role can be assigned to an account to tailor that account's privileges.

## Adding inventory privileges to accounts

### Inventory > Group Detail > Configuration > Privileges

When a new user or group account is created, the account has no privileges. Set an account's privileges to apply to all Local Managers in the inventory by assigning them at the root level or limit privileges to specific inventory groups.



Inventory privileges are limited to Local Managers in the inventory, and the devices they control. Server privileges must be assigned separately. See [Adding server privileges to accounts](#). To manage the inventory through the Uplogix Control Center, users must have server privileges.

Privileges can be assigned to several users at once by importing a permissions file. See [Importing user, group, and privilege files](#).

To add inventory privileges, select the appropriate inventory group from the Inventory page and click **Privileges** under the Configuration menu.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, Administration, and Search. The breadcrumb trail is Inventory > XYZCo\_TX > Austin > Privileges. The main content area is titled "Inventory Group: Austin" and "Engineering Group". It features buttons for Edit, Reassign, Remove, and Remove Including Children. A left sidebar lists various configuration options, with Privileges selected. The main area displays the Privileges configuration table:

Resource	Principal	Role
all	EThompson	admin

Below the table are buttons for Add and Remove. A section titled "Inherited Privileges" shows a table with the following data:

Node	Resource	User/Group*	Role
XYZCo_TX	all	ajones	admin

Use the Privilege List page to assign privileges to accounts in the form of defined roles and to specify the resources where each role is applied – all, system, modem, or powercontrol. If labels have been created, these are available as resources also.

Select a user or group from the User/Group list, select a role, and click **Add**. Groups are listed first, followed by users. An \* after the group name indicates a group.

More than one role can be assigned to an account and be given different roles on different resources.

**Inventory Group: Austin**  
Engineering Group

Buttons: Edit, Reassign, Remove, Remove Including Children

Summary

- Configuration
  - Applet
  - Archive
  - Authentication
  - Banners
  - Default Port Settings
  - DNS
  - Email
  - Export
  - LCD
  - Modem
  - NTP
  - Passwords
  - PPP
  - Privileges**
  - Protocols
  - Pulse

**Privileges**

Resource	Principal	Role
all	ETHompson	admin

Buttons: Add

There are no privileges.  
No items found.

**Inherited Privileges**

Node	Resource	User/Group*	Role
XYZCo_TX	all	ajones	admin
XYZCo_TX	all	athompson	admin

To remove privileges at the port level, select a Local Manager from the inventory and select **Privileges** from Configuration menu.

Use the Local Manager's Privilege List to add or delete user roles by individual resource.

**Pasadena (192.0.2.1)**  
Last Alarm: 2h 51m | Last Event: 7m

Buttons: CLI, Dial, Schedule Task, Edit, Reassign, Replace, Remove

Summary

- Alarms
- Events
- Scheduled Tasks
- Session Logs
- SLV Stats
- Configuration
  - Applet
  - Archive
  - Authentication
  - Banners
  - Default Port Settings
  - DNS
  - Email
  - Export
  - IP
  - IPv6
  - IPT
  - LCD
  - Modem
  - NTP
  - Passwords
  - PPP
  - Privileges**
  - Proprietary

**Privileges**

Resource	Principal	Role
all	admin	admin

Buttons: Add

Remove

Resource	User/Group	Role	Inherited
all	admin	admin	
all	ajones	admin	*
all	athompson	admin	

3 items found, displaying all items.


If the pre-configured standard roles do not meet your organization's needs, create roles to meet the specific requirements of your deployment. See [Creating and customizing roles](#).

## Viewing and deleting user account privileges

### Administration > Users

To view or edit a user's privileges, click the **user id** and then select **Privileges** from the left menu.

Use the user privileges detail to see and delete specific privileges. In the example below, the user EThompson has admin privileges assigned locally on Local Manager Pasadena, and inherited guest privileges that have been assigned at the inventory group level.

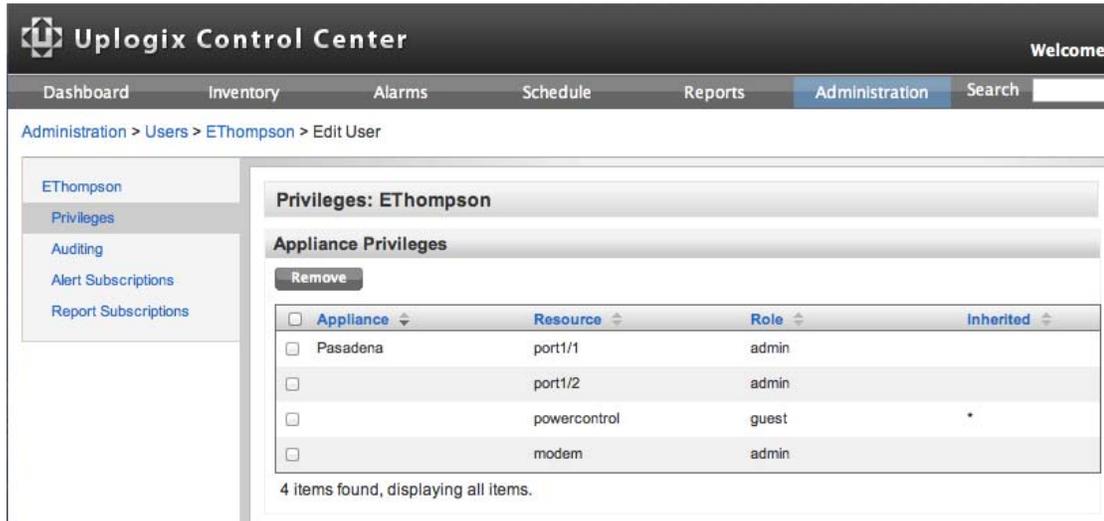

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, Administration (selected), and Search. The breadcrumb trail is Administration > Users > EThompson > Edit User. The left sidebar menu shows EThompson, Privileges (selected), Auditing, Alert Subscriptions, and Report Subscriptions. The main content area is titled 'Privileges: EThompson' and contains a section for 'Appliance Privileges' with a 'Remove' button. Below this is a table with columns for Appliance, Resource, Role, and Inherited. The table lists four items: Pasadena (port1/1, admin), Pasadena (port1/2, admin), powercontrol (guest, inherited), and modem (admin). A footer note states '4 items found, displaying all items.'

<input type="checkbox"/>	Appliance	Resource	Role	Inherited
<input type="checkbox"/>	Pasadena	port1/1	admin	
<input type="checkbox"/>	Pasadena	port1/2	admin	
<input type="checkbox"/>		powercontrol	guest	*
<input type="checkbox"/>		modem	admin	

## Creating and customizing roles

### Inventory > Configuration > Roles

A role is a set of commands that a user is permitted to execute. When privileges are assigned to a user or group account, the account is associated with one or more roles on one or more resources. See [Adding inventory privileges to accounts](#).

The Uplogix Control Center provides the same predefined roles that are available in the Uplogix LMS CLI. In addition to these standard roles, custom roles can be defined to suit your deployment. Roles may be created at the root level to apply globally or they may be created within an inventory group to apply only to that group and its child groups.

To view a list of roles defined for any given inventory group, select the group from the inventory list and click **Roles** under the Configuration menu.

On the View Roles page, click **Add** to add a role or select the **Role ID** to edit an existing role. This is equivalent to issuing the `config role` command from the Uplogix LMS command line.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with the following tabs: Dashboard, Inventory (selected), Alarms, Schedule, Reports, Administration, and Search. Below the navigation bar, the breadcrumb path is "Inventory > XYZCo\_TX > Roles". The main content area is titled "Inventory Group: XYZCo\_TX" and "Example Customer". There is an "Edit" button. On the left, there is a sidebar menu with the following items: Summary, Configuration (expanded), Applet, Archive, Authentication, Banners, Default Port Settings, DNS, Email, Export, LCD, Modem, NTP, Passwords, PPP, Privileges, Protocols, Pulse, Roles (selected), and Rules. The main content area shows the "Roles" configuration page. It has three buttons: "Add", "Remove", and "Import Role XML File". Below the buttons is a table with the following columns: "Role", "Description", "Active", and "Scope". The table contains two rows: "admin" and "guest". Below the table, it says "2 items found, displaying all items."

The role name is required when creating a new role.



Use only printing characters when completing text fields. Spaces are considered printing characters, but may only be used in the description field.

Specify the role permissions by selecting them from the Available Permissions list and using the **Add Allow** and **Add Deny** buttons.

To select more than one permission at a time, use shift-click on the first and last items in a range or use control-click to select permissions separately.

The screenshot displays the 'Create Role' configuration interface in the Uplogix Control Center. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The breadcrumb trail indicates the path: 'Inventory > XYZCo\_TX > Roles'. The main content area is titled 'Inventory Group: XYZCo\_TX' and 'Example Customer'. A left-hand navigation pane lists various configuration categories, with 'Roles' currently selected. The 'Create Role' form contains the following sections:

- Role Information:** Fields for Name (set to 'Basic'), Description, Start, and End.
- Permissions:** A list of available permissions, with 'show system timeout' highlighted. The list includes: show system management, show system ntp, show system page-length, show system properties, show system protocols, show system pulse, show system serial, show system slot, show system snmp, show system subinterface, show system syslog-options, show system timeout, show tech, show user, show version, show vpn, show who, show xbrowser, shutdown, and squeeze.
- Buttons:** 'Add Allow >>', 'Add Deny >>', and '<< Remove' buttons are used to manage the role's permissions.
- Global Options:** A checkbox for 'Force update on children' and a 'Save' button are located at the top right of the form.

As with many other settings, when a role is created it is automatically inherited by any Local Managers and child groups within the current inventory group. If a role with the same name already exists on a Local Manager or child group within the current inventory group, select **Force update on children** to overwrite it.

Once the privileges for the role are defined, click **Save**.

## Using RADIUS/TACACS to manage privileges

Setting up a user account to use a RADIUS or TACACS ACL allows the TACACS server to send group member information in the initial login transaction. To use this feature, the account must be set up on the RADIUS/TACACS server.

The general procedure is as follows:

1. Configure the Uplogix Control Center to use RADIUS or TACACS.
2. Set up a user group and associate a RADIUS or TACACS ACL to it.
3. Assign at least one role to give the group the desired set of permissions; create a suitable role if necessary.

These steps are described in detail below.



If AAA functions are delegated to an external server, create a user with the admin role on the Uplogix Control Center and add that account on the external server beforehand. If no user has the admin role on the Uplogix Control Center, the administration functions are not accessible.

## Set up authentication

On the **Administration > AAA Settings** page, set up the Authentication Settings as follows:

1. Under Authentication Type, select RADIUS or TACACS.
2. Select the appropriate authentication method.
3. Select **Use RADIUS/TACACS Authorization**.
4. If you want to automatically create Uplogix user accounts for users defined in your AAA server, choose Select **Create Users**.
5. Enter the IP address and shared secret for each AAA server. Up to four servers may be specified.
6. Optionally, select **Cache Passwords** to ensure that user accounts, passwords and privileges will still be available if the AAA server is offline during a future login authentication/authorization.

The screenshot shows the 'AAA Settings' configuration page. At the top right is a 'Save' button. Below the title is a dropdown menu for 'AAA Settings'. The main configuration area includes the following options:

- Accounting type: none (dropdown), Only applies to appliances
- Manage 'admin' User:  Allows all appliances to have the same properties for 'admin'.
- Authentication Type:  Local  RADIUS  TACACS
- Authentication Method:  PAP  CHAP  MS-CHAP
- Use RADIUS/TACACS Authorization:  Use RADIUS/TACACS to assign users to groups.
- Create Users:  Create users that have a valid login but do not exist locally. (requires RADIUS/TACACS Authorization)
- Cache Passwords:  Save server passwords locally.
- Fail Over to Local:  If servers are down, authenticate locally.
- Limit Maximum Concurrent Sessions:  Only applies to appliances
- Maximum Number of Concurrent Sessions: 1 (input field), Only applies to appliances

At the bottom of the page is a section for 'Authentication Servers' with a right-pointing arrow.

When a user logs in to the Uplogix Control Center with Cache Passwords enabled, the Uplogix Control Center verifies the password with the authentication server and then updates the user account (caching) on the Control Center. Since the account is updated, this change gets pushed down to all the Local Managers, changing the user's password on Local Managers throughout the inventory.

Using this method, the Uplogix Control Center can be configured to use AAA, but the Local Managers don't have to. The Local Manager receives the user's new password via the Uplogix Control Center and authenticates locally with the password received remotely. Although the user logs into the Local Manager with the account's TACACS password, the Local Manager is not really contacting the TACACS server.

In this scenario, if the user's password changes on TACACS, it is not updated on the Local Managers in the inventory until the user logs into the Uplogix Control Center to cache the new password. At this time it is pushed to the Local Managers. Evaluate whether this is a suitable approach for your environment.



Uplogix User passwords are encrypted on the Uplogix Control Center and Local Manager using AES encrypted with a one-way salt.

## Create a group and assign a TACACS ACL

The group provides a means to associate roles to the TACACS ACL.

1. Under **Administration > Groups** create a group. Users do not need to be added to the group.
2. Enter a name or a number that means something to you in the in the TACACS ACL field.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', 'Administration', and 'Search'. The 'Administration' menu is expanded to show 'Groups > InstallTeam'. The main content area is titled 'Edit Group: InstallTeam' and includes a 'Save' button. The group information section shows the name 'InstallTeam', description 'InstallersRock', and fields for 'Start Date' and 'Expiration Date'. Below this is an 'Add To Group' button. The 'Email Addresses' section shows a count of 0. The 'Children: Users' section shows a count of 4 and a list of users: ETHompson, Jason, Paul, and ajones, each with a checkbox and a 'Remove' button. The 'Children: Groups' section shows a count of 0 and 'Add' and 'Remove' buttons.

3. Assign suitable roles to the group. See [Adding server privileges to accounts](#) and [Adding inventory privileges to accounts](#). Users are not able to authenticate until they have roles.

## Enable authorization on an existing TACACS user

Once the user is created and is able to authenticate to the Local Manager, authorization can be added by adding an ACL under the "Exec" service in your user or group. In most Unix TACACS deployments, the users file can be edited and the following lines can be added to either the group or the user:

```
service = exec {  
acl = <acl name/number from Uplogix Control Center group>  
}
```

Refer to your TACACS administrator guide for more specific examples of configuration required for this functionality.

## Enabling authorization on a TACACS user with Cisco ACS

To enable authorization on an existing TACACS user with Cisco ACS:

1. On your ACS, create a group for your users and then edit it by clicking **Edit Settings**.




**Group Setup**

Select

Group : 2: SupportGroup (4 users) ▼

Users in Group Edit Settings Rename Group

2. Edit this group to include the following options: Shell (exec) and Access control list.

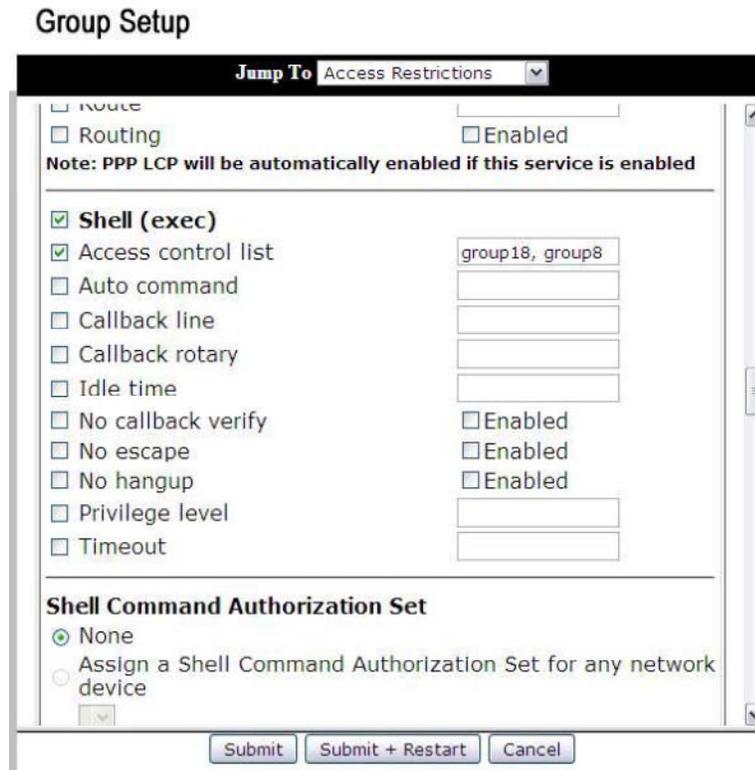

**Group Setup**

Jump To Access Restrictions ▼

Route  Routing  Enabled

Note: PPP LCP will be automatically enabled if this service is enabled

Shell (exec)

Access control list group18, group8

Auto command

Callback line

Callback rotary

Idle time

No callback verify  Enabled

No escape  Enabled

No hangup  Enabled

Privilege level

Timeout

**Shell Command Authorization Set**

None

Assign a Shell Command Authorization Set for any network device

Submit Submit + Restart Cancel

3. Add a list of groups that you wish your users to be a part of, and then click **Submit + Restart**.

## Associate the ACL to users on the RADIUS Server

Create new users or add the ACL to existing users.

- The RADIUS Vendor specific attribute (VSA) "Uplogix-Version" is used to configure information specific to Uplogix.
- A new field called "Uplogix-User-Groups" in the VSA to hold a user's group information should be created.
  - The field can contain a single group name or comma-separated list of groups.
  - The group names must be established and configured on the Uplogix system separately from the RADIUS configuration.
  - On successful login on RADIUS, the VSA for Uplogix will be returned with the RADIUS response to the Uplogix device.

These steps are described in detail below.

- The Radius Dictionary contains these fields and is also available from the Uplogix support site.

```
Uplogix          10243
BEGIN VENDOR    Uplogix
ATTRIBUTE       Uplogix Version          1   string
ATTRIBUTE       Uplogix User Groups     3   string
ATTRIBUTE       Uplogix CLI Command     4   string
ATTRIBUTE       Uplogix Envoy Serial    5   string
ATTRIBUTE       Uplogix Task ID         6   string
END VENDOR      Uplogix
```

### Example: Creating a superuser

The Uplogix Control Center is a resource, just as Local Managers and their ports, modems, and power controllers are resources. Users cannot log into the Uplogix Control Center until they have privileges.

The administrator account on the Uplogix Control Center has admin access to all features of the server, but no privileges on individual Local Managers. Therefore, administrator cannot log into a Local Manager. This account does have the `config` hierarchy permission that allows the administrator to manage individual Local Managers through the Uplogix Control Center.

Conversely, the admin account on Local Managers has no privileges on the Uplogix Control Center.


Server privileges and Local Manager privileges are separate and must both be explicitly assigned if a user is to work with equipment in the inventory as well as the Uplogix Control Center itself.

To create a user who can execute any operation on any resource, first create the user. See [Creating and editing user accounts](#).

1. Go to the **Server Privileges** page and assign the admin role to the user.



2. Go to the **Inventory** tab. The detail page for the root group is displayed. Click **privileges**.
3. Assign the user admin privileges on all resources.

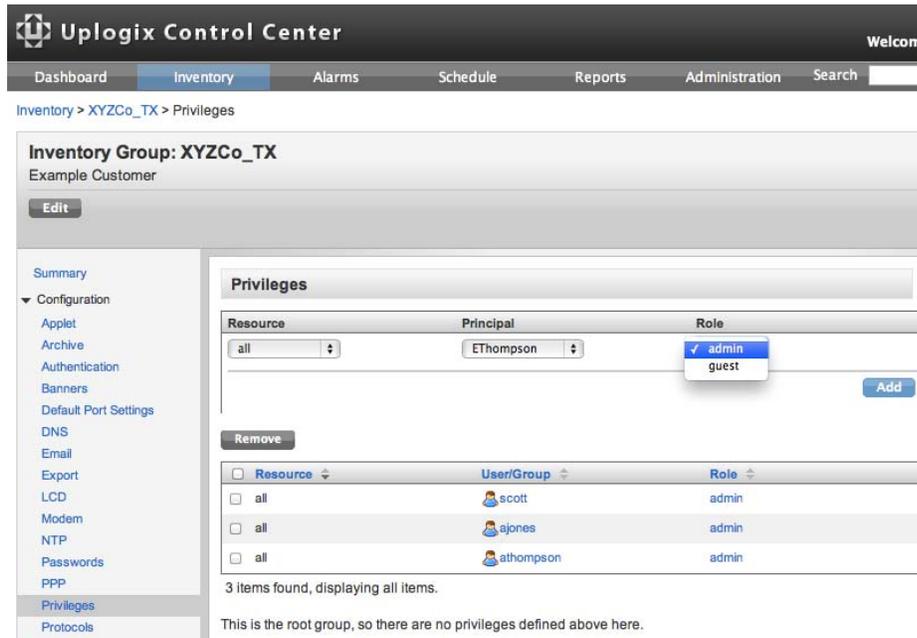

4. The user now has access to all commands and capabilities on the Uplogix Control Center and on all equipment at every level of the inventory.

## Example: Limiting a user's access to one port on one system

Sometimes a user needs only minimal access. In this example a user is created who can only log into one Local Manager, and after logging in, can only execute the terminal command on port 1/1. To do this, we must complete the following:

- [Create a custom role](#)
- [Create a user account that will have this role](#)
- [Apply the role to the appropriate resources](#)

### Creating the role

On the **Administration > Roles** page, click **Add** to open the Create Role page. Use this page to create a role that is universally available.

If the role should only be available within a specific inventory group and child groups, access the Create Role page by clicking the **Roles** button on the appropriate inventory group detail page.

For this example, a role called `terminalOnly` will be created that can be assigned at the system level and on the desired port. This role gives only the permissions required for a user to be able to open a terminal session to the device on port 1/1.

Users can only execute commands while logged in to the Local Manager, so the user's permissions must include the `login` permission on the system.

The terminal command runs on the port resources only, so this user needs to navigate to the appropriate port in order to open terminal sessions. There is no "port" permission. Instead, use the `show status` permission. When applied to a port, this permission allows the user to navigate to the port.

When the user has navigated to the appropriate port, this role must allow the user to execute the terminal command, so the role must include the `terminal` permission.

The screenshot shows the 'Create Role' page in the Uplogix Control Center. The page is titled 'Create Role' and has a 'Save' button at the top right. Below the title is a 'Role Information' section with fields for 'Name' (set to 'terminalOnly'), 'Description', 'Start', and 'End'. Below that is a 'Permissions' section with two columns: 'Available Permissions' and 'Selected Permissions'. The 'Available Permissions' list includes 'show system properties', 'show system protocols', 'show system pulse', 'show system serial', 'show system slot', 'show system snmp', 'show system subinterface', 'show system syslog-options', 'show system timeout', 'show tech', 'show user', 'show version', 'show vpn', 'show who', 'show xbrowser', 'shutdown', 'squeeze', 'suspend', 'terminal', and 'terminal break'. The 'Selected Permissions' list includes 'allow login', 'allow show status', and 'allow terminal'. There are buttons for 'Add Allow >>', 'Add Deny >>', and '<< Remove'. At the bottom, there is a 'Scope' dropdown set to 'local' and another 'Save' button.

Once the required permissions have been added, click **Save** to save the `terminalOnly` role.

## Creating the user account

On the **Administration > Users** page, click **Add** to open the Create User page. For this example, a user account called `termOnlyUser` is created.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this, a breadcrumb trail reads 'Administration > Users > termOnlyUser'. On the left side, there is a sidebar menu with options: termOnlyUser, Privileges, Auditing, Alert Subscriptions, and Report Subscriptions. The main content area is titled 'Edit User: termOnlyUser' and includes a 'Save' button in the top right corner. Below the title, there is a section for 'User Information' with the following fields: Name (termOnlyUser), Password (masked with dots), Confirm (masked with dots), Description (empty), Disabled (checkbox), Time Zone (dropdown menu set to (-6:00) US/Central), Use DST (checked checkbox), Start Date (calendar icon), and Expiration Date (calendar icon). There is also an 'Add To Group' button. Below the User Information section, there are two expandable sections: 'Email Addresses' (Count: 0) and 'Authorized Keys'. A 'Save' button is located at the bottom right of the form.

## Applying the role to create permissions

This user account does not need access to the web interface; therefore no server privileges are assigned.

The account should only provide access to port 1/1 on a single system, so privileges from the Local Manager's expanded detail page are assigned.

Locate the appropriate system in the inventory. On the Configuration menu, click **Privileges** to open the Privilege list for the system.

Assign the `terminalOnly` role to `termOnlyUser` on the system resource. This allows `termOnlyUser` to use the system-level permissions (login and show status) in the `terminalOnly` role.

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Privileges

**Pasadena (192.0.2.1)**  
 Last Alarm: 3h 5m | Last Event: 20m 20s

CLI Dial **Schedule Task** Edit Reassign Replace Remove

Summary

Alarms

Events

Scheduled Tasks

Session Logs

SLV Stats

▼ Configuration

- Applet
- Archive
- Authentication
- Banners
- Default Port Settings
- DNS
- Email
- Export
- IP
- IPv6
- IPT
- LCD
- Modem
- NTP
- Passwords
- PPP
- Privileges**

### Privileges

Resource	Principal	Role
all	termOnlyUser	terminalOnly
<a href="#">Add</a>		
User/Group	Role	Inherited
admin	admin	
ajones	admin	*
athompson	admin	
EThompson	admin	
<input type="checkbox"/> port1/1	EThompson	admin
<input type="checkbox"/> port1/2	EThompson	admin
<input type="checkbox"/> powercontrol	EThompson	guest *

7 items found, displaying all items.

Assign the terminalOnly role to termOnlyUser on the port 1/1 resource. This allows termOnlyUser to use the port-level permissions (show status and terminal) on this port only. The show status permission allows the user to navigate to the port; terminal allows the user to open terminal sessions.

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Privileges

**Pasadena (192.0.2.1)**  
 Last Alarm: 3h 5m | Last Event: 20m 20s

CLI Dial **Schedule Task** Edit Reassign Replace Remove

- Summary
- Alarms
- Events
- Scheduled Tasks
- Session Logs
- SLV Stats
- ▼ Configuration
  - Applet
  - Archive
  - Authentication
  - Banners
  - Default Port Settings
  - DNS
  - Email
  - Export
  - IP
  - IPv6
  - IPT
  - LCD
  - Modem
  - NTP
  - Passwords
  - PPP
  - Privileges**

### Privileges

Resource	Principal	Role																																	
all	termOnlyUser	terminalOnly	<a href="#">Add</a>																																
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 30%;">User/Group</th> <th style="width: 30%;">Role</th> <th style="width: 30%;">Inherited</th> <th style="width: 10%;"></th> </tr> </thead> <tbody> <tr> <td>admin</td> <td>admin</td> <td></td> <td></td> </tr> <tr> <td>ajones</td> <td>admin</td> <td style="text-align: center;">*</td> <td></td> </tr> <tr> <td>athompson</td> <td>admin</td> <td></td> <td></td> </tr> <tr> <td>ETHompson</td> <td>admin</td> <td></td> <td></td> </tr> <tr> <td><input type="checkbox"/> port1/1</td> <td>ETHompson</td> <td>admin</td> <td></td> </tr> <tr> <td><input type="checkbox"/> port1/2</td> <td>ETHompson</td> <td>admin</td> <td></td> </tr> <tr> <td><input type="checkbox"/> powercontrol</td> <td>ETHompson</td> <td>guest</td> <td style="text-align: center;">*</td> </tr> </tbody> </table>				User/Group	Role	Inherited		admin	admin			ajones	admin	*		athompson	admin			ETHompson	admin			<input type="checkbox"/> port1/1	ETHompson	admin		<input type="checkbox"/> port1/2	ETHompson	admin		<input type="checkbox"/> powercontrol	ETHompson	guest	*
User/Group	Role	Inherited																																	
admin	admin																																		
ajones	admin	*																																	
athompson	admin																																		
ETHompson	admin																																		
<input type="checkbox"/> port1/1	ETHompson	admin																																	
<input type="checkbox"/> port1/2	ETHompson	admin																																	
<input type="checkbox"/> powercontrol	ETHompson	guest	*																																

7 items found, displaying all items.

The user termOnlyUser can now log into the Pasadena system and open a terminal session to the device on port 1/1.

## Importing user, group, and privilege files

### Administration > Import

The Uplogix Control Center can import preformatted lists of user accounts, group accounts, privileges, and group members. This feature is useful if managing accounts and privileges in a third-party application such as Microsoft Excel. The import functions accept comma-separated value (CSV) formats.

The screenshot displays the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below this, the breadcrumb path 'Administration > Import' is shown. On the left side, there is a sidebar menu with options: Appliances, AAA Settings, File Archive, Groups, Import (highlighted), Licenses, Roles, Server Privileges, Server Settings, and Users. The main content area is titled 'Import' and contains four distinct sections, each for a different type of CSV import:

- Import Users CSV File:** Includes a 'Choose File' button, 'no file selected' text, 'Action:  Add/Update  Delete', and 'Import' and 'Help' buttons.
- Import Groups CSV File:** Includes a 'Choose File' button, 'no file selected' text, 'Action:  Add/Update  Delete', and 'Import' and 'Help' buttons.
- Import User Group Membership CSV File:** Includes a 'Choose File' button, 'no file selected' text, 'Action:  Add/Update  Delete', and 'Import' and 'Help' buttons.
- Import Privileges CSV File:** Includes a 'Choose File' button, 'no file selected' text, and 'Import' and 'Help' buttons.

For information on setting up the CSV file, click **Help** in the appropriate Import box.

Uplogix Control Center Administration > Import

Dashboard Administration > Import

- Appliances
- AAA Settings
- File Archive
- Groups
- Import**
- Licenses
- Roles
- Server Privileges
- Server Settings
- Users

**User Import File Format**

**Field Summary:**  
username,description,timezone,dst,alertEligibility,alertFrequency,start,expire,password,email

**Examples:**  
bob,desc,US/Central,TRUE,\*\*\*\*\*,,1/1/00,12/12/05,bob,bob@company.com,  
bob,,,,,,,,,bob@uplogix.com,

- If username entry appears more than once in the import file, only the first record is processed.

Field Details	Required	Default	Notes
username	yes		
description	no		When updating, an empty value will clear the field.
timezone	no	US/Central	When updating, an empty field will leave existing value unchanged.
dst	no	TRUE	When updating, an empty field will leave existing value unchanged.
alertEligibility	no	*****	When updating, an empty field will leave existing value unchanged.
alertFrequency	no	2	When updating, an empty value will leave existing value unchanged.
start	no		When updating, an empty value will clear the field.
expire	no		When updating, an empty value will clear the field.
password	yes when adding		When updating, an empty value will leave existing value unchanged.
email	no		Always treated as In-Band unchecked, Out-of-Band unchecked, Terse unchecked. When updating, an empty value will leave existing entries unchanged. Populated value will add to existing email entires for the user, unless an exact match already exists.

# Logs, reports, and diagnostics

The Uplogix Control Center captures several kinds of information about the Local Managers it manages and the devices connected to each Local Manager, as well as user activity. This chapter describes how to access information about:

Events—major user actions such as login, logout, and changes to accounts; major automated actions

Alarms—records of changes that may trigger alerts or other actions

Logs—line-by-line records of all user activity

Reports—details on alarms, changes, events, or sessions

In this chapter:

- [Setting up email, auditing, and report subscriptions](#)—configure an account to receive reports and alerts from the Uplogix Control Center
- [Viewing alarms and events](#)—global, group, and Local Manager views
- [Viewing reports](#)—receiving, downloading, and viewing reports from the Uplogix Control Center
- [Viewing archive status information for a Local Manager](#)—time the last archive took place, whether it was successful, and related information
- [Viewing device syslogs](#)—current device syslogs
- [Viewing session logs and auditing users](#)—view transcripts and configure accounts to receive reports of activities
- [Sending logs to Technical Support](#)—how to send information to the support team for troubleshooting
- [Replacing a Local Manager](#)—replace a Local Manager with a new Local Manager and transfer all configurations and data from previous Local Manager
- [Shutting down the Control Center](#)—how to properly turn off the Control Center

## Setting up email, auditing, and subscriptions

To provide subscribed information, alerts and reports, the Uplogix Control Center must be configured to send email. For more information, see [Configuring mail settings](#).

To receive alerts from Local Managers and reports from the Uplogix Control Center, the user account must be:

- configured with an email address where alerts from the Local Managers and reports from the Uplogix Control Center can be received
- subscribed to the desired alerts and reports

To audit other accounts, the account must be:

- configured with an email address where alerts and reports are received from the Uplogix Control Center
- configured to audit at least one other account
- subscribed to the appropriate session report (hourly, daily, weekly, or monthly) for the account to be audited

These can be configured on the Create/Edit User or Create/Edit Group pages. Click the right arrows ▶ to expand the collapsed sections of these pages.

### Configuring an account to receive email from the Uplogix Control Center

For an account to receive alerts (from Local Managers) or reports (from the UCC) by email, at least one email address where the user can receive alerts and reports (including user audits) must be entered.

The in-band and out-of-band settings only apply to information that Local Managers email to you. By default, the address entered is used in both situations.

Select **Terse** to limit the message to a subject line only. Use the Terse setting for email directed to a pager or cell phone. Click **Add Email** when all the email information has been entered and then **Save** on the edit user details screen.




To remove an email address, use the **clear** button rather than manually clearing the address field.

The screenshot shows the 'Edit User' interface for user 'ETHompson'. The page has a navigation bar at the top with 'Administration' selected. The main content area is titled 'Edit User: ETHompson' and includes a 'Save' button. Under the 'User Information' section, fields for Name, Password, Confirm, Description, Disabled, Time Zone, Start Date, and Expiration Date are visible. A modal window titled 'Add Email to ETHompson' is open, showing an 'Email' field with 'ethompson@xyzco.com', 'In-band' and 'Out-of-band' checkboxes checked, and a 'Terse' checkbox unchecked. Below the modal, the 'Email Address' section shows an 'Add' button and a 'Remove' button. At the bottom, there is an 'Authorized Keys' section with a 'Save' button.

## Configuring the account to audit others and to be audited

To allow the user to audit others, select the user from the User menu under Administration by clicking on the **User ID**. Then from the left menu, select **Auditing**. In the auditing detail page, add auditees by clicking the **Add** button and selecting users from the checklist. Click **Add Auditee(s)**.

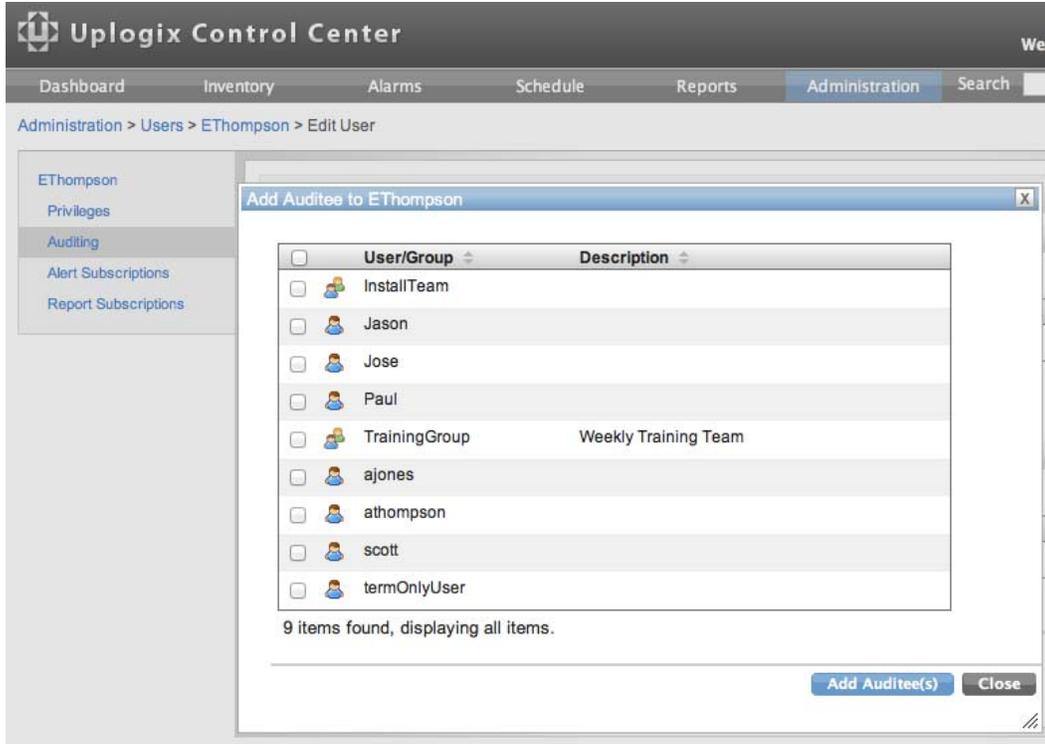

To allow another user to audit this user, open the Auditor Picker by clicking **Add**. Add auditors following the same steps as adding auditees.

To allow this user to audit others, the user must also be subscribed to session reports. See [Subscribing to reports](#).

## Subscribing to alerts

### Administration > Users > Edit

Individual user accounts may subscribe to alerts.

Subscribe the account to alerts on the desired resources.

- Subscription resources are individual ports, modem, powercontrol, system, or all.
- Sub-resources are interface, chassis, or all.

Uplogix Control Center

Dashboard Inventory Alarms Schedule Reports Administration Search

Administration > Users > ETHompson > Edit User

ETHompson  
Privileges  
Auditing  
Alert Subscriptions  
Report Subscriptions

**Subscriptions: ETHompson** Save

Alert Subscriptions

Appliance	Resource	Sub-resource	Interface Name	Wait Time (min)
select	all	all		0

Add

Remove

Appliance	Resource	Sub-resource	Interface Name	Wait Time (min)
There are no alert subscriptions configured.				

Alert Options

Save

Click **Save** at the top or bottom of the page when finished setting up the account information.

## Subscribing to reports

**Administration > Users**

**Administration > Groups**

To subscribe an account to reports, go to **Administration > Users** or **Administration > Groups** and select the User ID associated with the user. Then from the left menu, select **Report Subscriptions**. This link is only active if the account is configured with an email address.

The report subscription specifies how often the report is created and emailed.

The report subscriptions link takes you to the Report Subscriptions page.

Choose the Local Manager inventory group or port from which to receive reports, and the file format for the report - CSV, HTML, or PDF. Click the Subscribe links to subscribe to the desired reports. Depending on the file format selected, the user may receive zipped files.

Uplogix Control Center

Inventory Alarms Events Schedule Reports Administration

Administration > Users > mhoward > Edit User

mhoward  
Privileges  
Auditing  
Alert Subscriptions  
Report Subscriptions

**Report Subscriptions: mhoward**

Remove

Scope	Group	Name	Resource	To Address	
<input type="checkbox"/>	Appliance	Alarms	Hourly	A101101100	mhoward@uplogix.com
<input type="checkbox"/>	Inventory Group	Logins	Daily	Austin	mhoward@uplogix.com
<input type="checkbox"/>	Inventory Group	Changes	Daily	Austin	mhoward@uplogix.com

Label Reports

Inventory Group Reports

Subscribe

Inventory Group: Austin Email: mhoward@uplogix.com Export Type: PDF

Group	Name	File	Frequency	
<input type="radio"/>	Alarms	Hourly	alarmsByNodeReport.jrxml	HOURLY
<input type="radio"/>	Alarms	Daily	alarmsByNodeReport.jrxml	DAILY
<input type="radio"/>	Alarms	Weekly	alarmsByNodeReport.jrxml	WEEKLY

Session reports are available in the Principal Reports area at the bottom of the page. You can only subscribe to session reports on accounts that are configured as auditees on your user account. For more information on this, see [Configuring the account to audit others and to be audited](#).

## Specifying when and how often the subscriber receives alerts

### Administration > Users > User ID > Alert Subscriptions

By default, alerts are emailed to subscribed users every two minutes while they are active.

Limit the number of alerts that a user receives with the Alert Options settings on the Alert Subscriptions page.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, Administration (selected), and Search. The user is logged in as 'Welcome ajones - 08'. The breadcrumb trail is Administration > Users > ETHompson > Edit User. On the left, a sidebar menu lists options for ETHompson: Privileges, Auditing, Alert Subscriptions (selected), and Report Subscriptions. The main content area is titled 'Subscriptions: ETHompson' and contains two sections: 'Alert Subscriptions' and 'Alert Options'. The 'Alert Subscriptions' section has a table with columns: Appliance, Resource, Sub-resource, Interface Name, and Wait Time (min). The table contains one row with 'select' in the Appliance column, 'all' in Resource, 'all' in Sub-resource, an empty Interface Name field, and '0' in Wait Time. There are 'Add' and 'Remove' buttons. Below the table, a message states 'There are no alert subscriptions configured.' The 'Alert Options' section is titled 'Specify when alerts should be received' and includes several input fields: Days of the week (\*), Months of the year (\*), Days of the month (\*), Hours (\*), Minutes (\*), Frequency (0 minutes), and Threshold (2 occurrences). A 'Save' button is at the bottom right.

Appliance	Resource	Sub-resource	Interface Name	Wait Time (min)
select	all	all		0

Remove

Appliance	Resource	Sub-resource	Interface Name	Wait Time (min)
There are no alert subscriptions configured.				

Alert Options

Specify when alerts should be received

Days of the week: \* (0-6, where 0=Sunday)  
 Months of the year: \* (1-12, where 1=January)  
 Days of the month: \* (1-31)  
 Hours: \* (0-23)  
 Minutes: \* (0-59)  
 Frequency: 0 minutes  
 Threshold: 2 (number of occurrences before an alert is sent)

**Alert Options** specify the times, days, and frequency when alerts may be emailed to this user. The limit options are as follows. Leave the wildcard \* character in the fields you do not wish to restrict.

Option	Description
Days of the week	<p>Limit the receipt of alerts to certain days of the week. Specify the range of days numerically with 1 representing Monday.</p> <p>For example, if the user should only receive alerts from Friday through Monday, enter 5-1.</p>
Months of the year	<p>Limit the receipt of alerts to certain months. Specify the beginning and ending month by number.</p> <p>For example, if the user should only receive alerts from September through May, enter 9-6.</p>
Days of the month	<p>Limit the receipt of alerts to certain days of the month. Specify which days by number.</p> <p>For example, if the user is on call only from the 16th to the end of the month, enter 16-31.</p>
Hours	<p>Hours are specified in UTC time.</p> <p>Limit the receipt of alerts to a specific time of day. Specify start and end time.</p> <p>For example, if the user is in the US central time zone (UTC -6:00) and needs to receive alerts generated between 5 p.m. and midnight, convert these times to UTC (00:00 to 06:00) and enter the hours as 23-6.</p>
Minutes	<p>Limit the receipt of alerts to a specific part of each hour. Specify the start and end minutes.</p> <p>For example, if the user should only receive alerts during the first 15 minutes of every hour, enter 00-15.</p>
Frequency	<p>Set how often the Uplogix Control Center sends alerts. Alerts can be sent as seldom as every 120 minutes or as often as every minute.</p>
Threshold	<p>If the user would like to receive alerts after a specific number of occurrences of the alert, set the number of occurrences as the threshold.</p>

## Viewing alarms and events

Alarms and events are similar. Both are logged. An alarm differs from an event as follows:

- An alarm has a duration—it remains active as long as the triggering condition exists.
- An alarm has a state—current or cleared.

The Alarms page provides a quick overview of active alarms on any of the managed Local Managers.

The alarm summary shows when an alarm was last generated, how long it has been active, which Local Manager it occurred on, and a message detailing the alarm. If the alarm involves a specific device and/or interface, that information is displayed as well. Alarms can be filtered by Local Manager, and by number of results. To quickly access the Local Manager reporting the alarm, click the hostname in the Local Manager column to bring up the Local Manager detail page. The Selecting the Alarms menu displays alarms respectively for the specific device.

Last Occurrence	Duration	Appliance	Device	Context	Message
08/05/2013 12:49		Pasadena	AustinR1-SRE		Envoy unable to commun

To view events on a Local Manager, navigate to the device and select Events from the menu. The Events page shows recent events for the selected Local Manager. Each entry shows the time of the event, the device and interface on which it occurred (if available), the user, and a descriptive message.

Time	Context	User	Message
01/30/2014 19:07		admin	User logged out of Envoy. (Envoy detected user)
01/30/2014 19:07		admin	User logged into Envoy.

Search the list of events by entering a text string in the search box, selecting the type of search, and clicking **Search**.

Alarm and event reports for inventory groups can also be viewed. Go to the appropriate group detail page and select the report that spans the time period of interest.

**Uplogix Control Center** Welcome

Dashboard **Inventory** Alarms Schedule Reports Administration Search

Inventory > XYZCo\_TX > Austin > Report

**Inventory Group: Austin**  
Engineering Group

Edit Reassign Remove Remove Including Children

Summary  
 Configuration  
 Reports  
 Alarms  
 Hourly  
 Daily  
**Weekly**  
 Monthly  
 Changes  
 Hourly  
 Daily  
 Weekly  
 Monthly  
 Events  
 Hourly  
 Daily  
 Weekly  
 Monthly

**View Report**

View report containing 07/28/2013 00:00:00 **Display** **Download CSV** **Download PDF**

**Uplogix Control Center** Start: 07/28/2013 00:00 UTC  
**Weekly Alarms Report** End: 08/04/2013 00:00 UTC

Uplogix	Device	Flag	Start Time (UTC)	Duration
Pasadena	port4/1	CLEARED	05/05/13 13:22	86d 1h
<b>Message:</b>	TCP driver connection error. (Error reading 192.168.93.201:22 - No route to host)			
Pasadena		CLEARED	07/27/13 06:50	3d 7h
<b>Message:</b>	System and management server clocks are more than 20 seconds out of sync.			
Pasadena		CLEARED	07/27/13 06:50	3d 7h
<b>Message:</b>	NTP server invalid. ('203.0.113.3', server strata too high)			
Pasadena	port4/1	CLEARED	07/28/13 08:01	1m 46s
<b>Message:</b>	TCP driver connection error. (Error reading 192.168.93.201:22)			
Pasadena	port4/1	CLEARED	07/30/13 14:34	1s
<b>Message:</b>	TCP driver connection error. (Error writing 192.168.93.201:22 - No route to host)			

## Viewing reports

The Uplogix Control Center regularly archives data received from Local Managers. Reports can be generated from the inventory group and Local Manager level. A report from the inventory group level includes information from all Local Managers within the inventory group, while the Local Manager level only includes the specific Local Manager.

### Inventory group reports

**Inventory > group detail > Reports**

Access inventory group reports from the Group Detail page. Expand the Reports menu and click the link for the report of interest.

**Uplogix Control Center**

Dashboard | **Inventory** | Alarms | Schedule | Reports | Administration

Inventory > XYZCo\_TX > Austin > Detail

**Inventory Group: Austin**  
Engineering Group

Edit | Reassign | Remove | Remove Including Children

**Summary**

- Configuration
- Reports
  - Alarms
    - Hourly
    - Daily
    - Weekly
    - Monthly
  - Changes
    - Hourly
    - Daily
    - Weekly
    - Monthly
  - Events
    - Hourly
    - Daily
    - Weekly
    - Monthly
  - Logins
    - Hourly
    - Daily

**Inventory Group: Austin**

**Inventory Group Children**

Child Group	Description
Building 1	
Marketing	

Add

**Appliance Children**

Appliance IP	Hostname
There are no appliances in this group.	

Add

If necessary, specify the desired range of times.

Reports start at the beginning of the specified time span. For example, a weekly report begins on Sunday rather than showing the previous seven days; a monthly report begins on the first of the month rather than showing the previous 30 days.

**View Report**

View report containing  **Display** **Download CSV** **Download PDF**

**Uplogix Control Center** Start: 07/14/2013 00:00

**Weekly Logins Report** End: 07/21/2013 00:00

Uplogix	Username	Client IP	Conn Type	Occurred (UTC)
Basadana	slongc	2001:470:b851:500:2156:75fc:8ba3:70d7cch		07/17/13 15:02

Once the time period of interest is specified, click **Display**, **Download PDF** or **Download CSV** as appropriate.

## Local Manager reports

### Inventory > Local Manager > Reports

Access Local Manager specific reports from the reports menu on the Local Manager page.

## Reports by label

### Reports > Reports by Label

Most reports are available on the Group Detail, Local Manager Detail, and Port Detail pages. However, reports can also be generated for custom labels. If labels have been created for managed devices (see [Creating categories for managing devices](#)), standard reports for each label are available on the Reports by Label page.

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with the following tabs: Dashboard, Inventory, Alarms, Schedule, Reports (highlighted), and Administration. Below the navigation bar, the breadcrumb path is 'Reports > Reports By Label'. On the left side, there is a sidebar menu with three items: 'Report Assignments', 'Report Files', and 'Reports by Label' (highlighted). The main content area is titled 'View Report by Label' and contains a 'Display' button. Below the button, there is a dropdown menu for 'Label:' with 'Core Switches' selected. A list of report types is displayed, each with a radio button:


- Alarms Hourly
- Alarms Daily
- Alarms Weekly
- Alarms Monthly
- Changes Hourly
- Changes Daily
- Changes Weekly
- Changes Monthly
- Events Hourly
- Events Daily
- Events Weekly
- Events Monthly
- Privileges

## Report files

### Reports > Report Files

Reports are generated from Jasper XML files. Several are included with the Uplogix Control Center, but custom files can also be uploaded. Once uploaded, these files are available for use on the Report Assignments page.

After creating a custom Jasper file, browse to find it and click **upload**. The file is now available from the list of files on the Report Assignments page.

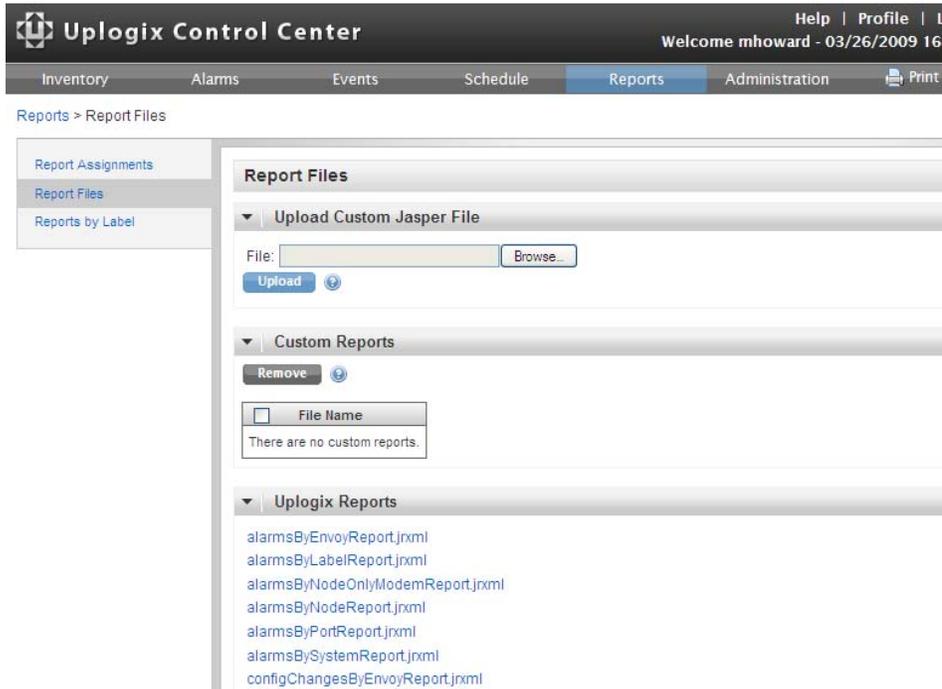

Please contact [support@uplogix.com](mailto:support@uplogix.com) if you need assistance with this feature.

## Report assignments

### Reports > Report Assignments

The Uplogix Control Center can generate a wide range of reports on a variety of subjects. These correspond to the reports listing seen on the Group Detail, Local Manager Detail, and Port Detail pages.

Reports are generated in various formats and emailed to system users or groups

Use the Report Assignments page to schedule any of the existing reports.

To create a new report assignment:

- Choose the **scope**—this may be label, inventory group, system, or port.
- Choose a **group**—this may be alarms, changes, events, logins, custom, or none.
- If there is at least one report in the group chosen within the selected scope (for example, alarm reports on inventory group pages), select the **offset**. This specifies the report's position in the list. An offset of 0 places the report first on the list.
- Name the report, select the appropriate jrxml format file, and choose the frequency of report generation.

In the following example, a weekly report of GPS events on managed devices is created. The report is available from inventory group pages under a custom report grouping.

Uplogix Control Center

Dashboard Inventory Alarms Schedule **Reports** Administration

Reports > Administration

Report Assignments  
Report Files  
Reports by Label

**Report Assignments**

▼ Create Report Assignment

\*Scope: Inventory Group  
Group: Custom  
\*Offset: 0  
\*Name: WeeklyGPS  
\*File: eventsByPortReport.jrxml  
\*Frequency:  Hourly  Daily  Weekly  Monthly  None

Assign

Click **Assign** to create the report and assign it to the specified scope. In this example, the report is assigned to inventory group pages. The report is now available.

Uplogix Control Center

Dashboard **Inventory** Alarms Schedule Reports Administration

Inventory > XYZCo\_TX > Austin > Detail

**Inventory Group: Austin**  
Engineering Group

Edit Reassign Remove Remove Including Children

Summary  
Configuration  
▼ Reports  
Alarms  
Hourly  
Daily  
Weekly  
Monthly  
Changes  
Hourly  
Daily  
Weekly  
Monthly  
Events  
Hourly  
Daily  
Weekly  
Monthly  
Logins  
Hourly  
Daily  
Weekly  
Monthly  
Privileges  
Custom  
WeeklyGPS  
WeeklyAlarmLabel

**Inventory Group: Austin**

▼ Inventory Group Children

Child Group	Description
Building 1	
Marketing	

Add

▼ Appliance Children

Appliance IP	Hostname
There are no appliances in this group.	

Add

Although an existing report assignment cannot be edited, a new report assignment with the same name can be created. This overwrites the existing report assignment.

## Viewing archive status information for a Local Manager

### Inventory > Local Manager Summary

Archive information sent from the Local Manager to the Control Center includes: activity logs, SLV stats, config files, device changes and login sessions. To view information about the last date archive operation, click on the time of the last archive on the Local Manager summary page. A pop-up will show information about the last data archive operation.

The screenshot shows the Uplogix Control Center interface. The top navigation bar includes 'Dashboard', 'Inventory', 'Alarms', 'Schedule', 'Reports', and 'Administration'. The breadcrumb trail is 'Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Summary'. The main content area is titled 'Pasadena (192.0.2.1)' and shows 'Last Alarm: 12m 23s' and 'Last Event: 10m 7s'. Below this are buttons for 'CLI', 'Schedule Task', 'Edit', 'Reassign', 'Replace', and 'Remove'. A sidebar on the left lists 'Summary', 'Alarms', 'Events', 'Scheduled Tasks', 'Session Logs', 'SLV Stats', and 'Configuration' (with sub-items: 'Appliet', 'Archive', 'Authentication', 'Banners', 'Default Port Settings'). The main content area displays appliance status: 'Appliance Status: OK', 'CON: [off]', 'ETH: [on]', and 'CPU: 22/23/23'. A table of details includes: 'Description: V11IJAYV0M', 'Serial #: V11IJAYV0M', 'Version: 4.7.1', 'Build #: 20131231:040331', 'OS Version: 4.7.1.24478', 'IPv4 Address: 192.0.2.1', 'Model: Virtual', 'Temp C: N/A', 'Temp F: N/A', 'Humidity: N/A', 'IPv6 Address: 2001:db8:3:0:20c:29ff:feac:7a73', 'Last Login: 12/31/2013 17:35 UTC (admin)', 'Uptime: 2d 19h', 'Last Heartbeat: 01/03/2014 12:18 UTC (full)', and 'Last Archive: 01/03/2014 11:36' (highlighted with a red box). Below the table is a 'Properties' section with 'No properties configured' and an 'Edit' button. An image of the Pasadena hardware device is shown to the right.

The screenshot shows a 'Data Archive Information' pop-up window. The window title is 'Data Archive Information'. The content includes: 'Data is accurate as of 01/03/2014 11:36.', 'Successfully finished processing data archive at 01/03/2014 11:37.', 'Last Updated: 01/03/2014 11:37', 'Last Status: processed', 'Last Upload: 01/03/2014 11:37', and 'In Queue: 0'. The background shows the 'Properties' section from the previous screenshot.

## Viewing Local Manager Syslog Setting

### Inventory > Local Manager Page > Configuration > Syslog

Syslog forwarding can be configured on the Configuration menu of the Local Manager page, or from the Uplogix command line with the `config system syslog-options` command.

In some advanced drivers, the console messages can be forwarded as syslog messages. This is configured from the port's `config device logging` command.

If device syslog forwarding is enabled, a connected device's console messages will be reformatted as syslog messages and forwarded to external syslog servers. The source IP address of the syslog message will be the Local Manager's management IP, so multiple facilities should be used to classify the messages for various devices from the same Local Manager.



When syslog forwarding is enabled on the Local Manager for a given facility, syslog forwarding will be enabled on all Local Manager ports that are configured (i.e., not native ports) for the same facility. If you do not want all ports to perform syslog forwarding or don't want all ports forwarding messages to the same syslog facility, you must log into the Local Manager and navigate to the port(s) you want to change and update the settings using the `config device syslog` command.

 **Pasadena (192.0.2.1)**

Last Alarm: 17m 58s | Last Event: 15m 42s

**CLI** Schedule Task Edit Reassign Replace Remove

- Summary
- Alarms
- Events
- Scheduled Tasks
- Session Logs
- SLV Stats
- ▼ Configuration
  - Applet
  - Archive
  - Authentication
  - Banners
  - Default Port Settings
  - DNS
  - Email
  - Export
  - IP
  - IPv6
  - IPT
  - LCD
  - Modem
  - NTP
  - Passwords
  - PPP
  - Privileges
  - Properties
  - Protocols
  - Pulse
  - Roles
  - Rules
  - Rule Sets
  - Secondary Ethernet
  - Serial
  - Server
  - SLV Tests
  - SNMP
  - Syslog**

**Syslog Settings**

Enabled:   
Syslog Server IP:   
Port:   
Facility:

Scope: inherited

## Viewing session logs and auditing users


View transcripts of individual LMS command line sessions that have ended. And, configure accounts to receive reports of individual accounts' activities on the Uplogix Control Center.

### Local Manager session logs

#### Inventory > Local Manager Page > Session Logs

Every command line interaction between a user and the Local Manager is logged and subsequently archived on both the Local Manager and the Uplogix Control Center. To view archived sessions, click **Session Logs** from the left menu of the Local Manager page.

A list of archived sessions by user can be displayed, just as with the Uplogix LMS command line using the `show sessions` command. Select the user from the list and click **Display Sessions**. To view the details of a listed session, click **Display Session** to the right of the timestamp. This is equivalent to the `show session` command.

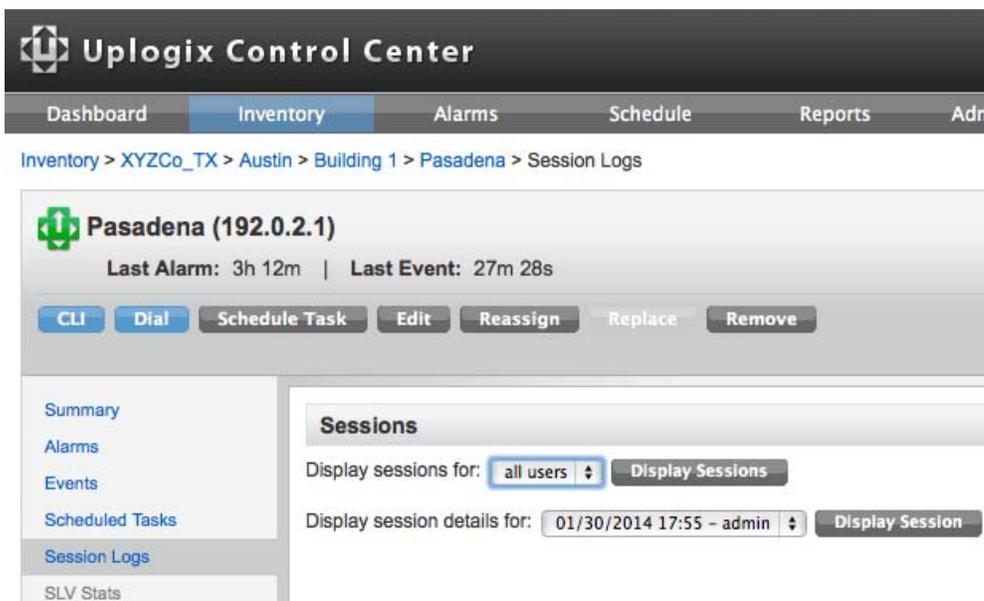

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory (selected), Alarms, Schedule, Reports, and Admin. Below the navigation bar, the breadcrumb path is: Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Session Logs. The main content area is titled "Pasadena (192.0.2.1)" and shows "Last Alarm: 3h 12m" and "Last Event: 27m 28s". There are several action buttons: CLI, Dial, Schedule Task, Edit, Reassign, Replace, and Remove. On the left, there is a sidebar menu with options: Summary, Alarms, Events, Scheduled Tasks, Session Logs (selected), and SLV Stats. The main content area has a "Sessions" section with a dropdown menu set to "all users" and a "Display Sessions" button. Below that, there is a "Display session details for:" dropdown set to "01/30/2014 17:55 - admin" and a "Display Session" button.

Session information is updated every 30 seconds on the Local Manager, but the actual recorded transaction is transferred during the archive process which happens every hour by default.

Session details are not available for sessions in progress.

### Auditing user activities on the Uplogix Control Center

#### Administration > Users > User Name > Auditing

To audit users, your account configuration must include:


- A valid email address
- The permission to audit the user as one of your auditees
- A report subscription to the appropriate session report on each user to be audited. See [Setting up email, auditing, and subscriptions](#).

The reports are emailed as .pdf, .html, or .csv files.

The following example shows how to configure a user to audit another user. In this example, the user `ajones` (who has the admin role on the Uplogix Control Center) will be configured to audit another user, `Ethompson`.

Every user account is automatically able to audit itself. To audit others, auditees must be added to the auditor's user profile.

From the Auditing menu, click **Add** under Auditees.

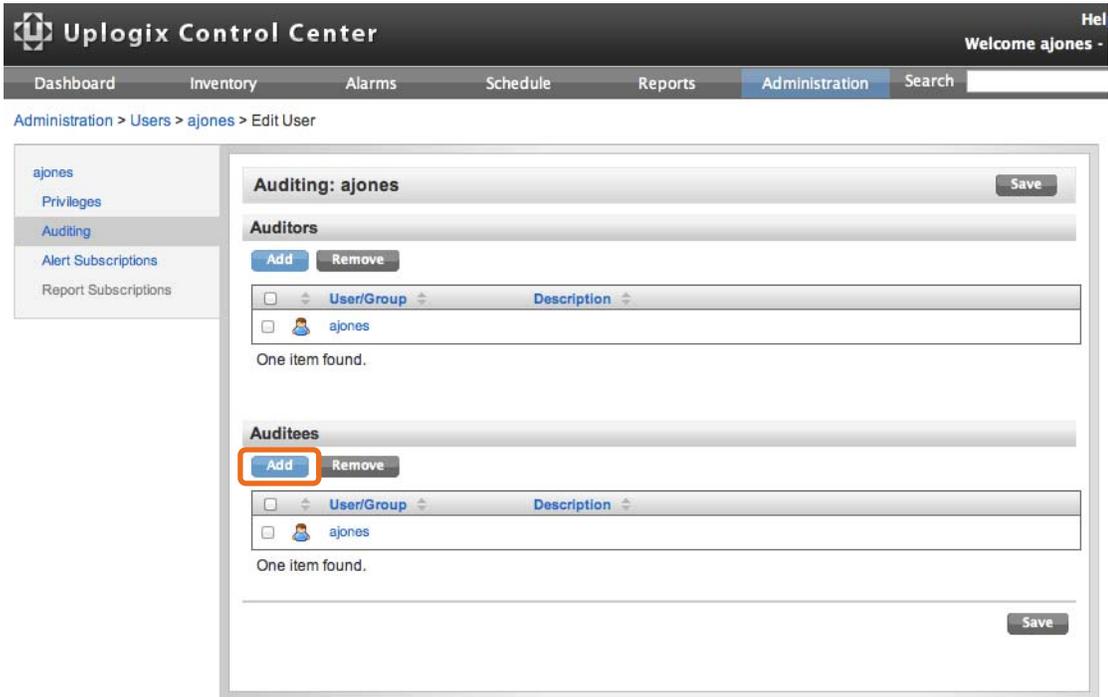

From the pop-up, select the user to be audited, in this case, EThompson and click **Add Auditee(s)**. Click **Save** at the top or bottom of the page and the auditees are added to ajones auditee listing.



The ajones account has an email address, and the user Ethompson is now among ajones' auditees, so ajones will be able to subscribe to reports on Ethompson.

The next step is to subscribe to the desired reports. Click **Report Subscriptions** from the left menu to go to the Report Subscriptions page.

On the Report Subscriptions page, expand the **Principal Reports** section at the bottom of the Report Subscriptions page.

Select the Principal—the user to be audited. If your account is configured to audit many users, you may wish to enter a filter string to shorten the list of usernames.

**Uplogix Control Center**

Dashboard Inventory Alarms Schedule Reports Administration

Administration > Users > ajones > Edit User

**Report Subscriptions: ajones**

WARNING: No subscriptions will be sent until server mail settings are configured. [Server Settings](#)

There are no report subscriptions for ajones.

▶ Label Reports

▶ Inventory Group Reports

▶ Appliance Reports

▶ Port Reports

▼ Principal Reports

[Subscribe](#)

Principal: [select](#) Email: ajones@xyzco.com Export Type: PDF Send Blank:

Group	Principal Picker	Frequency
<input type="radio"/> Activity	Filter String:	ort.jrxml
<input type="radio"/> Activity		ort.jrxml
<input type="radio"/> Activity	EThompson	ort.jrxml
<input type="radio"/> Activity	ajones	ort.jrxml
<input type="radio"/> Change		ort.jrxml
<input type="radio"/> Change	Daily	sessionReport.jrxml
<input type="radio"/> Change	Weekly	sessionReport.jrxml
<input type="radio"/> Change	Monthly	sessionReport.jrxml
<input type="radio"/> Full	Hourly	sessionReport.jrxml
<input type="radio"/> Full	Daily	sessionReport.jrxml
<input type="radio"/> Full	Weekly	sessionReport.jrxml
<input type="radio"/> Full	Monthly	sessionReport.jrxml

Select the auditor's email address if more than one is available, and choose the file type that will be emailed - .pdf, .html, or .csv. Then **Subscribe** to the desired report.

- Activity reports—include all page views.
- Change reports—include all actions that resulted in changes on the Uplogix Control Center, any Local Manager under management, or any device connected to a managed Local Manager.
- Full reports—include all information from both activity and change reports.

Use the radio buttons next to the reports to select which reports to receive and click on the **Subscribe** button. The new subscription is listed at the top of the Report Subscriptions page, and in the Report Subscriptions area of the Edit User page.

**Report Subscriptions: ajones**

**WARNING:** No subscriptions will be sent until server mail settings are configured. [Server Settings](#)

[Remove](#)

<input type="checkbox"/> Scope	Group	Name	Resource	To Address	Export	Send Blank
<input type="checkbox"/> Principal	Change	Weekly	ETHompson	ajones@xyzco.com	PDF	false

▶ **Label Reports**

▶ **Inventory Group Reports**

▶ **Appliance Reports**

▶ **Port Reports**

▼ **Principal Reports**

[Subscribe](#)

Principal: <a href="#">select</a>	Email: <input type="text" value="ajones@xyzco.com"/>	Export Type: <input type="text" value="PDF"/>	Send Blank: <input type="checkbox"/>
Group	Name	File	Frequency
<input type="radio"/> Activity	Hourly	sessionReport.jxml	HOURLY
<input type="radio"/> Activity	Daily	sessionReport.jxml	DAILY

## Sending logs to Technical Support

### Administration > Server Settings

If you contact Uplogix Technical Support about an issue with the Uplogix Control Center, the technical support staff may ask you to send the logs. The Send Logs section at the bottom of the Server Settings page provides a convenient way to do this.

**Uplogix Control Center**

Dashboard   Inventory   Alarms   Schedule   Reports   **Administration**

Administration > Server Settings

**Server Settings** [Save](#)

▶ **Install Information**

▶ **Basic Settings**

▶ **Mail Settings**

▶ **SNMP Settings**

▼ **Send Logs**

Send Logs To:

Verbose:

[Send Logs](#)


Follow the support technician's instructions to send the logs.

## Replacing a Local Manager

### Inventory > Local Manager Page

If a Local Manager stops sending heartbeats, the Local Manager's icon in the inventory changes to gray after four consecutive failures. The default heartbeat interval is 30 seconds.

The detail page for an unresponsive system displays the Replace button.

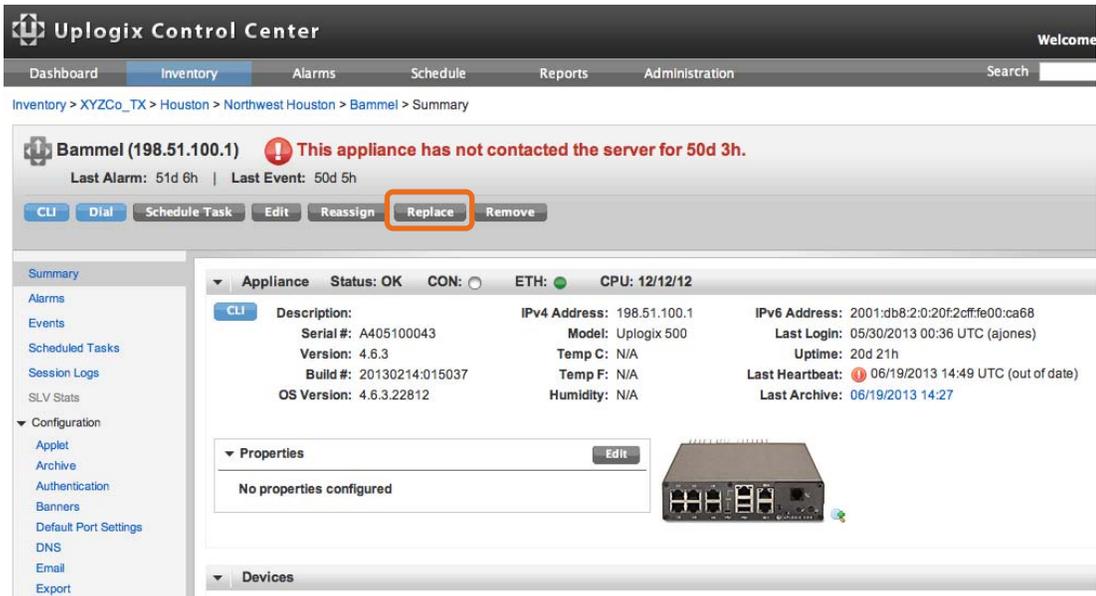

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. Below the navigation bar, the breadcrumb trail reads: Inventory > XYZCo\_TX > Houston > Northwest Houston > Bammel > Summary. The main content area displays the details for the Local Manager 'Bammel (198.51.100.1)'. A red warning icon and text state: 'This appliance has not contacted the server for 50d 3h'. Below this, there are buttons for CLI, Dial, Schedule Task, Edit, Reassign, Replace (highlighted with a red box), and Remove. The main content area is divided into sections: Summary, Alarms, Events, Scheduled Tasks, Session Logs, SLV Stats, Configuration, and Devices. The Configuration section is expanded, showing a table of properties for the appliance. The table includes fields for Description, Serial #, Version, Build #, OS Version, IPv4 Address, Model, Temp C, Temp F, Humidity, IPv6 Address, Last Login, Uptime, Last Heartbeat, and Last Archive. A small image of the Uplogix 500 appliance is shown to the right of the properties table.

Click **Replace** for a list of Local Managers that are available to replace the unresponsive Local Manager. To be listed, a Local Manager must be unassigned, running the same software version as the Uplogix Control Center, and communicating properly.

Select a replacement. The unresponsive Local Manager is replaced in the inventory list by the Local Manager selected. The Uplogix Control Center pushes the stored network device configuration from the replaced Local Manager to the replacement.

After the replacement Local Manager is updated, disconnect all devices from the replaced unit and connect them to the corresponding connectors on the replacement.



Local Managers must be replaced with an identical product. For example, an Uplogix 500 must be replaced with an Uplogix 500 for the replacement to work.



The software versions must also be the same. For example, replace 4.7.x with 4.7.x for replacement to work.

## Shutting down the Control Center

The Control Center can be shut down or restarted from the CLI using Linux commands.



**Caution:** Do not remove power from the Control Center while it is running. Failure to shut down properly may result in the loss of data.

Open a console or SSH session with your Control Center and become root. To restart the Control Center, use the `shutdown -r now` command. To shut down the Control Center, use the `shutdown -h now` command.

Using the `shutdown` command ensures that all services exit cleanly before the reboot / shutdown.

# Advanced Control Center Functionality

The Uplogix Control Center offers several advanced features to help manage your deployment.

In this chapter:

- [SOCKS Proxy Support](#)—set up and configuration of a SOCKS proxy for device access
- [Serial Port Forwarding Using the CLI Applet](#)—make the console port of the managed device available on a local workstation via reverse SSH tunnel
- [SSH Port Forwarding](#)—access to network services running on the dedicated or management IP addresses of a managed device
- [Serial Port Mirroring Using the CLI Applet](#)—make the console port of the managed device available on a local workstation via a modem connection
- [Manual Out-of-Band Modem](#)—contact remote Local Managers via SMS message to start PPP
- [CLI Applet Failover to Managed Device](#)— open SSH connections to Local Managers that pass through to the console port of a managed device via the CLI Applet
- [CLI Applet SSH Key Authentication](#)—open SSH connections with private key authentication to Local Managers and to managed devices via the CLI Applet

## SOCKS Proxy Support

The Uplogix Control Center's CLI applet supports the use of a SOCKS Proxy server when accessing Uplogix devices. Setting up a SOCKS Proxy allows users to access devices through a proxy to bypass routing and firewall limitations and configure proxy servers for groups and/or individual devices.



A properly configured SOCKS Proxy server is required to use this feature. Contact Uplogix support if you would like to configure a SOCKS Proxy on the Uplogix Control Center.

## Arguments


Socks Proxy Version	Both Socks Proxy Version 4 and 5 are supported.
Socks Host	The IP address of the Socks Proxy Server.
Socks Port	The listening port of the Socks Proxy Server. Typical default port is 1080.
Socks Username	Username to authenticate with the proxy server, if required.
Socks Password	Password to authenticate with the proxy server, if required.

## Usage

Proxy settings can be configured at the global, group, or individual device level. First, connect to the web interface of the Control Center and navigate to the Inventory page. Select an Uplogix device from the Inventory tree to bring up its detail page. On the left, expand the Configuration menu and select **Applet**.

In this example, the Control Center will be configured to use a socks proxy server with the following configuration:

Version: 5  
IP Address: 172.30.151.109  
Port: 1080  
Username: acct\_name  
Password: password27

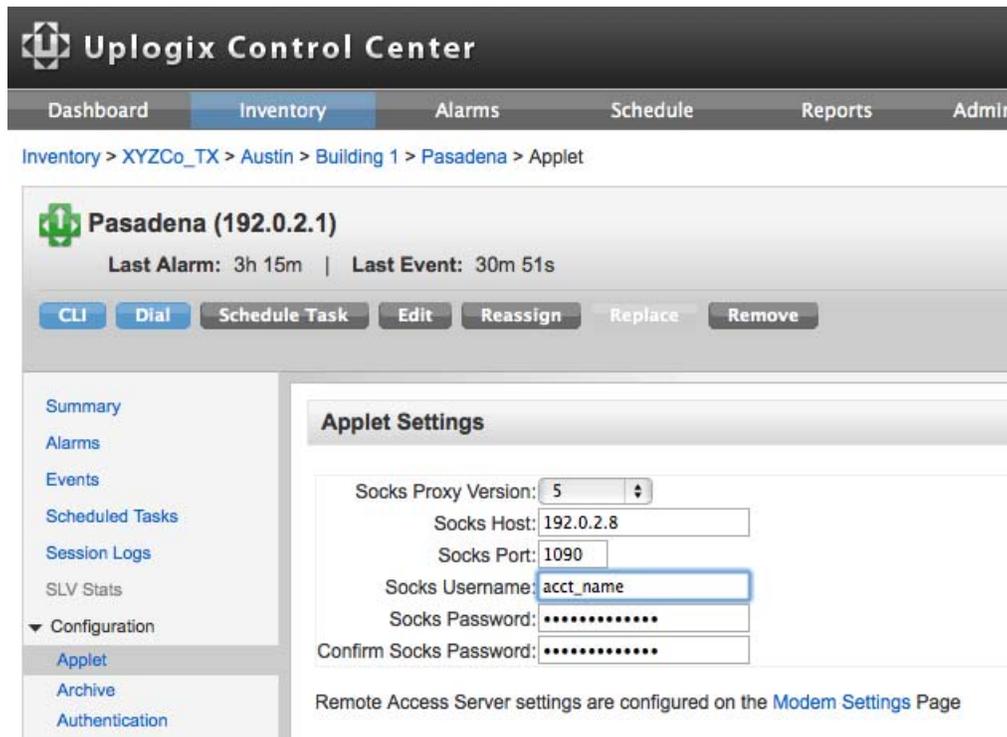

The screenshot shows the Uplogix Control Center interface. At the top, there is a navigation bar with tabs for Dashboard, Inventory, Alarms, Schedule, Reports, and Admin. Below this, a breadcrumb trail reads: Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Applet. The main content area is titled "Pasadena (192.0.2.1)" and shows "Last Alarm: 3h 15m" and "Last Event: 30m 51s". Below this are several action buttons: CLI, Dial, Schedule Task, Edit, Reassign, Replace, and Remove. On the left side, there is a sidebar menu with options: Summary, Alarms, Events, Scheduled Tasks, Session Logs, SLV Stats, Configuration (expanded), Applet (selected), Archive, and Authentication. The main configuration area is titled "Applet Settings" and contains the following fields: Socks Proxy Version (set to 5), Socks Host (192.0.2.8), Socks Port (1090), Socks Username (acct\_name), Socks Password (masked with dots), and Confirm Socks Password (masked with dots). A note at the bottom of the configuration area states: "Remote Access Server settings are configured on the Modem Settings Page".

When the Socks Proxy Version is set to disabled, the configuration options will be grayed out. To begin configuring settings, change the Socks Proxy Version to either 4 or 5.

- Version 4: Requires an IP address and a listening port. Since Version 4 does not support authentication, the password field is grayed out.
- Version 5: All configuration options are available with this version. Depending on the configuration of the proxy server, a username and password may be required.

Once you have configured necessary settings, click **Save**.

The Socks Proxy configuration will be transparent to the end user. To test your settings, select a previously inaccessible device from the inventory and launch the CLI applet. A connection to the device should succeed.

If the connection fails, verify that your settings are correct by examining the configuration of the proxy server or by testing with an SSH client such as Putty or SecureCRT.

## Serial Port Forwarding

Use the Serial Port Forwarding feature to make the console port of the managed device available on a local workstation via reverse SSH tunnel. In order to utilize this feature, a user must have the `terminal` privilege.

An SSH client with reverse tunnel capabilities is required to use this feature. Supported clients include PuTTY and the CLI Applet on the Uplogix Control Center.


Prior to setting up serial port forwarding, initialize the Local Manager port with the appropriate device driver via the `config init` command. Refer to the appropriate device configuration guide for information.

### About Connections

- Only one TCP connection is allowed per forwarded port. Subsequent connections will fail until the first connection is exited.
- The TCP connection can be terminated by disabling the forward setting in the CLI Applet, or by closing the SSH client.
- Connections to forwarded ports are subject to the same idle timeouts as normal terminal sessions. The idle counter is reset if data is passed over the TCP connection.

### Usage

1. Start the CLI Applet by navigating to a device in the inventory tree and clicking on the **CLI** button. Once the applet loads, authenticate with the device and log in.
2. Click on **Terminal** in the CLI Applet menu bar and select **Forward**.

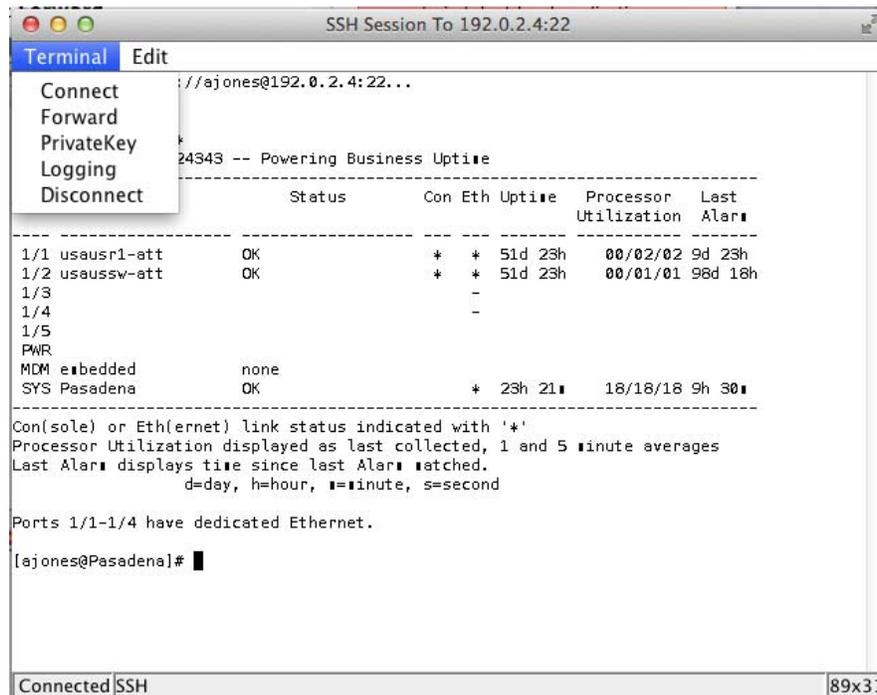


The screenshot shows an SSH terminal window titled "SSH Session To 192.0.2.4:22...". A menu is open over the terminal, with options: Connect, Forward, PrivateKey, Logging, and Disconnect. The terminal output shows a prompt for user 'ajones' and a table of device status. The table has columns for Status, Con Eth, Uptime, Processor Utilization, and Last Alarm. Below the table, there is explanatory text about link status and processor utilization, and a note about dedicated Ethernet ports.


```
SSH Session To 192.0.2.4:22...
Terminal Edit
Connect Forward PrivateKey Logging Disconnect
//ajones@192.0.2.4:22...
24343 -- Powering Business Optime
-----
      Status      Con Eth Uptime  Processor  Last
-----
1/1  usausr1-att   OK          * *  51d 23h  00/02/02 9d 23h
1/2  usausssw-att  OK          * *  51d 23h  00/01/01 98d 18h
1/3
1/4
1/5
PWR
MDM embedded      none
SYS Pasadena      OK          * 23h 21  18/18/18 9h 30
-----
Con(sole) or Eth(ernet) link status indicated with '*'
Processor Utilization displayed as last collected, 1 and 5 minute averages
Last Alarm displays time since last Alarm matched.
      d=day, h=hour, m=minute, s=second

Ports 1/1-1/4 have dedicated Ethernet.
[ajones@Pasadena]#
```


- Mark the checkbox next to the port you wish to forward. By default, the applet will forward to a random local port. To specify a port, delete random and enter the desired port.

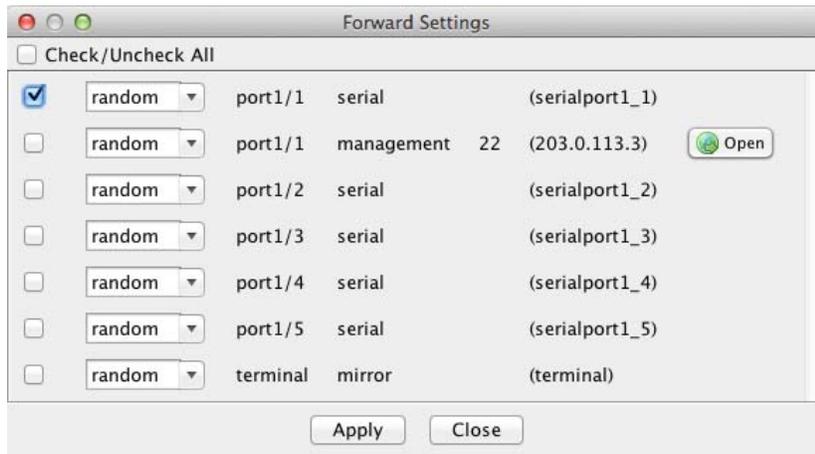

- Click **Apply** to save your settings. If a random port was assigned, it will be displayed and highlighted in green.

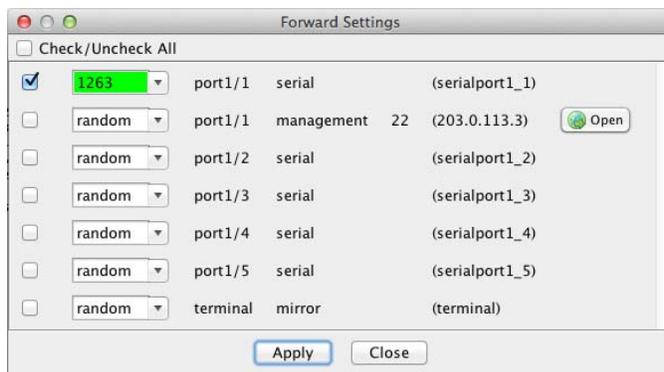

- If you specified an invalid port (in use or conflicting), it will be highlighted in red.

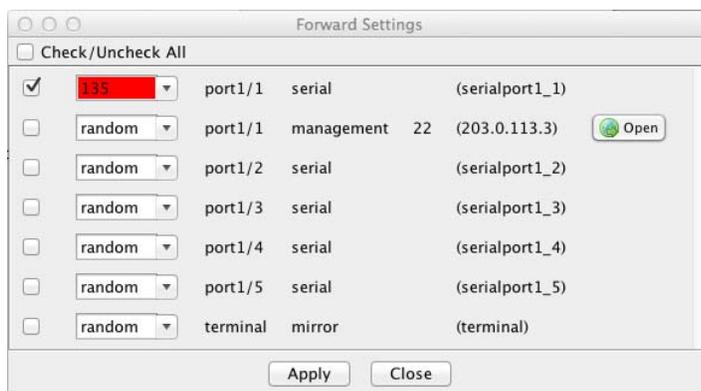

- Click **Close** to return to your SSH session.

7. Navigate to the desired port and use the terminal forward command to start forwarding.

```

SSH Session To 192.0.2.4:22
Terminal Edit
PWR
MDM embedded      none
SYS Pasadena      OK          * 23h 21m 18/18/18 9h 30m
-----
Con(sole) or Eth(er)net link status indicated with '*'
Processor Utilization displayed as last collected, 1 and 5 minute averages
Last Alarm displays time since last Alarm watched.
          d=day, h=hour, m=minute, s=second

Ports 1/1-1/4 have dedicated Ethernet.

[ajones@Pasadena]# port 1/1
usausr1-att cisco 1801 IOS 12.4(9)T

[ajones@Pasadena (port1/1)]# terminal forward
Press ~[ENTER] to exit.

Connecting ...

Retrieving running-config from device ...
Complete. running-config pulled.
running-config saved to archive as current.

Console session forwarded. Press ~[ENTER] to exit.

usausr1-att#
Connected SSH 89x31

```

Once the message Console session forwarded displays, connect to the forwarded session on your local machine. Navigate to 127.0.0.1 (localhost) on the port specified in step 4 or 5 using your workstation application such as a browser or element manager.

```

upx-mkt-03:~ root# telnet 127.0.0.1 1263
Trying 127.0.0.1...
Connected to localhost.
Escape character is '^]'.

```

```

usausr1-att#sh ip route
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
        D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
        i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
        ia - IS-IS inter area, * - candidate default, U - per-user static route
        o - ODR, P - periodic downloaded static route

```

```

Gateway of last resort is not set


```

```

      76.0.0.0/29 is subnetted, 1 subnets
C       76.250.124.208 is directly connected, Dialer1
usausr1-att#

```

8. Anything typed to the forwarded port will be displayed in the original terminal session.

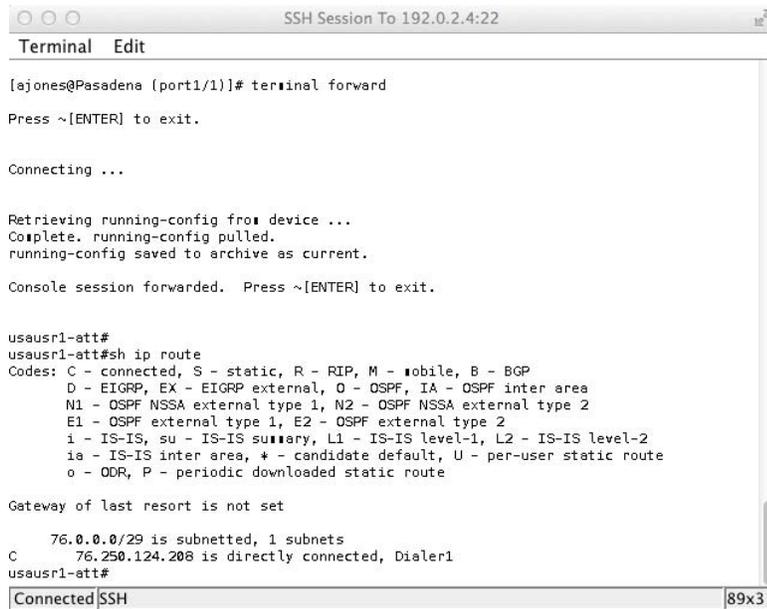

```
SSH Session To 192.0.2.4:22
Terminal Edit

[ajones@Pasadena (port1/1)]# terminal forward
Press ~[ENTER] to exit.

Connecting ...

Retrieving running-config from device ...
Complete. running-config pulled.
running-config saved to archive as current.

Console session forwarded. Press ~[ENTER] to exit.

usausr1-att#
usausr1-att#sh ip route
Codes: C - connected, S - static, R - RIP, M - mobile, B - BGP
        D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
        I - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
        ia - IS-IS inter area, * - candidate default, U - per-user static route
        o - ODR, P - periodic downloaded static route

Gateway of last resort is not set

    76.0.0.0/29 is subnetted, 1 subnets
C       76.250.124.208 is directly connected, Dialer1
usausr1-att#
Connected|SSH |89x31
```

See the *Local Manager Guide* for information on how to forward a serial port using PuTTY.

## SSH Port Forwarding

SSH port forwarding enables access to network services running on the dedicated or management IP addresses of a managed device. Multiple users on multiple workstations can use SSH Port Forwarding concurrently.

Certain privileges are required to edit or view a port's forward configuration:

- `show protocols forward`—Views the forwarding settings.
- `config protocols forward`—Configures the forwarding settings.
- `forward`—Allows the user to open an SSH session with a tunnel to the forwarded port.

The Uplogix device will attempt to forward incoming TCP traffic regardless of whether the destination is configured properly or not. Ensure the managed device is configured to listen on the port specified.

When using the CLI Applet on the Uplogix Control Center, a Java JRE must be installed on the user's workstation.

## Usage

First, connect to the web interface of the Control Center and navigate to the Inventory page. Select an Uplogix device from the Inventory tree to bring up its detail page. Launch the UCC applet by clicking on the **CLI** button.

## Configure IP Addresses

The managed device's management or dedicated IP address must be configured on the Uplogix device. This can be configured using `config init` or `config info`.

```
[admin@xyzcoAus (port1/1)]# config init
--- Enter New Values ---
description: []:
<output removed>
management IP: []: 198.0.2.100
Configure dedicated ethernet port? (y/n) [y]:
Use DHCP? (y/n) [n]:
dedicated device IP []: 169.254.100.2
dedicated port IP []: 169.254.110.3
dedicated netmask: []: 255.255.255.252
speed/duplex: [auto]:
<output removed>
Do you want to commit these changes? (y/n): y
```

## Configure Port Forwarding

Use the `config protocols forward` command to open the port forwarding configuration editor.

```
[admin@xyzcoAus (port1/1)]# config protocols forward
[forward]#
```

Once in the editor, you can use the `?` command to view a list of possible options.

```
[forward]# ?
Forward options are:
[no] management {port}
[no] dedicated {port}
[no] events
show
exit
```

[no] management {port}	Enables forwarding to the management IP address and the port specified. The <b>no</b> prefix will remove the forward.  Example: To enable traffic forwarding to port 80 on the managed device's management IP address, use <code>management 80</code> .
[no] dedicated {port}	Enables forwarding to the dedicated IP address and the port specified. The <b>no</b> prefix will remove the forward.  Example: To enable traffic forwarding to port 80 on the managed device's dedicated IP address, use <code>dedicated 80</code> .
[no] events	Turns on event logging for traffic forwarding. The <b>no</b> prefix will turn off event logging.
Show	Displays the current configuration.
Exit	Exits the configuration editor.

Note that the port specified should match the listening port on the managed device. If the managed device is running an SSH server on its management IP address, forwarding should be configured as management 22.

## Creating a Tunnel

To use the CLI Applet on the Control Center, navigate to a device in the Inventory tree and click on the **CLI** button. Once the applet has loaded, click on **Terminal** in the menu bar and select **Forward**.



In this example, the Uplogix device has already been configured to forward traffic to port 22 at the management IP address for the device on port 1/2. The screen above allows you to select which tunnels to create. On a device with multiple forwards configured, the above list would be longer.

To create a tunnel, check the box next to the port forwards you wish to enable. Then, select a local port to use for forwarding. If random is selected, the applet will select a random port on the workstation. Click **Apply** to save your settings.



If the forward was successful, the drop down box will turn green. If a random port was requested, the port number will be displayed in the green box.



If the drop-down menu turns red, this indicates the local port was unavailable and the tunnel was not created. Choose a different local port that is not currently in use.

## Notes

- Access to forwarded ports is secured by mapping the requested hostname or IP address to a managed device on the device. If forwarding is enabled for two ports that have the same management or dedicated IP addresses, it may be possible for a user to access the forwarded port of a device that they do not have explicit permission for.
- Any tunnels created with an SSH session will be destroyed if the session times out or is exited. To regain access to the tunnel, initiate another SSH session.
- See the Local Manager Guide for information on how to SSH port forward using stand-alone SSH clients such as PuTTY.

## Serial Port Mirroring

Use the Serial Port Mirroring feature to expose the console port of the managed device available on a local workstation TCP port. This is often used to simulate direct serial port connectivity from workstation to device as if the device was serially directly connected. A software TCP-to-COM port redirector may be necessary to complete the connection to the application if it requires COM port addressing. In order to utilize this feature, a user must have the `terminal` privilege and utilize the CLI Applet on the Uplogix Control Center.


Prior to setting up serial port mirroring, initialize the Local Manager port with the appropriate device driver via the `config init` command. Refer to the appropriate device configuration guide for information.

### About Connections


- Only one exposed connection is made per mirrored port. Subsequent connections will fail until the first connection is exited.
- The mirror can be terminated by selecting Terminal, Forward and Mirror from the applet menu and un-checking the forward checkbox.
- Accessing a mirrored port via local application utilizes authentication and authorization previously negotiated.
- Connections to mirrored ports are subject to the same idle timeouts as normal terminal sessions. The idle counter is reset if data is passed over the terminal connection.

### Usage


1. Start the CLI Applet by navigating to a device in the inventory tree and clicking on the **CLI** or **Dial** button. Once the applet loads, authenticate with the device and log in.
2. Click on **Terminal** in the CLI Applet menu bar and select **Forward**.

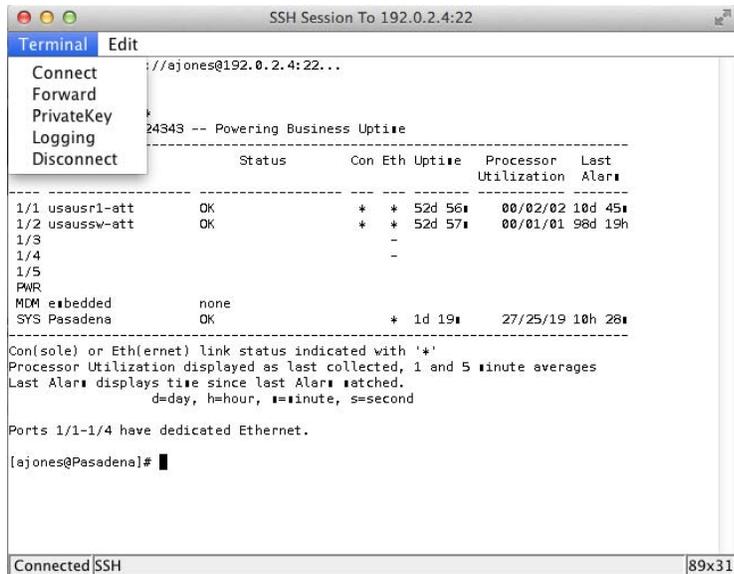

3. Mark the checkbox next to mirror. By default, the applet will forward to a random local port. To specify a port, delete random and enter the desired port.

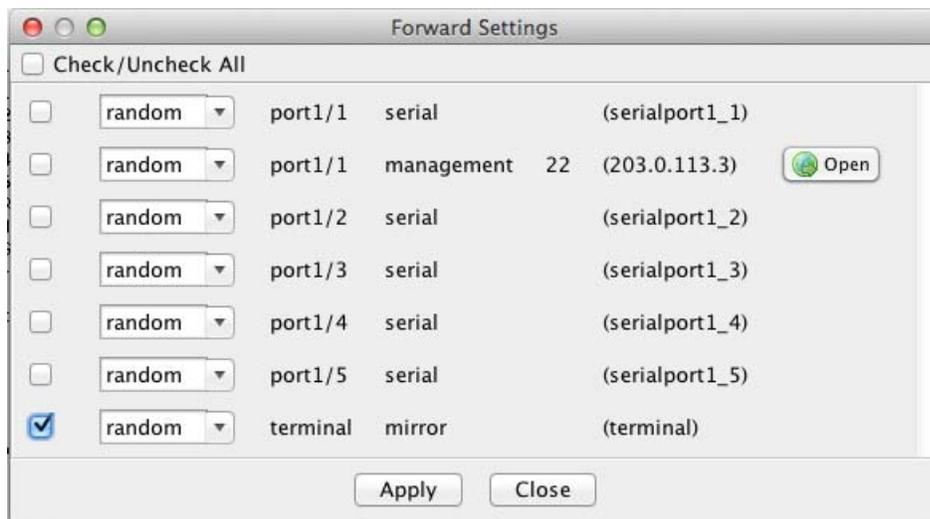

4. Click **Apply** to save your settings. If a random port was assigned, it will be displayed and highlighted in green.

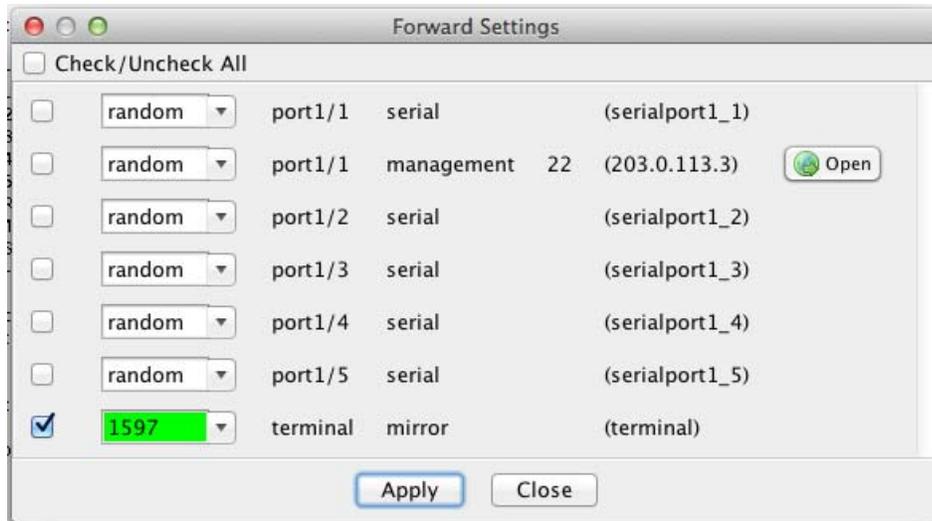

5. Click **Close** to return to your applet session.
6. Anything typed to the mirrored port will be displayed in the original terminal session.

## SMS Outband (PPP on)

In environments where Local Managers contact the Uplogix Control Center as needed via wireless modem, contact can be initiated from the Uplogix Control Center by sending an SMS message instructing a Local Manager to phone home in order to connect to the network out-of-band.

Requirements for using this capability are:

- The Local Manager uses a wireless modem (GPRS/CDMA/Iridium/Inmarsat) modem that supports SMS commands.
- The Local Manager has been configured with a phone number and SMS domain name that the Uplogix Control Center can use to construct a valid SMS email address. These are locally configured with the `config answer` command.
- An SMS modem monitor with automation (i.e., a rule/ruleset) has been configured for the modem to monitor for SMS messages. The canned `smsPppOn` rule can be used in conjunction with this monitor.

To initiate contact:

1. Select the Local Manager from the Inventory and expand the page to show the Local Manager detail.
2. Click **Schedule Task** and from the list of tasks that may be scheduled, select **SMS Message** and click **Next**.

Uplogix Control Center

Dashboard Inventory Alarms Schedule Reports Adm

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Schedule Task

**Pasadena (192.0.2.1)**  
Last Alarm: 16h 54m | Last Event: 50s

CLI Dial **Schedule Task** Edit Reassign Replace Remove

Summary  
Alarms  
Events  
Scheduled Tasks  
Session Logs  
SLV Stats  
Configuration  
Applet  
Archive

**Schedule Task** Next Cancel

Select Task

Task:  Config Import  
 PPP  
 Restart  
 SLV Monitor  
 SMS Message  
 Update

- The SMS Message – Parameters page opens. Click **Next** and the **ppp on** command is sent immediately by SMS message. It may take a few minutes before the Local Manager receives the SMS message and activates PPP to phone home.

Uplogix Control Center

Dashboard Inventory Alarms Schedule Reports Adm

Inventory > XYZCo\_TX > Austin > Building 1 > Pasadena > Schedule Task - Parameters

**Pasadena (192.0.2.1)**  
Last Alarm: 16h 57m | Last Event: 3m 10s

CLI Dial **Schedule Task** Edit Reassign Replace Remove

Summary  
Alarms  
Events  
Scheduled Tasks  
Session Logs  
SLV Stats

**Schedule Task - Parameters** Next Cancel

**SMS Message - Parameters**  
Command: PPP On

## CLI Applet Failover to Managed Device

The Uplogix Control Center provides users with the ability to open SSH connections to Local Managers that pass through to the console port of a managed device via the CLI Applet. Under normal circumstances, the CLI Applet establishes an SSH connection to the Local Manager. In the unusual event that the applet is unable to establish an SSH connection to the Local Manager, the CLI Applet Failover feature allows configuration of the CLI Applet so that it fails over to establishing an SSH connection directly to the managed device.



Many of the valuable Uplogix features such as session logs, events, and configuration rollback become unavailable when the CLI Applet fails over to connecting directly to the managed device, as the Local Manager is out of the connection loop in this scenario.

### Device Properties

This feature is activated by adding one or both of the following device properties to the Local Manager port for the managed device.

<code>_applet_failover_ssh_fingerprint</code>	<p>Defines the SSH fingerprint for the managed device.</p> <p>The CLI applet will only establish a failover SSH connection to the managed device if the fingerprint it receives from the managed device matches the fingerprint value stored in this device property.</p> <p>This property can be configured through the Local Manager CLI and via the Control Center.</p>
<code>_applet_failover_ssh_ip</code>	<p>Defines the IP address that the CLI applet should attempt to establish an SSH session to in the case where the applet fails to connect to the Local Manager.</p> <p>This property is only required if a management IP address is <b>not</b> defined for the managed device within the Local Manager or Control Center.</p> <p>If a management IP address exists for the managed device and this property is not defined, then the CLI applet will attempt the failover SSH connection to the defined management IP address.</p> <p>If this property IS specified/defined, then the CLI applet failover feature will use the IP address contained in this property rather than the management IP address.</p> <p>This property can be configured through the Local Manager CLI and via the Control Center.</p>


The following example walks through the process of configuring CLI Applet Failover to a Cisco 3925 router connected to port 1/2 of the Local Manager.

### Determine the SSH Fingerprint for the Managed Device

Part of enabling CLI applet failover to the managed device involves configuring the Local Manager with the SSH fingerprint of the managed device. Initiate an SSH session to the managed device via a terminal session or application such as PuTTY. The managed device fingerprint will display with a question asking whether to continue connecting. This assumes the PC/workstation does not have the managed device's RSA key in its known host file. If the fingerprint is not presented with a question asking whether to continue, then edit the SSH known host file on your PC/workstation to remove the entry for the managed device. Here is an example using a Linux, Unix or Mac terminal session:

```
/Users/admin > ssh admin@192.0.2.100
The authenticity of host '192.0.2.100 (192.0.2.100)' can't be established.
RSA key fingerprint is b7:b7:9b:ce:bc:44:82:36:ca:92:71:65:fe:fd:4f:43.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.0.2.100' (RSA) to the list of known hosts.
```

An example of the fingerprint in a Putty popup window is shown below:

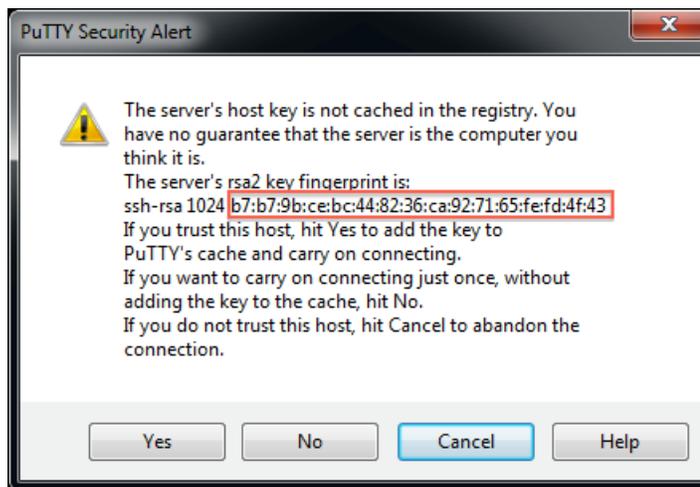

Copy the SSH fingerprint. It is a required device property that will be set up in the next step.

### Configure Device Properties via the Local Manager CLI

Log into the Local Manager and navigate to the port that is to be configured for CLI applet failover and enter the device property editor by issuing the following commands:

```
[admin@A400100052]# port 1/2
LRT-3925 cisco CISCO3925-CHASSIS IOS 15.1(4)M
3925
[admin@A400100052 (port1/2)]# config properties
[config properties]#
```

Now configure the `_applet_failover_ssh_fingerprint` device property for the managed device SSH fingerprint (determined in the previous step) with the following command (where there is a space between the property and the fingerprint value):

```
[config properties]# _applet_failover_ssh_fingerprint  
b7:b7:9b:ce:bc:44:82:36:ca:92:71:65:fe:fd:4f:43  
[config properties]# show  
_applet_failover_ssh_fingerprint: b7:b7:9b:ce:bc:44:82:36:ca:92:71:65:fe:fd:4f:43  
[config properties]#
```


If there is no management IP address for the managed device configured in the Local Manager, or if the failover IP address that should be used is different from the configured management IP address, then the `_applet_failover_ssh_ip` device property should be configured to specify the failover IP address for the managed device. The Uplogix `show info` CLI command can be used to determine the management IP address for a given device. The following example shows the managed device to have a management IP address of `192.0.2.100`:

```
[admin@A400100052 (port1/2)]# show info  
Hostname: LRT-3925  
Description: 3925  
Make: cisco  
Model: CISC03925-CHASSIS  
OS: IOS  
OS Version: 15.1(4)M  
Management IP: 192.0.2.100  
Current CPU Utilization: 0%  
CPU Utilization (1 minute average): 1%  
CPU Utilization (5 minute average): 1%  
Total Memory: 762273884 bytes  
Used Memory: 52811412 bytes  
Free Memory: 709462472 bytes
```

To demonstrate how to set this device property, suppose that the CLI applet should failover to IP address `192.0.2.200` if a SSH session cannot be established to the Local Manager. Issue the following commands to enter the device property configuration editor on the managed device port and set the applet failover IP address:

```
[admin@A400100052 (port1/2)]# config properties  
[config properties]# _applet_failover_ssh_ip 192.0.2.200  
[config properties]# show  
_applet_failover_ssh_ip: 192.0.2.200  
_applet_failover_ssh_fingerprint: b7:b7:9b:ce:bc:44:82:36:ca:92:71:65:fe:fd:4f:43  
[config properties]# exit  
  
[admin@A400100052 (port1/2)]#
```

Alternatively, device properties can be set via the UCC. Log into the UCC, navigate to the Local Manager in the Inventory, click on the port for the managed device in the Device section of the Local Manager summary page, and click the Properties link in the left navigation bar. The following page appears so device properties can be added or deleted:

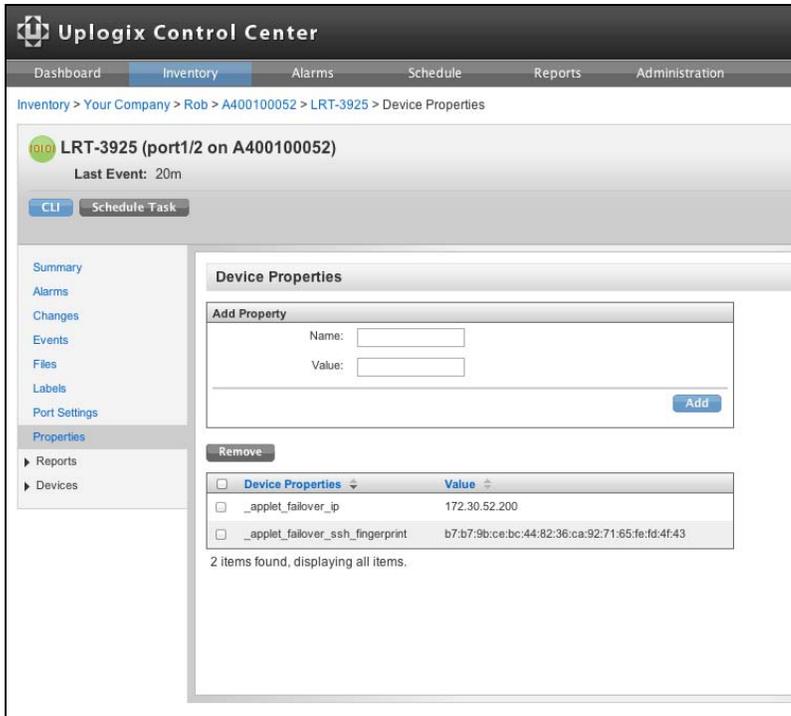

## Usage

Once device properties are configured for a managed device as specified above, the CLI applet failover feature is configured and active. To use the CLI applet to access the console port of a managed device, connect to the web interface of the Control Center and navigate to the Inventory page. Select an Uplogix device from the Inventory tree to bring up its detail page. Launch the UCC applet by clicking on the **CLI** button. Should the CLI applet fail to establish an SSH session to the Local Manager, the applet will then attempt to establish an SSH session directly to the managed device.

## CLI Applet SSH Key Authentication

The Uplogix Control Center provides the capability to open SSH connections to Local Managers and to managed devices via the CLI Applet using SSH keys in lieu of prompting for a username and password.



Providing public keys to authenticate overrides TACACS/RADIUS authentication for that user.

## Arguments

Authorized Keys	The SSH public key stored in the user profile in the UCC. This key is synchronized to Local Managers with user information.
SSH Private Key File	The path to the SSH private key file on the user's workstation. This path is stored in a cookie in the user's browser and is set via the CLI Applet Terminal->PrivateKey function.

This example walks through the process of configuring CLI applet SSH key authentication for user Ajones.


## Generate SSH Key Pair on Client Workstation (If one has not been previously created)

If the client workstation (i.e., the workstation that will launch the CLI applet to connect to the Local Manager or managed devices) is running Linux, Unix, or Mac OSX (or is running Windows with a Linux-like environment application like Cygwin), issue the following command in a terminal window to generate the key pair: `ssh-keygen -t rsa`.

```
/Users/admin > ssh-keygen -t rsa
Generating public/private rsa key pair.
Enter file in which to save the key (/Users/ajones/.ssh/id_rsa):
Enter passphrase (empty for no passphrase):
Enter same passphrase again:
Your identification has been saved in /Users/ajones/.ssh/id_rsa.
Your public key has been saved in /Users/ajones/.ssh/id_rsa.pub.
The key fingerprint is:
53:6d:4d:bd:5e:45:15:e1:16:45:ad:67:b9:1b:ed:d9 ajones
```

If the Local Manager is running in FIPS mode, then a “rsa” key must be generated with at least 2048 bits – here is the command to generate this key pair: `ssh-keygen -t rsa -b 2048`.

If the client workstation is running a Windows operating system, the free [PuTTYgen tool](#) can be downloaded and used to generate SSH key pairs. An example of this PuTTYgen tool is shown below:

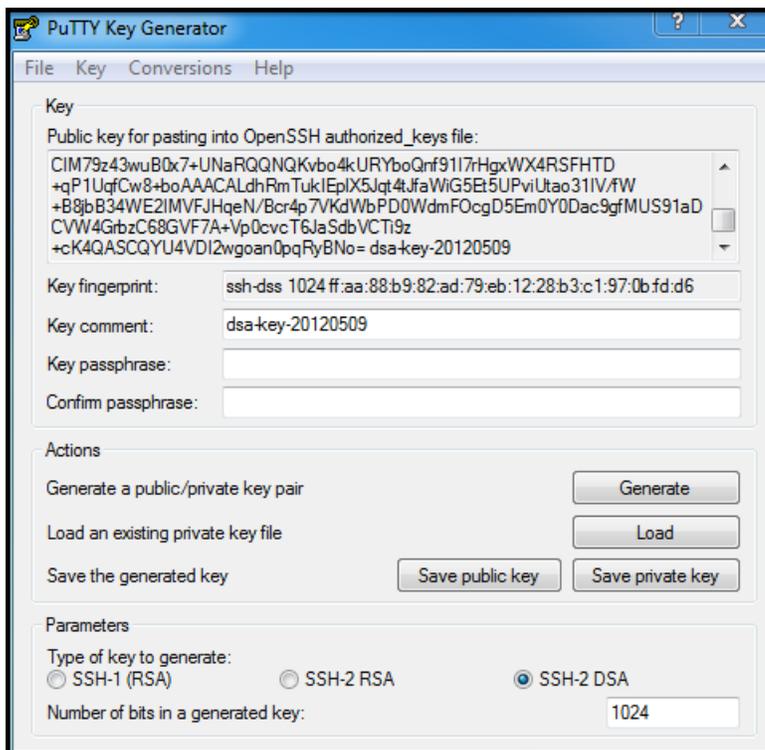

After installing and running the puTTYgen tool, perform the following:

1. In the Parameters section, choose **SSH-2 DSA**, leave the default number of bits set to **1024** and click the **Generate** button for the standard, non-FIPS Ulogix Local Management solution. In the case where the UCC is running in FIPS mode, choose **SSH-2 RSA**, set the number of bits in the generated key to **2048** and then click **Generate**.
2. Move the mouse in the small screen as instructed by the tool during key generation in order to add randomness to the key pair being generated.
3. Enter a key comment to identify the key pair. This is useful when using several SSH key pairs.
4. Do not enter a **Key passphrase** – leave it blank.
5. Click **Save private key** to save your private key. Give the key a filename and confirm that it should have a blank passphrase. Also, note the filename and path, as the location for this private key will be configured in a subsequent step.
6. Click **Save public key** to save the public key and give it a filename.

### Add Public SSH key to User in Ulogix Control Center

The contents of the SSH public key should be copied and provided to an Ulogix Control Center admin if the user does not have privileges to edit their user profile. Next, the user or Ulogix Control Center admin should login to the web interface, navigate to the Administration-Users page and then click on the user to be provisioned with the SSH public key. In the example below, the SSH public key for user ajones is pasted into the Authorized Keys text box. Be sure to click **Save** after pasting the SSH public key.


The screenshot shows the Ulogix Control Center Administration interface. The top navigation bar includes Dashboard, Inventory, Alarms, Schedule, Reports, and Administration. The breadcrumb trail is Administration > Users > ajones. The main content area is titled 'Edit User: ajones' and shows the user's profile information, including Name, Password, Confirm, Description, Disabled, Time Zone, Start Date, and Expiration Date. The 'Authorized Keys' section is expanded, and a long SSH public key is pasted into the text box. The key is: ssh-rsa| AAAAB3NzaC1yc2EAAAABIwAAQEAstZwFppg1AhsWR5CnGZluTaZy mu2Q4valsQ11AOIR72wmS2zNqDL6qPGScq02/S7MvGSR0C6kkzK0n FYW/awH/VWaldgudpl+QshkNLk3xCvSf3yHBZMgsh+Xb+zaJi8X+YTrk S63U3eBh3bdVOySW3LhW/Q8RmWE2nsVINMAKXpUI0jFbqVzEBcCg 2iaantQc1Sk3TEvikK34eIsNKL IW22IH2N/SET1GM5LIHSD2naeHOW9eh. Below the text box, there is a 'Show More Information' link and a 'Save' button.

## Set SSH Private Key Location in Browser


Log into the Uplogix Control Center, navigate to a Local Manager, and click on a CLI applet button.

Upon clicking CLI and launching the CLI applet, you may be prompted with a couple windows asking for confirmation that you trust the Uplogix Control Center certificate and to allow the CLI applet access to your workstation – you must trust the certificate and allow the applet access to your workstation in order to continue.

Once the applet finishes initializing, click the Terminal menu selection at the top of the screen and then click PrivateKey in the submenu as shown below.

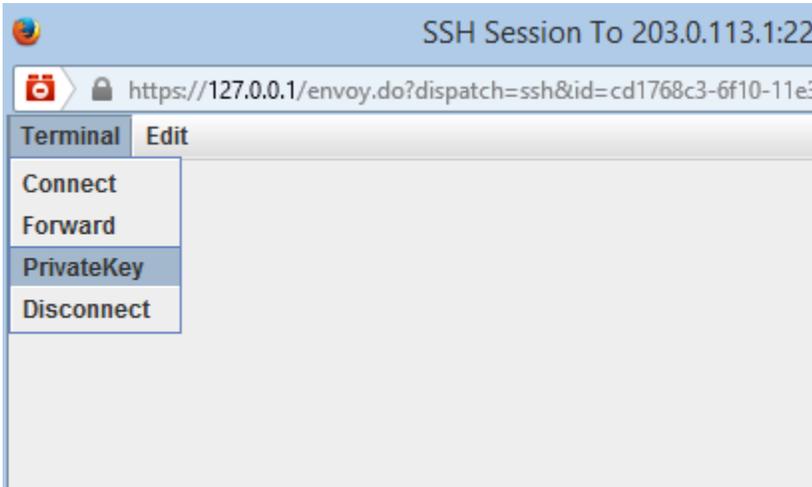

Next, click **Browse** on the popup menu, browse to and select the private key file, then click **Open** to set the path as shown below. Finally, click **Save** to save the path to the private key in an Uplogix cookie in the browser. Close the applet window.

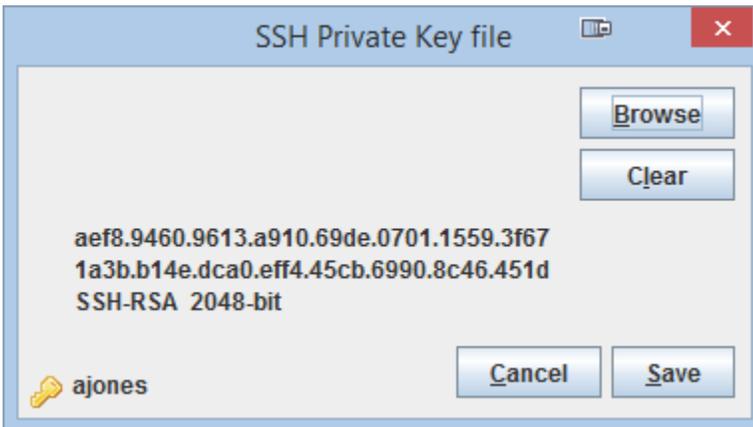

This completes configuration for user ajones – ajone's public key is stored in the Uplogix Control Center and the path to the private key is stored as a cookie in ajone's browser.

## Usage

Once the private key has been configured as specified above, the CLI applet failover feature is configured and active. To use the CLI applet to access the console port of a managed device, connect to the web interface of the Control Center and navigate to the Inventory page. Select an Uplogix device from the Inventory tree to bring up its detail page. Launch the UCC applet by clicking on the **CLI** button. The applet should establish and authenticate the SSH session without the user having to enter a password.

**Note:** Alternatively, this failover may be created by configuring a public key in the user profile and a private key in the CLI Applet authenticates subsequent SSH sessions from the user workstation to Local Managers rather than requiring the user to provide a password in the applet window at each login.

## Getting technical support

The Uplogix technical support web site allows you to open and review support requests, browse the knowledge base and download software updates. You must have a user account to view this site.

## Requesting an account

To create an account, send an email to [support@uplogix.com](mailto:support@uplogix.com) with the subject line "create account". Include this information:

- organization name
- account user's email address
- user's general contact information

## Requesting support

Uplogix provides 24x7x365 support. If you need to contact Uplogix customer support, please provide this information:

- Product model
- Serial number and software version (use the `show version` command from the command line or use the arrow keys on the front panel to scroll through the information on the display)

Phone: 512-857-7070

Fax: 512-857-7002

URL: [support.uplogix.com](http://support.uplogix.com)

## Providing comments about this guide

Did you find the information you needed?

Was it accurate?

Did it help you?

Please contact our publications staff at [support@uplogix.com](mailto:support@uplogix.com) to notify us of any issues with this guide's accuracy, completeness, or clarity.

We want you to be successful using our products. If you find a problem with this material, we will do our best to fix it.



# Index

## A

- AAA (authentication, authorization, accounting)
  - settings
    - accounting ..... 77
    - authentication ..... 77
    - authorization ..... 95
    - for a single system ..... 75
    - for an inventory node ..... 75
    - global or Uplogix Control Center only ..... 75
  - accounting settings ..... 77
  - accounts
    - configuring to receive email ..... 107
    - created on systems ..... 82
    - deleting ..... 88
    - group ..... 85
    - importing ..... 104
    - subscribing to reports and alerts ..... 107
    - user, creating and editing ..... 83
    - user, disabling ..... 87
  - actions in rules ..... 65
  - adding
    - inventory groups ..... 24
    - systems ..... 27
    - task filters ..... 52
  - adjusting width of inventory display ..... 20
  - admin role ..... 98
  - air flow requirements ..... 4
  - alarms
    - definition ..... 106, 127
    - subscribing to ..... 107
    - using rules to define ..... 65
    - viewing ..... 112
  - alerts, subscribing to ..... 107
  - audit settings ..... 83, 85, 107
  - authentication
    - admin account ..... 77
    - administrator account ..... 74
    - external ..... 77
    - for a single system ..... 75
    - for an inventory node ..... 75
    - global or Uplogix Control Center only ..... 75
    - local ..... 77
    - servers, specifying ..... 77
    - setting password requirements ..... 80
    - TACACS or RADIUS ..... 77
  - authorization keys ..... 83
  - authorization using TACACS ACL ..... 77, 95

## B

- banner, login ..... 14

- basic configuration ..... 6
- browsers, recommended ..... 9
- button
  - delete including children ..... 26
  - force updates on children ..... 45, 65, 92
  - print ..... 12
  - unavailable ..... 88

## C

- caching passwords ..... 77
- case sensitivity of logins ..... 9, 11
- changing emsadmin password ..... 7, 8
- child group (definition) ..... 19
- collapsing information ..... 38
- color codes in inventory display ..... 20
- command
  - clear counters ..... 57
  - config answer ..... 39, 137
  - config authentication ..... 57, 77
  - config group ..... 82, 85, 95
  - config group no [username] ..... 88
  - config import ..... 57
  - config init (modem) ..... 39
  - config ppp ..... 39, 43, 57
  - config pptp ..... 43
  - config role ..... 92, 95
  - config rule ..... 65
  - config schedule ..... 38, 51, 52, 57
  - config settings ..... 45
  - config system archive ..... 39, 43
  - config system authentication .. 74, 77, 80, 95
  - config system banner ..... 39, 43
  - config system email ..... 39, 43
  - config system ip ..... 39
  - config system ipt ..... 39, 43
  - config system keypad ..... 39, 43
  - config system management .... 27, 33, 39, 43
  - config system ntp ..... 39, 43
  - config system protocols ..... 39, 43
  - config system pulse ..... 39
  - config system serial ..... 39
  - config system snmp ..... 39
  - config system syslog-options ..... 39, 43, 119
  - config system timeout ..... 39, 43
  - config user ..... 82, 83, 90
  - config user no [username] ..... 88
  - config vpn ..... 39
  - off ..... 57
  - on ..... 57
  - power ..... 57

push config .....	57	system chassis .....	61
push os .....	57	system dashboard .....	38
reboot .....	57	device labels .....	48
show alarms .....	112	device syslog .....	119
show dashboard .....	38	devices, managing .....	47
show session .....	121	disabling user accounts .....	87
show sessions .....	121	display	
show status .....	38	license support .....	13
show tech .....	57	software version and build .....	13
show version .....	147	DNS server, configuring .....	6
compatibility, system/management server		DST (daylight saving time) .....	15
software version .....	1, 18	<b>E</b>	
concurrent sessions, limiting .....	77	email address	
conditions in rules .....	65	to contact Uplogix technical support .....	147
connections		to receive alerts .....	83, 85, 107
Ethernet .....	5	user, deleting .....	83
management console .....	5	emsadmin user .....	6
power .....	5	Envoy privileges .....	90, 92
contacting a remote appliance from Uplogix		events	
Control Center .....	137	definition .....	106, 127
conventions, typographical .....	1	using rules to define .....	65
creating		expanding chassis and port information .....	38
group accounts .....	85	expired passwords, resetting .....	82
inventory group .....	24	external authentication .....	77, 95
placeholders for systems .....	27	<b>F</b>	
roles .....	92	Failover .....	139, 140
rule sets .....	68	features of inventory group detail page .....	21
rules .....	65	files	
task filters .....	52	permission .....	89, 90
user accounts .....	83	system software upgrade .....	62
<b>D</b>		filter manager (scheduled tasks) .....	52
daylight saving time (DST) .....	15	filters, task .....	52
default console settings .....	6	force updates on children (button) ...	45, 65, 92
default login		<b>G</b>	
Uplogix Control Center CLI .....	6	gateway, Uplogix Control Center, configuring.	6
Uplogix web interface .....	9	group accounts	
default port settings .....	45	creating .....	85
default settings, system .....	43	deleting .....	88
definitions		importing .....	104
alarm .....	106, 127	naming .....	11
child group .....	19	subscribing to reports .....	107
event .....	106, 127	group, inventory	
inventory group .....	19	about .....	19
log .....	106, 127	adding .....	24
monitor .....	65	adding systems .....	27
permission .....	88	configuring systems .....	43
privilege .....	88	deleting .....	26
report .....	106, 127	detail page features .....	21
role .....	88	editing name and description .....	23
rule .....	65	naming requirements .....	24
rule set .....	65	reassigning (moving) .....	25
strong password .....	80	root, renaming .....	23
delete including children (button) .....	26	Unassigned .....	22
deleting		viewing .....	20
accounts .....	85, 88	grouping .....	19
inventory groups .....	26	groups of rules (rule sets) .....	68
systems .....	33	<b>I</b>	
detail view		icons in inventory display .....	20
port .....	47, 119	importing	

group accounts .....	104
privilege lists .....	104
user accounts .....	104
inactivity timeout .....	15
inheritance .....	45
initiating contact with a remote appliance..	137
inventory	
icons and color codes.....	20
privileges.....	88, 90, 92, 95, 98
structure.....	19
inventory group	
adding.....	24
adding systems.....	27
configuring systems.....	43
definition .....	19
deleting .....	26
detail page features.....	21
editing name and description .....	23
naming requirements.....	24
reassigning (moving).....	25
root, renaming .....	23
Unassigned .....	22
viewing.....	20
IP address, Uplogix Control Center, configuring	
.....	6
<b>L</b>	
labels .....	48
license support .....	13
licenses .....	34, 35
limiting concurrent sessions .....	77
local accounts .....	82
local authentication .....	77
login banner.....	14
login, default	
Uplogix Control Center CLI .....	6
Uplogix web interface .....	9
logs	
definition .....	106, 127
device syslog, viewing .....	119
session, viewing.....	121
<b>M</b>	
managing devices .....	45, 47
managing inventory groups .....	43
modem, Iridium.....	137
monitors	
creating and scheduling .....	69
definition .....	65
mounting.....	5
moving a system .....	31
moving an inventory group .....	25
<b>N</b>	
naming requirements	
accounts, roles, and rules.....	11
inventory groups.....	24
netmask, Uplogix Control Center, configuring.	6
NTP server, configuring.....	6
number of concurrent sessions, limiting .....	77
<b>O</b>	
organizing appliances by group .....	19

<b>P</b>	
packing list .....	5
parts of the web interface .....	10
passwords	
administrator, default.....	9
caching .....	77
emsadmin, changing .....	7, 8
expired, resetting on system CLI login .....	82
strong.....	80
user, setting .....	83
permission (defined) .....	88
placeholder for system .....	27
port detail .....	47, 119
port settings, default.....	45
port, TCP	
RADIUS.....	77
TACACS.....	77
ports, managing.....	45, 47
power	
connecting.....	5
requirements .....	4
precautions, safety .....	2
print button .....	12
privileges	
assigning.....	89, 90
by Envoy resource .....	90
by label .....	48
creating and editing .....	92
definition.....	88
deleting.....	90, 92
importing .....	104
inventory.....	98
managing with TACACS ACL .....	95
required for configuring systems .....	39
server .....	89
viewing .....	92
<b>Q</b>	
quick search	
inventory.....	20
username .....	83
<b>R</b>	
reassigning	
inventory groups .....	25
system.....	31
removing	
accounts.....	85, 88
inventory groups .....	26
systems .....	33
renaming the inventory root group.....	23
replacing a system.....	125, 126
reports	
by label.....	48
definition .....	106, 127
subscribing .....	107
requirements	
air flow .....	4
naming accounts, roles, and rules .....	11
naming inventory groups .....	24
power .....	4

temperature	4	reassigning (moving)	31
roles		replacing	125, 126
admin	98	scheduling tasks	61
assigning	89, 90	searching by hostname	20
by Envoy resource	90	upgrading software	62
by label	48	viewing summary	38
defined	88	system, configuring	39, 43
naming requirements	11	system/management server software version compatibility	1, 18
root inventory group, renaming	23	<b>T</b>	
rule sets		TACACS	
creating and editing	68	accounting settings	77
definition	65	ACL	95
rules		servers, specifying	77
creating and editing	65	task filters	52
definition	65	tasks, scheduling	51, 69
in monitors	69	TCP port	
naming requirements	11	RADIUS	77
<b>S</b>		TACACS	77
safety precautions	2	technical support email address	147
satellite modem	137	temperature requirements	4
scheduling		terminal clients (list)	6
monitors	69	timeout for inactive sessions	15
software upgrade, system	62	Timezone (setting)	15
tasks	51, 52, 61	typographical conventions	1
screen, login	14	<b>U</b>	
searching		Unassigned inventory group	22
inventory	20	unavailable features	88
list of users	83	upgrading system software	62
secure shell clients supported (list)	7, 8	use DST (setting)	15
serial settings, management console defaults	6	username	
server privileges	88, 89, 92, 98	case sensitivity	9, 11
service clearance	4	naming requirements	11
service level verification (SLV) license	34, 35	users	
session timeout	15	auditing	83, 107
sessions	121	creating and editing	83
site requirements	4	deleting	88
SLV (service level verification) license	34, 35	disabling accounts	87
SMS message	61, 137	importing	104
software version compatibility,		subscribing to reports and alerts	107
system/management server	1, 18	<b>V</b>	
software version display	13	ventilation requirements	4
software, system, upgrading	62	version compatibility	18
space character	11	version display	13
SSH clients supported (list)	7, 8	viewing	
SSH Key Authentication	142	alarms	112
strong passwords	80	device syslog	119
structure of inventory	19	inventory groups	20
subnet mask, Uplogix Control Center,		license support	13
configuring	6	sessions	121
subscribing to reports and alerts	107	software version	13
superuser	98	<b>W</b>	
suspending user accounts	87	web browsers, recommended	9
syslog, viewing	119	web interface, page structure and navigation	10
system		width control, inventory display	20
adding	27	window, login	14
adding more than 10	34, 35	<b>Y</b>	
deleting	33	Your Company inventory group, renaming	23
port detail	47, 119		